

150CC DIAMO® TRACER

PARTS CATALOG

First Edition October 2005



The information and diagrams included in this catalog are the exclusive property of LS MotorSports, LLC and may not be reproduced in any media without the express written consent of LS MotorSports, LLC. For more information contact:

LS MotorSports, LLC
12505 Reed Rd, Suite 145
Sugar Land, TX 77478
281-277-6140




Copyright © 2004-2005 LS MotorSports, LLC. Reproduction without written permission is completely forbidden.

CONTENTS:	PAGE	DIAGRAM	TITLE	PAGE	DIAGRAM	TITLE
	4	0	DOCUMENTS	22	16	FUEL TANK
	5	1	HEADLIGHT	23	17	BATTERY
	6	2	METER	24	18	AIR CLEANER
	7	3	SWITCHES	25	19	EXHAUST MUFFLER
	8	3A	SWITCHES - '04 DRUM BRAKE	26	19A	EXHAUST - '04
	9	4	FRONT BRAKE MASTER CYLINDER	27	20	STAND
	10	5	STEERING HANDLE	28	21	REAR CUSHION
	11	6	FRONT COVER	29	22	REAR FENDER
	12	7	FRONT LUGGAGE BOX	30	23	WINKERS
	13	8	FLOOR PANEL	31	24	TAIL LIGHT
	14	9	LUGGAGE CASE AND REAR COVER	32	25	WIRE HARNESS
	15	10	STEERING STEM	33	26	FRAME BODY
	16	11	FRONT BRAKE CALIPER	34	27	RR DISC BRAKE ASSY
	17	12	FRONT WHEEL	35	28	RR WHEEL CONNECTING PLATE
	18	13	CARRIER PLATE	36	29	FRONT FENDER
	19	14	REAR WHEEL	37	29A	FRONT FENDER - EARLY '05
	20	14A	REAR WHEEL - '04 RR DRUM BRAKE	38	30	REAR CARRIER
	21	15	SEAT CUSHION			

0. DOCUMENTS


REF. No.	PART NUMBER	CODE	DESCRIPTION	Q'TY
1	05-022-0001		Owners Manual	1
2	05-022-0002		Parts Manual	1
3	05-022-0003		Service Manual (not available)	1
4	05-022-0004		Alarm Manual	1

1. HEADLIGHT

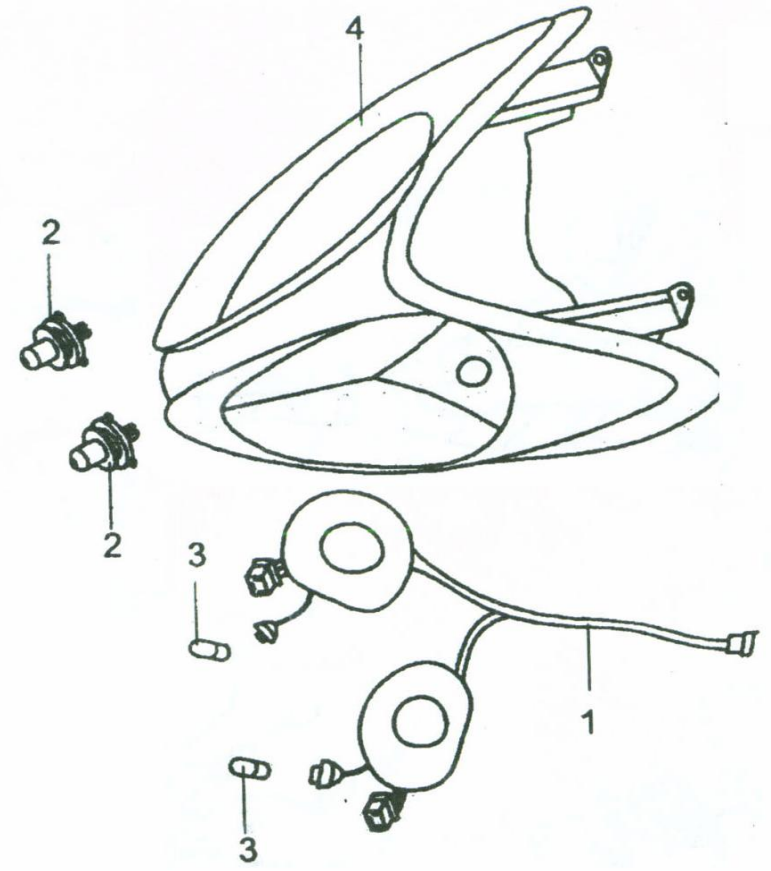


REF. No.	PART NUMBER	CODE	DESCRIPTION	Q'TY
1	05-022-0101	A2A001A5G5H0	Headlight Wiring Harness	1
2	05-022-0102	B15766A12018	Headlight bulb 12V 18W	2
3	05-022-0103	B15766A12003	Parking Light bulb 12V 3W	2
4	05-022-0104	A2A002A4G5H0	Headlight Assy	1

2. METER

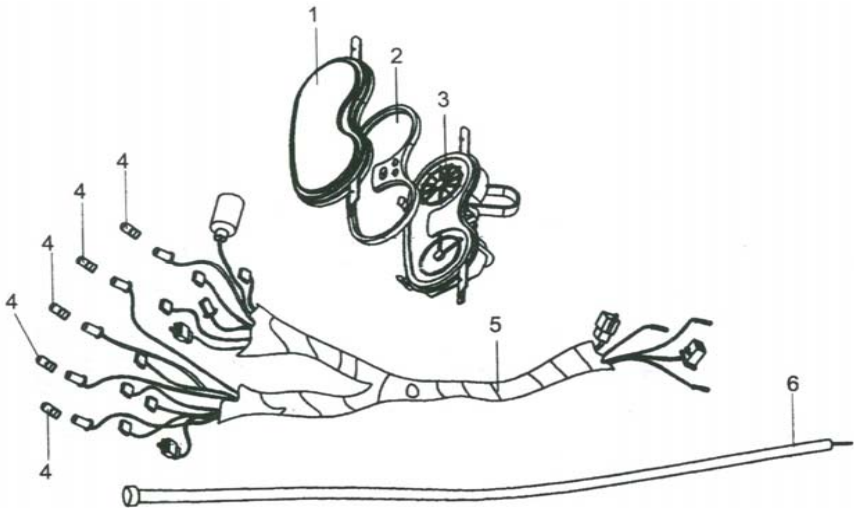


REF. No.	PART NUMBER	CODE	DESCRIPTION	Q'TY
1	05-022-0201	A1P001B4G5H0	Lens	1
2	05-022-0202	A1P002B4G5H0	Plate comp reflegting	1
3	05-022-0203	A1P005B4G5H0	Case assy	1
3A	05-022-0203A		Speedometer Assy	1
4	05-022-0204	B15766A12003	Bulb	5
5	05-022-0205	A3A020B6G5H0	Sub-wire harness	1
6	05-022-0206	A1A002A7G5H0	Speedometer cable	1

3. SWITCHES

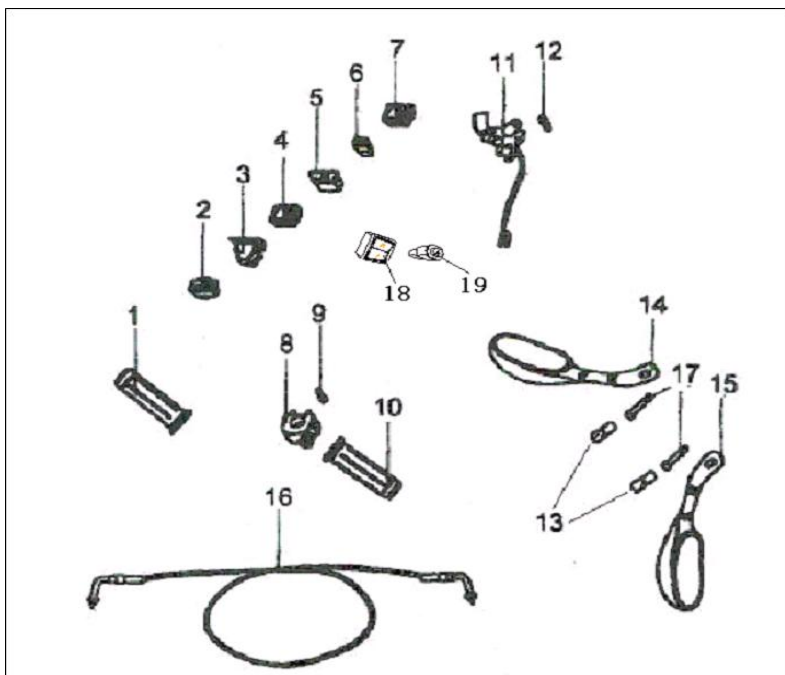


REF. No.	PART NUMBER	CODE	DESCRIPTION	Q'TY
1	05-022-0301	G6A003B4G5H0	Grip, L	1
1A	05-022-0301A		End Cap, Grip Chrome	2
2	05-022-0302	A3A041B1G5H0	Switch, Starting	1
3	05-022-0303	A3A043B1G5H0	Switch, High - Low Beam	1
4	05-022-0304	A3A045B1G5H0	Switch, Horn	1
5	05-022-0305	A3A044B1G5H0	Switch, Turn Signal	1
6	05-022-0306	A3A046B1G5H0	Sight Glass, FR Brake Master Cylinder	1
7	05-022-0307	A3A040B1G5H0	Switch, Lighting	1
8	05-022-0308	G6A014B2G5H0	Throttle holder	1
9	05-022-0309	B70VVVV06020	Screw M6×20	1
10	05-022-0310	G6A002B4G5H0	Grip, Throttle R	1
11	05-022-0311	G6A015B2G5H0	Bracket Handle	1
12	05-022-0312	B70VVVV05020	Screw M5×20	1
13	05-022-0313	H3P002C1G5H0	Decorate Cover, Mirror Bolt	1
14	05-022-0314	H3A002A5G5H0	Mirror, R	1
15	05-022-0315	H3A001A5G5H0	Mirror, L	1
16	05-022-0316	G8A003A8G5H0	Throttle Cable	1
17	05-022-0317	H3P001C2G5H0	Bolt , Mirror	2
18	05-022-0318	A3A047B1G5H0	Switch, Engine Kill	1
19	05-022-0319	A3A048B1G5H0	Switch, Hazards	2

3A. SWITCHES - '04 REAR DRUM BRAKE

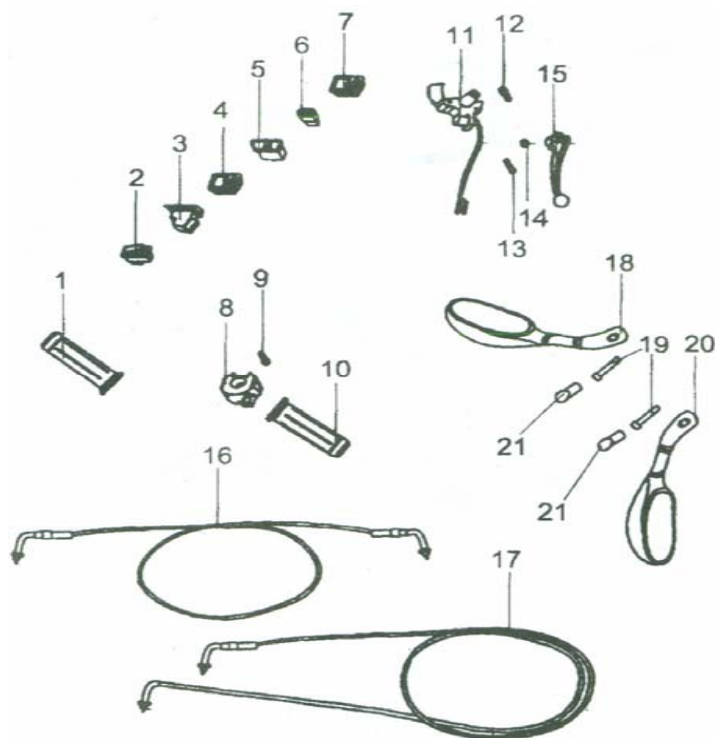


REF. No.	PART NUMBER	CODE	DESCRIPTION	Q'TY
1	05-022-0301	G6A003B4G5H0	Grip, L	1
1A	05-022-0301A		End Cap, Grip Chrome	2
2	05-022-0302	A3A041B1G5H0	Switch, Starting	1
3	05-022-0303	A3A043B1G5H0	Switch, High - Low Beam	1
4	05-022-0304	A3A045B1G5H0	Switch, Horn	1
5	05-022-0305	A3A044B1G5H0	Switch, Turn Signal	1
6	05-022-0306	A3A046B1G5H0	Sight Glass, FR Brake Master Cylinder	1
7	05-022-0307	A3A040B1G5H0	Switch, Lighting	1
8	05-022-0308	G6A014B2G5H0	Throttle holder	1
9	05-022-0309	B70VVVV06020	Screw M6×20	1
10	05-022-0310	G6A002B4G5H0	Grip, Throttle R	1
11	05-022-0311	G6A015B2G5H0	Bracket Handle	1
12	05-022-0312	B70VVVV05020	Screw M5×20	1
13	04-022-0313	G6P002A2G5H0	Screw Socket	1
14	04-022-0314	B6170VV05000	Nut M5	1
15	04-022-0315	G6P002B4G5H0	Handle, RR Brake	1
16	05-022-0316	G8A003A8G5H0	Throttle Cable	1
17	04-022-0317	G8A001A8G5H0	Cable, RR Drum Brake	1
18	05-022-0314	H3A002A5G5H0	Mirror, R	1
19	05-022-0317	H3P001C2G5H0	Bolt , Mirror	2
20	05-022-0315	H3A001A5G5H0	Mirror, L	1
21	05-022-0313	H3P002C1G5H0	Decorate Cover, Mirror Bolt	1

4. FRONT BRAKE MASTER CYLINDER

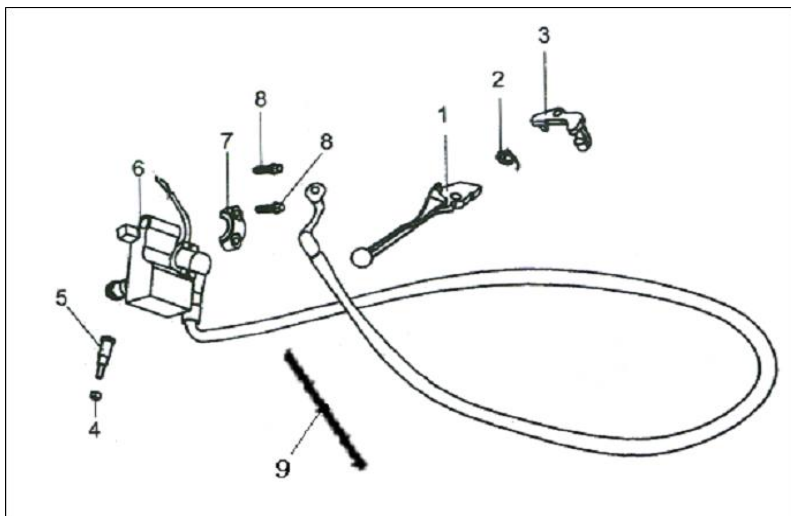


REF. No.	PART NUMBER	CODE	DESCRIPTION	Q'TY
1	05-022-0401	G7P002A4G5H0	Lever, Brake FR	1
2	05-022-0402	G7P008B1G5H0	Returning spring	1
3	05-022-0403	G7P010B2G5H0	Connecting socket	1
4	05-022-0404	B6187VV05000	Nut M5	1
5	05-022-0405	G7P003A2G5H0	Bolt, Brake Lever	1
6	05-022-0406	G7A001A3G5H0	Master Cylinder, Brake FR	1
7	05-022-0407	G7P004B2G5H0	Clamp, Master Cylinder	1
8	05-022-0408	B5787VV06022	Bolt M6×22	2
9	05-022-0409	G7P011B3G5H0	Spring, master cylinder of oil pipe	2

5. STEERING HANDLE

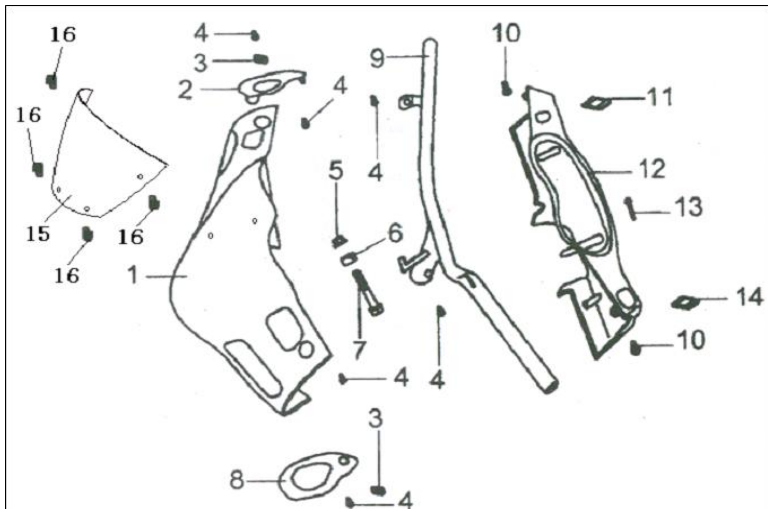


REF. No.	PART NUMBER	CODE	DESCRIPTION	Q'TY
1	05-022-0501	H2P801B6G5H0	Steering Handle Cover, Painted	1
2	05-022-0502	H2P806B3G5H0	R Side Cover, Steering Handle Cover, Painted	1
3	05-022-0503	J1P020C10000	Spring nut 4.2	2
4	05-022-0504	B845VVV42012	Tapping screw ST4.2×12	6
5	05-022-0505	B6187VV10000	Locked nut M10	1
6	05-022-0506	G6P004B1G5H0	Locked washer comp handle steering	1
7	05-022-0507	B6187VV10050	Six edge bolt M10×50	1
8	05-022-0508	H2P807B8G5H0	L Side Cover, Steering Handle Cover, Painted	1
9	05-022-0509	G6A001A6G5H0	Steering Handle	1
10	05-022-0510	B845VVV48016	Tapping screw ST4.8×12	2
11	05-022-0511	H2P809C2G5H0	Oil rrbber L	1
12	05-022-0512	H2P802B6G5H0	Speedometer cover	1
13	05-022-0513	B818VVV05025	Screw M5×25	1
14	05-022-0514	H2P808C2G5H0	Oil rrbber R	1
15	05-022-0515	H2P810B8G5H0	Windscreen, Chrome	1
16	05-022-0516	H2P811B8G5H0	Plastic Rivnut, Windscreen	4

6. FRONT COVER

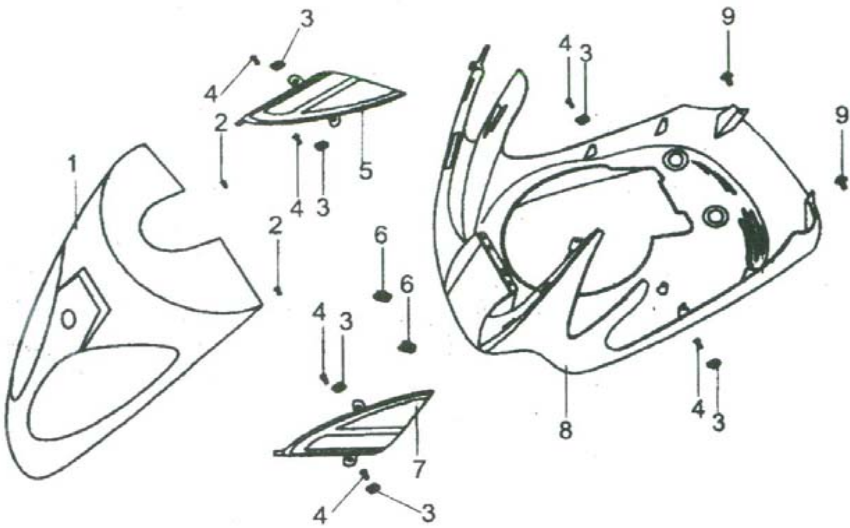


REF. No.	PART NUMBER	CODE	DESCRIPTION	Q'TY
1	05-022-0601	H2P001B6G5H0	Front Headlight Cover, Painted	1
2	05-022-0602	B845VVV48012	Tapping screw ST4.8×12	2
3	05-022-0603	J2A002C1G5H0	Spring nut	6
4	05-022-0604	B845VVV48016	Tapping screw ST4.8×16	6
5	05-022-0605	H2P007B4G5H0	R Vent, Front Cover, Painted	1
6	05-022-0606	J2P002C1G5H0	Nut clip	2
7	05-022-0607	H2P008B4G5H0	L Vent, Front Cover, Painted	1
8	05-022-0608	H2P005B6G5H0	Fr Protecting Plate, Painted	1
9	05-022-0609	B818VVV06016	Screw-washer M6×16	2
10	05-022-0610		Relector, FR, Orange	2

7. FRONT LUGGAGE BOX

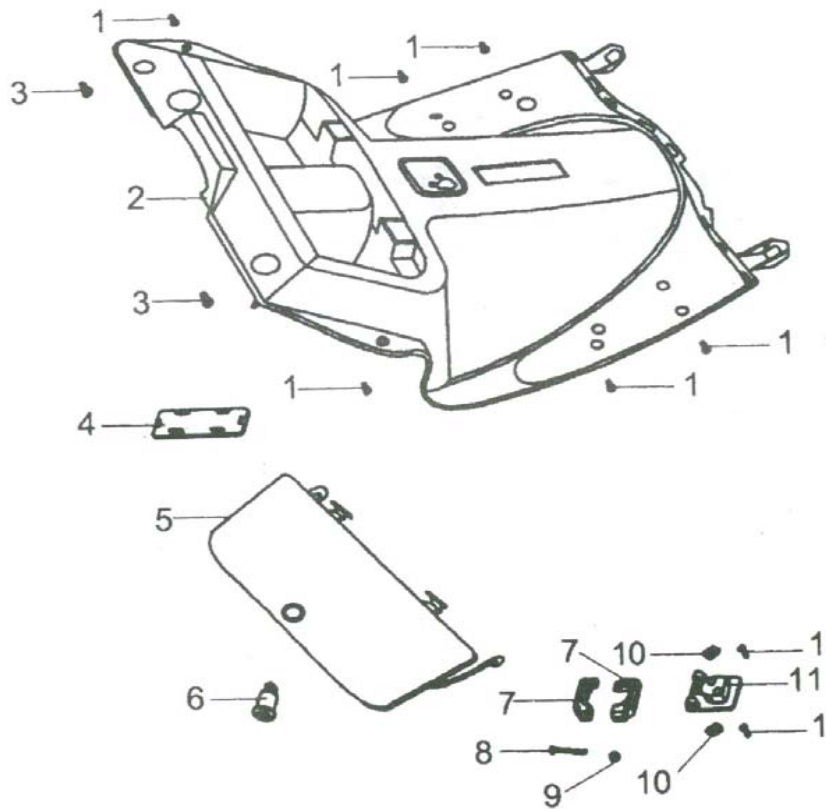


REF. No.	PART NUMBER	CODE	DESCRIPTION	Q'TY
1	05-022-0701	B845VVV42016	Tapping screw ST4.2×16	8
2	05-022-0702	H2P002B6G5H0	Lower Dash Cover	1
3	05-022-0703	B845VVV48016	Tapping screw ST4.8×16	2
4	05-022-0704	H2P004B3G5H0	Cover Frame Number	1
5	05-022-0705	H2P006B5G5H0	Glove Box Lid	1
6	05-022-0706	H2A021B3G5H0	Glove Box Lock	1
7	05-022-0707	H2P017C3G5H0	Helmet Hook	1
8	05-022-0708	B818VVV05040	Stud screw with washer M5×40	1
9	05-022-0709	B818VVV05000	Nut M5	1
10	05-022-0710	J2A002C10000	Spring nut ST4.2	2
11	05-022-0711	H2A017C3G5H0	Helmet Hook Seat	1

8. FLOOR PANEL

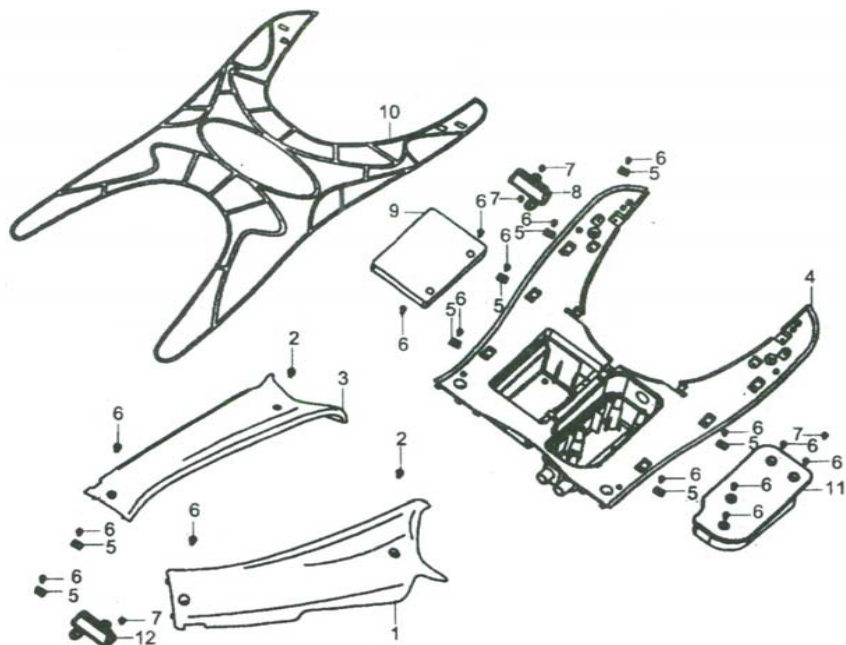


REF. No.	PART NUMBER	CODE	DESCRIPTION	Q'TY
1	05-022-0801	H2P014B6G5H0	Lower Frame Cover, L, Painted	1
2	05-022-0802	B818VVV06016	Screw M6×16	2
3	05-022-0803	H2P015B6G5H0	Lower Frame Cover, R, Painted	1
4	05-022-0804	H2P011B6G5H0	Floor Board	1
5	05-022-0805	J2A001C100000	Nut spring ST4.8	8
6	05-022-0806	B845VVV48016	Screw tapping ST4.8×16	16
7	05-022-0807	B845VVV48013	Screw tapping ST4.8×13	4
8	05-022-0808	H2P018C4G5H0	RR Footrest, R	1
9	05-022-0809	H2P012B5G5H0	Battery Cover	1
10	05-022-0810	H3P013C6G5H0	Floor Matt	1
11	05-022-0811	H2P016B5G5H0	L cover floor step - N/A	1
12	05-022-0812	H2P019C4G5H0	RR Footrest, L	1

9. LUGGAGE CASE & REAR COVER

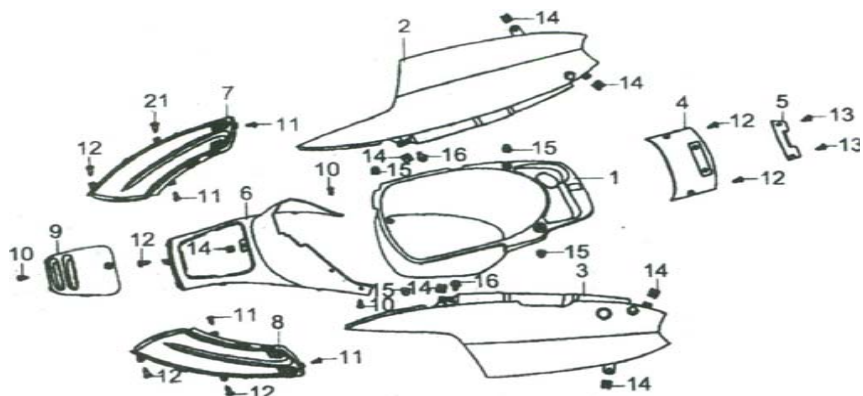


REF. No.	PART NUMBER	CODE	DESCRIPTION	Q'TY
1	05-022-0901	H1P100B6G5H0	Luggage Compartment	1
2	05-022-0902	H2P021B6G5H0	Side Cover, R, Painted	1
3	05-022-0903	H2P020B6G5H0	Side Cover, L, Painted	1
4	05-022-0904	H2P024B4G5H0	RR Middle Plate, Painted	1
5	05-022-0905	H2P029B4G5H0	RR Small Plate, Painted	1
6	05-022-0906	H2P022B6G5H0	FR Cover, Luggage Compartment	1
7	05-022-0907	H2P027B5G5H0	Small Plastic Plate R	1
8	05-022-0908	H2P026B5G5H0	Small Plastic Plate L	1
9	05-022-0909	H2P028B4G5H0	Small Cover, Luggage Compartment	1
10	05-022-0910	B845VVV48012	Tapping screw ST4.8×12	3
11	05-022-0911	B845VVV48012	Tapping screw ST4.8×12	4
12	05-022-0912	B845VVV48016	Tapping screw ST4.8×16	7
13	05-022-0913	B845VVV48016	Tapping screw ST4.8×16	2
14	05-022-0914	J2A001C1G5H0	Tapping screw ST4.8	7
15	05-022-0915	B923VVV06000	Nut M6	4
16	05-022-0916	B5789VV06012	Six Edge Flange Bolt M6×12	2

10. STEERING STEM

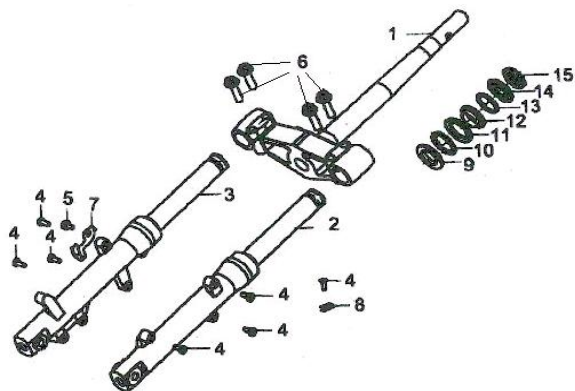

REF. No.	PART NUMBER	CODE	DESCRIPTION	Q'TY
1	05-022-1001	G4A002A5G5H0	Steering Stem	1
2	05-022-1002	G4A004A6G5H0	FR Shock Assy, R	1
3	05-022-1003	G4A005A6G5H0	FR Shock Assy, L	1
4	05-022-1004	B818VVV06012	Screw M6×12	7
5	05-022-1005	B5789VV06012	Flange Bolt M6×12	1
6	05-022-1006	B5789VV10040	Flange Bolt M6×12	4
7	05-022-1007	G4A021C4G5H0	Retainer, FR Brake Hose	1
8	05-022-1008	G4P008C3G5H0	Nut clip M6	1
9A	05-022-1009A		Headset Bearing Kit	1
9	05-022-1009	G4P005A2G5H0	Linder Cover Bearing Race, Part of Kit	1
10	05-022-1010	G4A007A2G5H0	Under Ball, Part of Kit	19
11	05-022-1011	G4P004A2G5H0	Upper Cover Bearing Race, Part of Kit	1
12	05-022-1012	G4P003A2G5H0	Upper Cover Bearing Bowel, Part of Kit	1
13	05-022-1013	G4A006A2G5H0	Upper Ball, Part of Kit	26
14	05-022-1014	G4P002A2G5H0	Under cover Bearing Bowel, Part of Kit	1
15	05-022-1015	J2P001C10000	Locked Nut, Part of Kit	1

11. FRONT BRAKE CALIPER

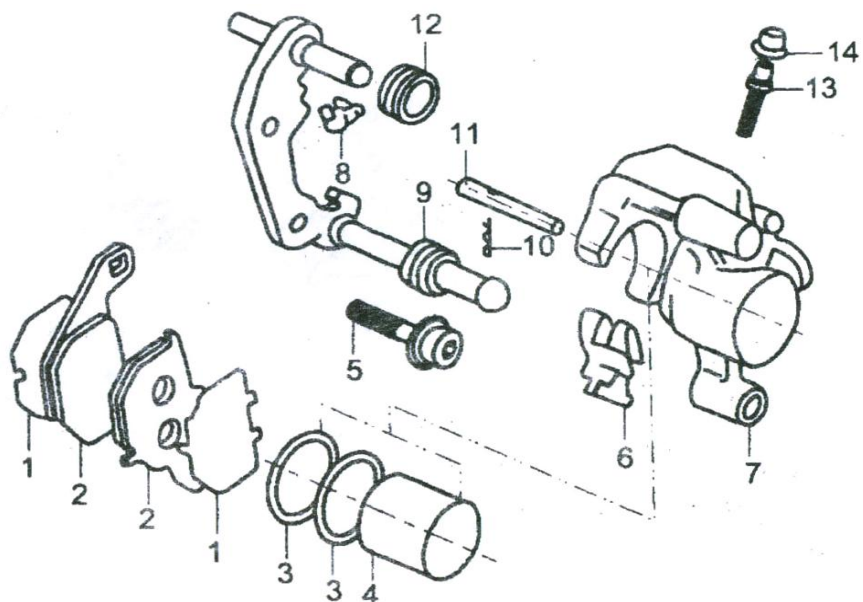


REF. No.	PART NUMBER	CODE	DESCRIPTION	Q'TY
1A	05-022-1101A		FR Brake Caliper Assy	1
1	05-022-1101	G7P027B3G5H0	Washer	2
2	05-022-1102	G7A004A3G5H0	Bottom plate	2
3	05-022-1103	G7P007B2G5H0	Oil seal	2
4	05-022-1104	G7P015A2G5H0	Piston	1
5	05-022-1105	G7P019B2G5H0	Bolt	2
6	05-022-1106	G7P016B2G5H0	Spring	1
7	05-022-1107	G7A007A4G5H0	Cylinder Housing	1
8	05-022-1108	G7P026B1G5H0	Guide plate	1
9	05-022-1109	G7P022C1G5H0	Resulator plate	1
10	05-022-1110	G7P023C2G5H0	Clip	1
11	05-022-1111	G7P020A2G5H0	Pin	1
12	05-022-1112	G7P024C1G5H0	Protecting Cover	1
13	05-022-1113	G7P021C1G5H0	Bolt of Exhaust	1
14	05-022-1114	G7P028C1G5H0	Cover	1

12. FRONT WHEEL




REF. No.	PART NUMBER	CODE	DESCRIPTION	Q'TY
1	05-022-1201	G1P001A5G5H0	FR Wheel - Painted	1
2	05-022-1202	B2983VV11090	Tire 130/60-13	1
3	05-022-1203	B1796VVTR412	Valve Stem, Tire	1
4	05-022-1204	G7P501A4G5H0	FR Brake Disc	1
5	05-022-1205	G7P005A1G5H0	Bolt, FR Disc Brake	3
6	05-022-1206	G1P003C3G5H0	FR Wheel Axle Collar	1
7	05-022-1207	B276VVV63010	Bearing 630, FR Wheel	2
8	05-022-1208	G1A002C2G5H0	Dust seal	1
9	05-022-1209	G1P002B2G5H0	Collar, FR Wheel	1
12A	05-022-1212A		Speedometer Gear Assy	1
10	05-022-1210	A1PG07B2G5H0	Speedometer Gear Ring, Part of Assy	1
11	05-022-1211	A1A503B2G5H0	Gasket, Speedometer Gear, Part of Assy	1
12	05-022-1212	A1A503B3G5H0	Speedometer Gear Box, Part of Assy	1
13	05-022-1213	G1P004A3G5H0	FR Wheel Axle	1
14	05-022-1214	B6177VV12125	FR Wheel Axle Nut	1

13. CARRIER PLATE

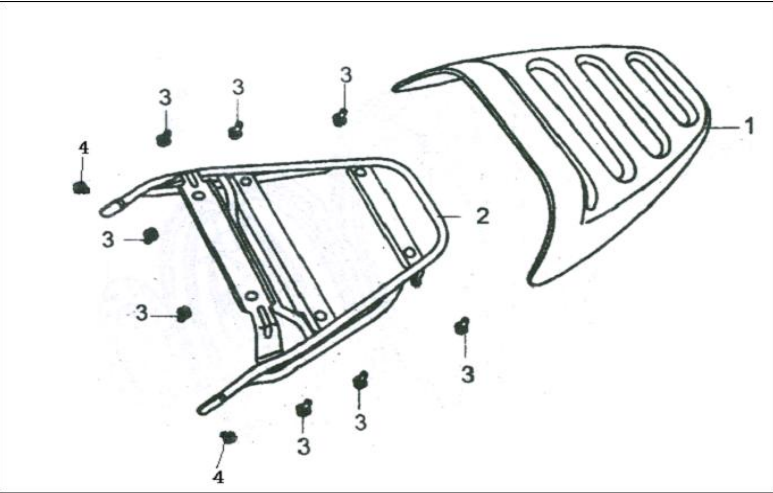


REF. No.	PART NUMBER	CODE	DESCRIPTION	Q'TY
1	05-022-1301	F6P002C5G5H0	Outer Cover , Luggage Painted	1
2	05-022-1302	F6P001C5G5H0	Carrier Plate	1
3	05-022-1303	B5787VV06012	Bolt flangeM6×12	8
4	05-022-1304	Bb5789vv08016	Bolt flangeM8×12	2

14. REAR WHEEL

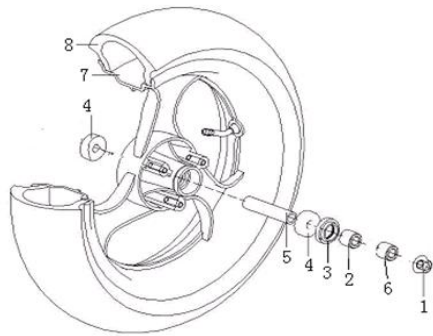


REF. No.	PART NUMBER	CODE	DESCRIPTION	Q'TY
1	05-022-1401	B16674V14125	RR Wheel Axle Nut	1
2	05-022-1402	G2P006A1G5H0	Collar, RR Wheel	1
3	05-022-1403	G2A011A1G5H0	Oil Seal	1
4	05-022-1404	B278VVV6301Z	Bearing, RR Wheel	1
5	05-022-1405	G2P007A1G5H0	Collar 1, RR Wheel	2
6	05-022-1406	G2P008A1G5H0	Collar 2, RR Wheel	1
7	05-022-1407	G2A010A2G5H0	RR Wheel - Painted	1
8	05-022-1408	B2983VV13013	Tire, 130/60-13	1
9	05-022-1409	B1796VVTR412	Valve Stem, Tire	1

14A. REAR WHEEL - '04 RR DRUM BRAKE

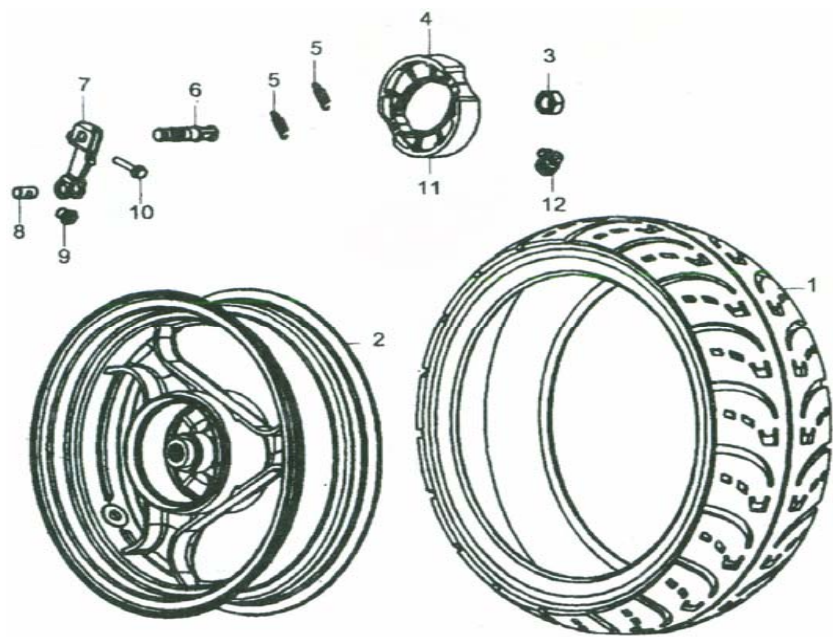


REF. No.	PART NUMBER	CODE	DESCRIPTION	Q'TY
1	05-022-1408	B2983VV13013	Tire, 130/60-13	1
2	04-022-1402	G2A001A5G5H0	RR Wheel - Drum Brake	1
3	04-022-1403	B6184VV16150	Nut, M16x1.5	1
4	04-022-1404	G7A501A3G5H0	RR Brake Shoe 1	1
4A	04-022-1404A		RR Brake Shoe Set	1
5	04-022-1405	G7P501A2G5H0	Spring	2
6	04-022-1406	G7P503A3G5H0	Cam, RR Brake	1
7	04-022-1407	G7A502A3G5H0	Arm, RR Brake Cable	1
8	04-022-1408	G7P504B2G5H0	Pin	1
9	04-022-1409	G7P505B2G5H0	Nut	1
10	04-022-1410	B5787VV16150	Bolt, M6x1.5	1
11	04-022-1411	G7A503A3G5H0	RR Brake Shoe 2	1
12	04-022-1412	B1796VVTR412	Valve Stem, Tire	1

15. SEAT CUSHION

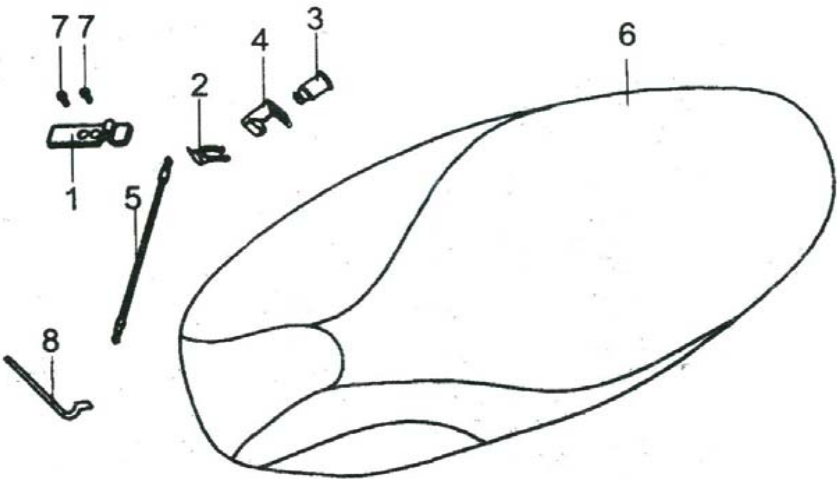


REF. No.	PART NUMBER	CODE	DESCRIPTION	Q'TY
1A	05-022-1501A		Seat Assy	1
1	05-022-1501	H1A300C3G5H0	Lock comp seat	1
2	05-022-1502	H1P302C1G5H0	Clip spring	1
3	05-022-1503	H1A301B2G5H0	Lock comp seat	1
4	05-022-1504	H1P201C3G5H0	Bracket comp seat	1
5	05-022-1505	G8A010C5G5H0	Cable comp seat lock	1
6	05-022-1506	H1A001B6G5H0	Seat	1
7	05-022-1507	B818VVV06014	Screw M6×14	2
8	05-022-1508	H1P300B3G5H0	Socket	1

16. FUEL TANK

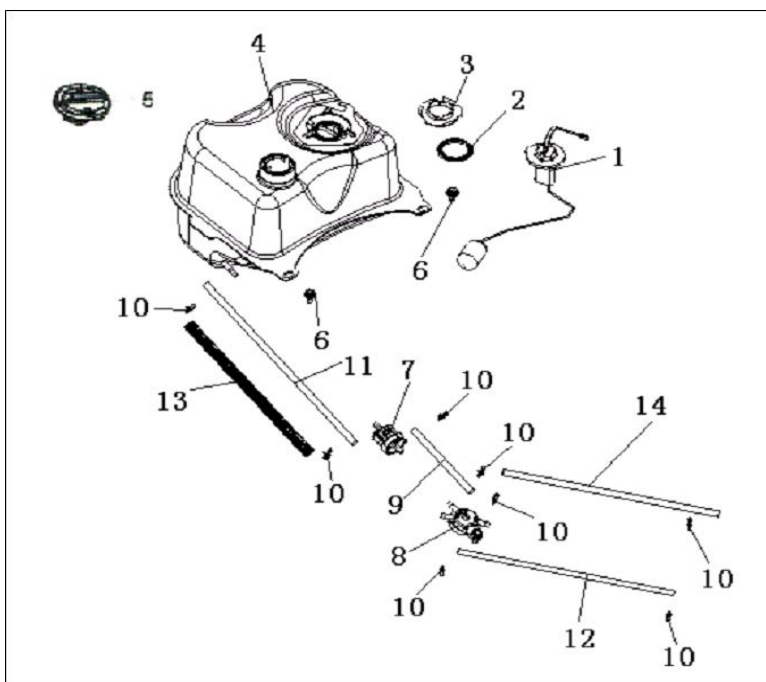


REF. No.	PART NUMBER	CODE	DESCRIPTION	Q'TY
1	05-022-1601	E3A003B4G5H0	Fuel Sensor	1
2	05-022-1602	E3P020B3G5H0	Gasket, Fuel Sensor	1
3	05-022-1603	E3P021B3G5H0	Retainer, Fuel Sensor	1
4	05-022-1604	E3A001A5G5H0	Fuel Tank	1
5	05-022-1605	E3A002B3G5H0	Fuel Cap	1
6	05-022-1606	B5787VV06012	Bolt flange M6×12	2
7	05-022-1607	E3A005B2G5H0	Fuel Filter	1
8	05-022-1608	E3A004B2G5H0	Fuel Pump	1
9	05-022-1609	E3P006C5G5H0	Fuel Line, Filter to Pump	1
10	05-022-1610	E3P007C1G5H0	Hose Clamp	6
11	05-022-1611	E3P008C5G5H0	Fuel Line, Tank to Filter	1
12	05-022-1612	E3P009C5G5H0	Vacuum Line, Pump to Carburetor	1
13	05-022-1613	E3P011C1G5H0	Cover, Fuel Line	1
14	05-022-1614	E3P012C1G5H0	Fuel Line, Pump to Carburetor	1

17. BATTERY

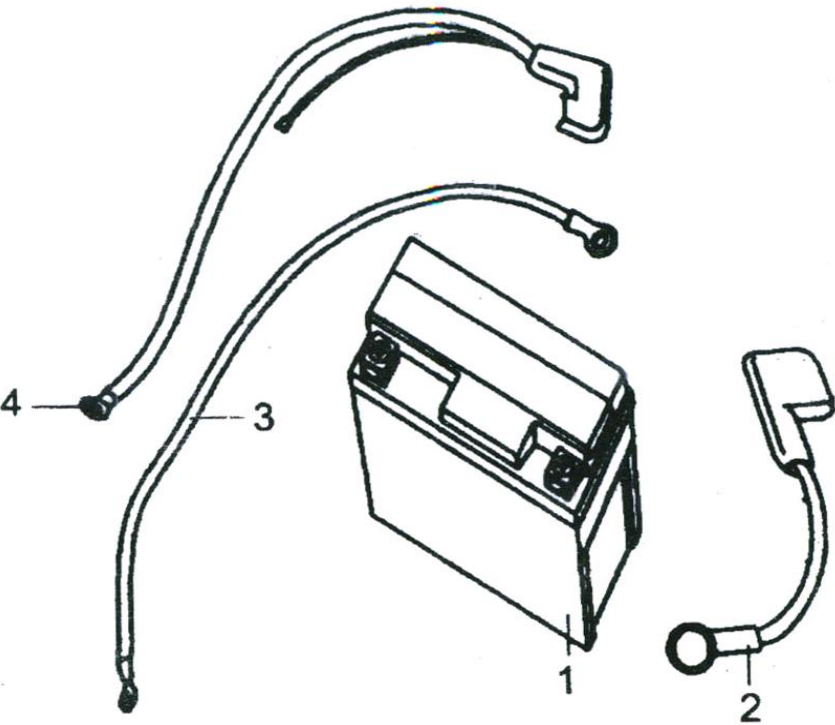


REF. No.	PART NUMBER	CODE	DESCRIPTION	Q'TY
1	05-022-1701	A3A008B4G5H0	Battery	1
2	05-022-1702	A3A018B5G5H0	Positive Cable	1
3	05-022-1703	A3A016B5G5H0	Ground Strap	1
4	05-022-1704	A3A029B5G5H0	Negative Cable	1

18. AIR CLEANER

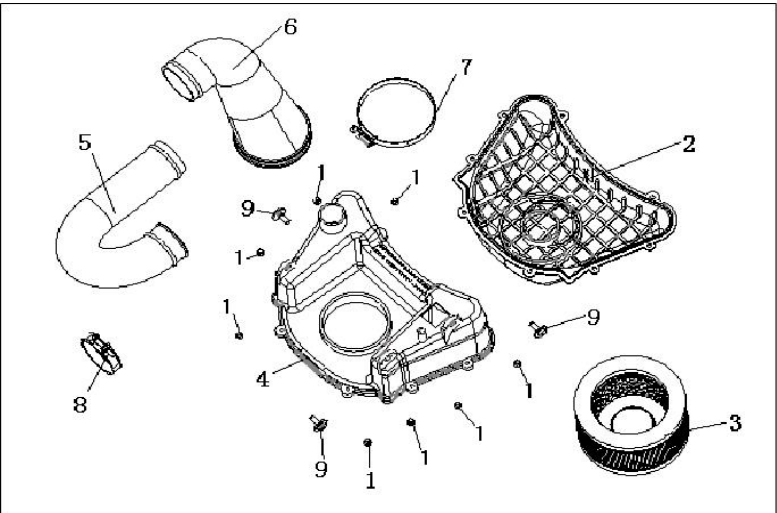


REF. No.	PART NUMBER	CODE	DESCRIPTION	Q'TY
1A	05-022-1801A		Air Cleaner Assy	1
1	05-022-1801	B845VVV42013	Screw tapping ST4.2×13	8
2	05-022-1802	E2A002B4G5H0	Dover air cleaner	1
3	05-022-1803	E2A006A3G5H0	Elevent comp	1
4	05-022-1804	E2A005B4G5H0	Air cleaner body	1
5	05-022-1805	E2A009B5G5H0	Tube outletm upper	1
6	05-022-1806	E2A010B5G5H0	Tube outlet , lower	1
7	05-022-1807	E2A011B5G5H0	Clip comp 1	1
8	05-022-1808	E2A012B5G5H0	Clip comp 2	1
9	05-022-1809	G5789VV06016	Bolt M6X16	3

19. EXHAUST MUFFLER

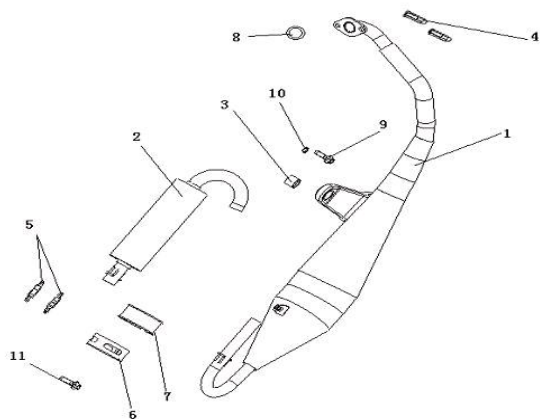


REF. No.	PART NUMBER	CODE	DESCRIPTION	Q'TY
1A	05-022-1901A		Muffler Assy	1
1	05-022-1901	E1D100A6G5H0	Muffler Comp	1
2	05-022-1902	E1D200B3G5H0	Sound insulation canister	1
3	05-022-1903	E1D300B0G5H0	Muffler installation bush comp.	1
4	05-022-1904	E1P001A0G5H0	Nut M6	2
5	05-022-1905	E1P002B0G5H0	Spring	1
6	05-022-1906	E1P003B0G5H0	Metal ring , Sound insulation canister	1
7	05-022-1907	E1P004C0G5H0	Rubble ring , Sound insulation canister	2
8	05-022-1908	E1D005B0G5H0	Gasket, Exhaust to Cylinder	1
9	05-022-1909	B5789VV08035	Bolt M8X35	1
10	05-022-1910	B93VVVV08000	Spring washer 8	1
11	05-022-1911	B16674V08020	Bolt M8X20	1

19A. EXHAUST MUFFLER - '04

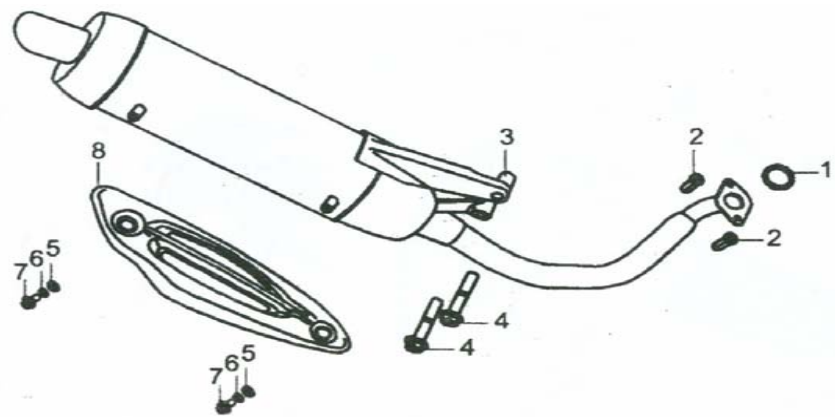


REF. No.	PART NUMBER	CODE	DESCRIPTION	Q'TY
1	04-022-1901	E1P006B2G5H0	Exhaust Gasket	1
2	04-022-1902	E1P002B2G5H0	Cap Nut M6	1
3	04-022-1903	E1A001A6G5H0	Muffler	1
4	04-022-1904	B5787VV10055	Bolt, M10x55	2
5	04-022-1905	B95VVVV00006	Washer, M6	1
6	04-022-1906	B93VVVV00006	Spring Washer, M6	1
7	04-022-1907	B5787VV06010	Bolt, M6x10	2
8	04-022-1908	E1P003B4G5H0	Protecting Plate	1

20. STAND

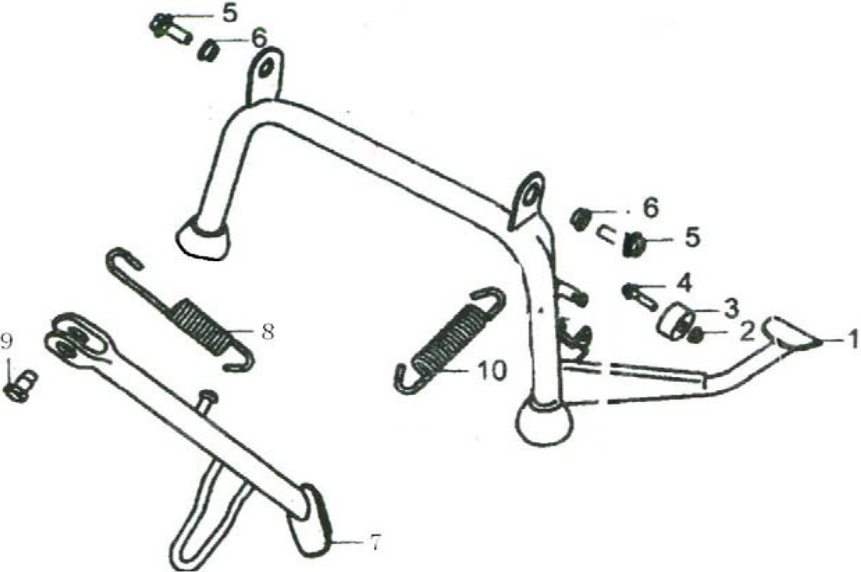

REF. No.	PART NUMBER	CODE	DESCRIPTION	Q'TY
1	05-022-2001	F2A001B5G5H0	Main Stand	1
2	05-022-2002	B6187VV06000	Nut M6	4
3	05-022-2003	F2P001C2G5H0	Damper rubber sprcket	1
4	05-022-2004	B5787VV06025	Bolt flange M6×25	1
5	05-022-2005	B5787VV10025	Bolt flange M10×26	2
6	05-022-2006	F2P002B2G5H0	Collar frame	2
7	05-022-2007	F2A501B4G5H0	Side comp stand	1
8	05-022-2008	F2P501B3G5H0	Side stand comp spring	1
9	05-022-2009	F2P502B3G5H0	Bolt comp side stand M10	1
10	05-022-2010	F2P003B3G5H0	Spring comp frame	1

21. REAR CUSHION

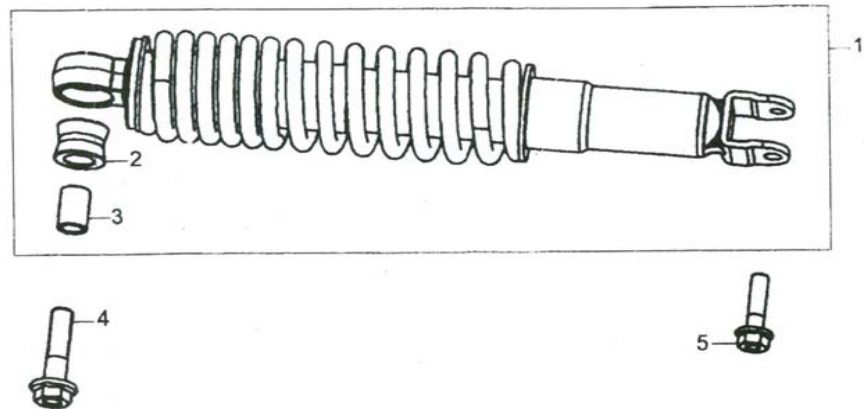


REF. No.	PART NUMBER	CODE	DESCRIPTION	Q'TY
1	05-022-2101	G5A001A5G5H0	Cushion assy Rr	1
2	05-022-2102	G5P004B2G5H0	Bush rubber	1
3	05-022-2103	G5P003B2G5H0	Collar rubber bush	1
4	05-022-2104	B5787VV10040	Bolt flange M10×40	1
5	05-022-2105	B5787VV08030	Bolt flange M8×30	1

This diagram shows an exploded view of a mechanical assembly. The components are numbered as follows:

- 1**: A large, curved housing or cover with a ribbed interior.
- 2**: A large, curved base or support plate.
- 3**: A small, curved bracket or pin.
- 4**: A small, curved bracket or pin.
- 5**: A circular cap or end plate.
- 6**: A long, thin rod or shaft.
- 7**: A small rectangular plate or insert.
- 8**: Small circular fasteners or pins.
- 9**: Small circular fasteners or pins.
- 10**: Small circular fasteners or pins.
- 11**: Small circular fasteners or pins.
- 12**: A small cylindrical pin or bolt.


29

23. WINKERS

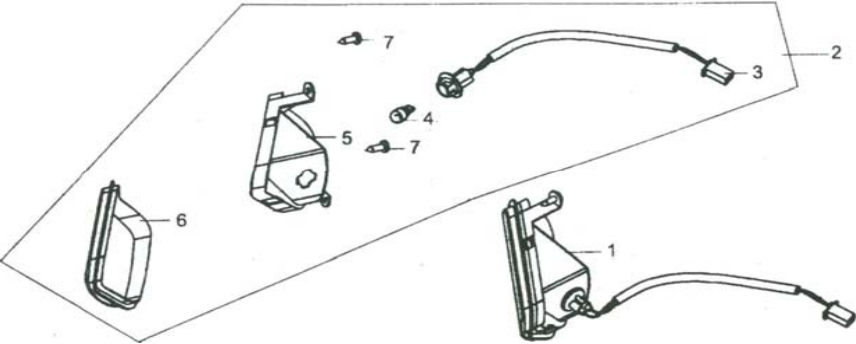


REF. No.	PART NUMBER	CODE	DESCRIPTION	Q'TY
1	05-022-2301	A2A003A4G5H0	Winker comp L,Fr	1
2	05-022-2302	A2A004A4G5H0	Winker comp R,Fr	1
3	05-022-2303	A2A023B4G5H0	Light Holder	1
4	05-022-2304	B15766A12005	Bulb 12V 5W	1
5	05-022-2305	A2A022B4G5H0	Bulb Bowel	1
6	05-022-2306	A2A021B4G5H0	Bulb case	1
7	05-022-2307	B845VVV42016	Tapping screw ST4.2×16	2

24. TAIL LIGHT

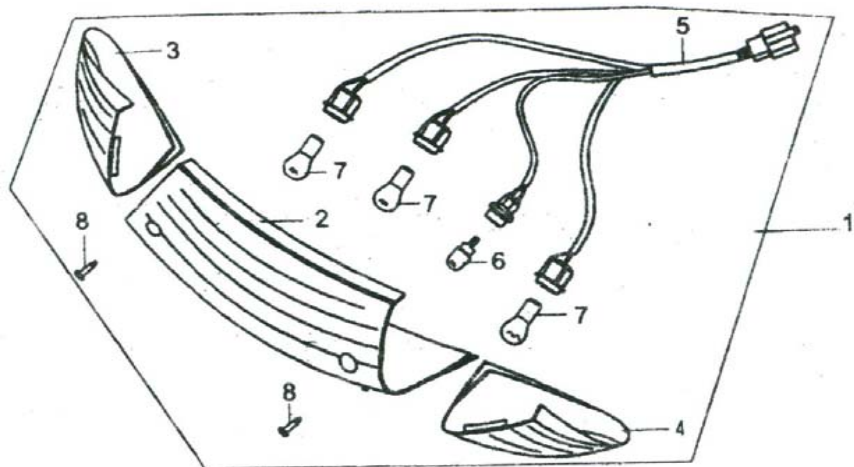


REF. No.	PART NUMBER	CODE	DESCRIPTION	Q'TY
1	05-022-2401	A2A002A5G5H0	Rr Light comp	1
2	05-022-2402	A2P071B5G5H0	Rr Light cover	1
3	05-022-2403	A2P073B4G5H0	cover comp winker L,Rr	1
4	05-022-2404	A2P074B4G5H0	cover comp winker R,Rr	1
5	05-022-2405	A2A071B5G5H0	Rr Tail Light Holder	1
6	05-022-2406	B15766A12005	Bulb 12V 5W	1
7	05-022-2407	B15766A12105	Bulb 12V 10/5W	3
8	05-022-2408	B845VVV42016	Tapping screw ST4.2×16	2

25. WIRE HARNESS

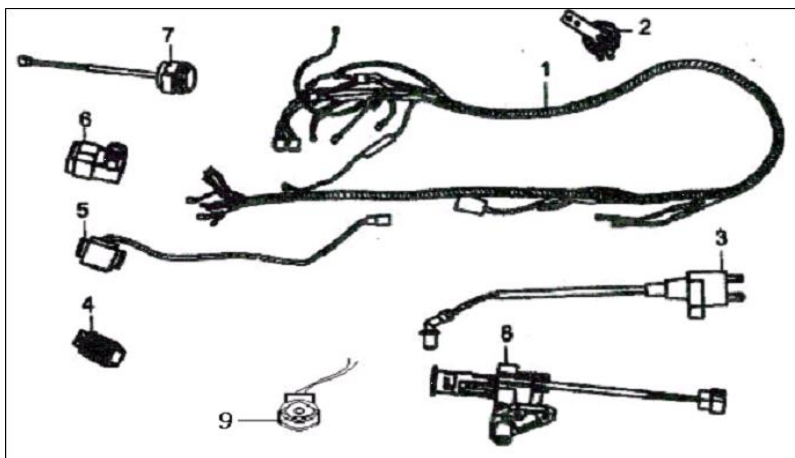


REF. No.	PART NUMBER	CODE	DESCRIPTION	Q'TY
1	05-022-2501	A3A001B8G5H0	Wire Harness	1
2	05-022-2502	A3A005B3G5H0	Horn	1
3	05-022-2503	A3A006B3G5H0	Ignition Coil	1
4	05-022-2504	A3A009B3G5H0	Regulator	1
5	05-022-2505	A3A007B3G5H0	Starter Relay	1
6	05-022-2506	A3A014B2G5H0	CDI Unit	1
7	05-022-2507	A3A004B3G5H0	Turn Signal Relay	1
8	05-022-2508	A3A003B4G5H0	Ignition Switch Lock Set	1
9	05-022-2509	A3A033B2G5H1	Switch, Side Stand Kill	1

26. FRAME BODY

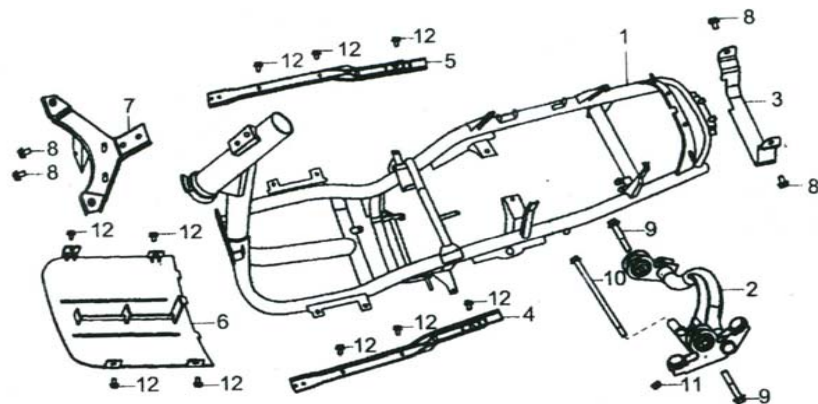


REF. No.	PART NUMBER	CODE	DESCRIPTION	Q'TY
1	05-022-2601	F1A001A8G5H0	Frame Body	1
2	05-022-2602	F5A001A5G5H0	Engine Suspension Bracket	1
3	05-022-2603	F0P001C4G5H0	Stay, Fuel Tank	1
4	05-022-2604	F0A001C6G5H0	Gasket, Frame L	1
5	05-022-2605	F0A002C6G5H0	Gasket, Frame R	1
6	05-022-2606	H2P003C5G5H0	Frame Body Fender	1
7	05-022-2607	F2A801B4G5H0	Gasket, Head Light	1
8	05-022-2608	B5789VV08012	Flange Bolt M8×12	4
9	05-022-2609	B5787VV10055	Flange Bolt M10×55	2
10	05-022-2610	B5787VV10185	Flange Bolt M10×185	1
11	05-022-2611	B5787VV10125	Flange Bolt M10	1
12	05-022-2612	B5789VV06010	Flange Bolt M6×10	10


27. REAR DISC BRAKE ASSY

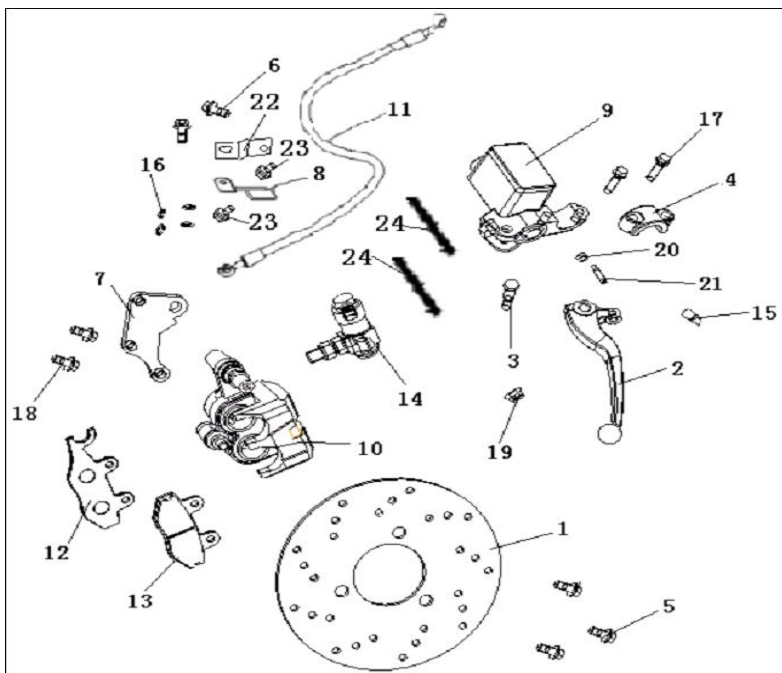

REF. No.	PART NUMBER	CODE	DESCRIPTION	Q'TY
1	05-022-2701	G7P201A3G5H0	Disc, RR Brake	1
2	05-022-2702	G7P202A1G5H0	Lever, RR Brake	1
3	05-022-2703	G7P203A1G5H0	Bolt, RR Brake Lever	1
4	05-022-2704	G7P204A1G5H0	Clamp, RR Brake Master Cylinder	1
5	05-022-2705	G7P205A3G5H0	Bolt, RR Disc	3
6	05-022-2706	G7P206A1G5H0	Bolt M10 X 1.25X22	2
7	05-022-2707	G7P207A1G5H0	Bracket, RR Brake Caliper	1
8	05-022-2708	G7P208A1G5H0	Retainer, RR Brake Hose	1
9	05-022-2709	G7A210A1G5H0	Master Cylinder, RR Brake	1
10	05-022-2710	G7A220A1G5H0	Caliper, RR Brake	1
11	05-022-2711	G7D230A7G5H0	Hose, RR Brake	1
12	05-022-2712	G7D240A1G5H0	Brake Shoe, RR 1	1
13	05-022-2713	G7D250A1G5H0	Brake Shoe, RR 2	1
12A	05-022-2712A		Brake Shoe Set	1
14	05-022-2714	G7D260A1G5H0	ABS Valve	1
15	05-022-2715	G7D270B1G5H0	Switch, RR Brake	1
16	05-022-2716	G7D280A1G5H0	Washer, RR Brake Hose	4
17	05-022-2717	B16674V06025	FLANGE BOLT M6x25	2
18	05-022-2718	B5789VV08030	Bolt M8X30	2
19	05-022-2719	B6184VV06000	Nut M6	1
20	05-022-2720	B6170VV06000	Nut M6	1
21	05-022-2721	G7P209A1G5H0	Bolt M6X28	1
22	05-022-2722	G7P210A1G5H0	Bracket , Brake Hose	1
23	05-022-2723	B5789VV08030	Bolt M6x12	1
24	05-022-2724	G7P211A1G5H0	Protective Cover, Brake Hose	2

 28. REAR WHEEL CONNECTION PLATE



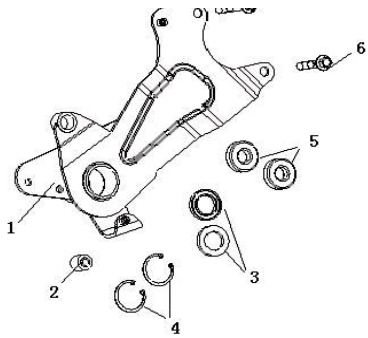


REF. No.	PART NUMBER	CODE	DESCRIPTION	Q'TY
1A	05-022-2801A		Rear Wheel Mounting Bracket Assy, Disc Brake	
1	05-022-2801	F7D100A3G5H0	Rear Wheel Mounting Bracket, Disc Brake	1
2	05-022-2802	F7D200A1G5H0	Rubber Bushing	1
3	05-022-2803	F7D300A2G5H0	Oil Seal	2
4	05-022-2804	B893AVV00040	Circlip	2
5	05-022-2805	B278VVV6203Z	BEARING 6203Z	2
6	05-022-2806	B5789VV10055	Bolt M10X1.25X55	1
7	05-022-2807	B5789VV10070	Bolt M10X1.25X70	1

29. FRONT FENDER




REF. No.	PART NUMBER	CODE	DESCRIPTION	Q'TY
1A	05-022-2901A		FR Fender Assy - painted	1
1	05-022-2901	H2P901B5G5H0	FR Section, FR Fender	1
2	05-022-2902	H2P902B5G5H0	RR Section, RR Fender	1
3	05-022-2903	G4P009C3G5H0	Retainer, Speedometer Cable	1

29A. FRONT FENDER - EARLY 05 1PC

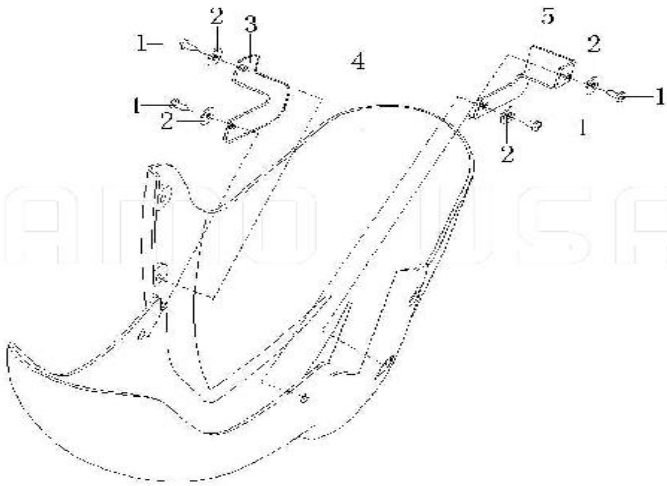

REF. No.	PART NUMBER	CODE	DESCRIPTION	Q'TY
1	05-022-2901B		Bolt, 4.8x13	1
2	05-022-2902B		Washer	1
3			N/A	1
4	05-022-2904B	H2P061B5G5C0	FR Fender	1
5			N/A	

30. REAR CARRIER

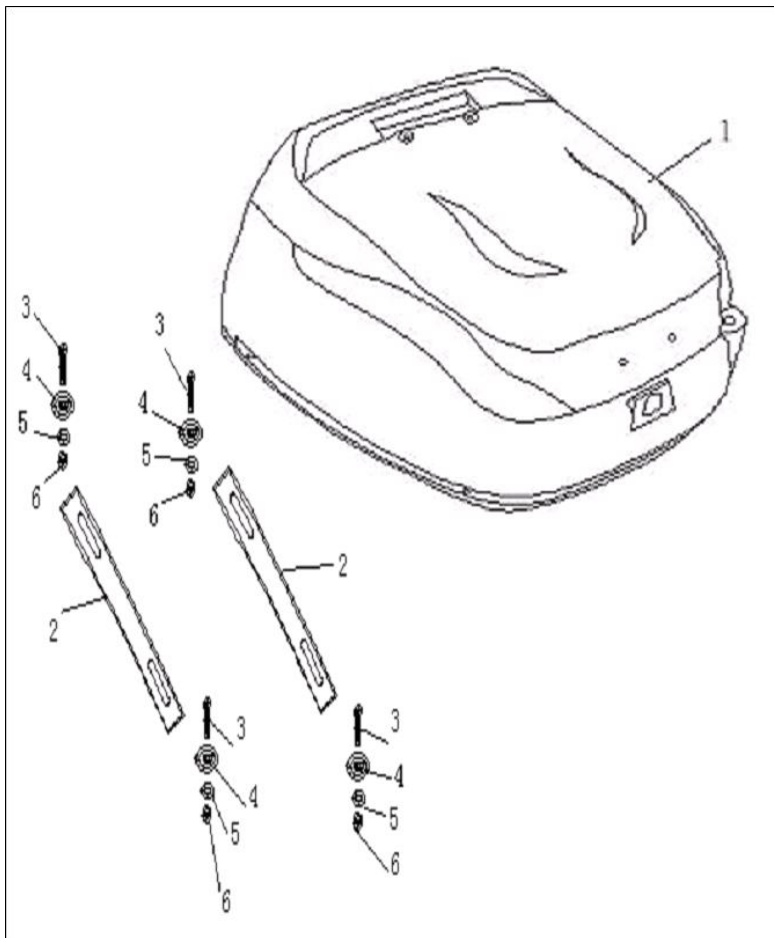

REF. No.	PART NUMBER	CODE	DESCRIPTION	Q'TY
1A	05-022-3001A		Rear Carrier Assy	1
1	05-022-3001	H3A100C4G5H0	Rear Carrier	1
2	05-022-3002	H3P001C1G5H1	Mounting Bracket, Rear Carrier	2
3	05-022-3003	B5781VV08040	Bolt M8CX40	4
4	05-022-3004	H0P014C1G5B0	Installation plate	4
5	05-022-3005	B971VVV08000	Washer 8	4
6	05-022-3006	B6170VV08000	Nut M8	4