
BAROSSA MOTOR INDUSTRY CO., LTD.

C O N T E N T


SPARE PARTS LIST FOR ALOE

FIG 01 CYLINDER
FIG 02 CRANKSHAFT PISTON
FIG 03 AIR SHROUD , FAN
FIG 04 OIL PUMP
FIG 05 CARBURETOR
FIG 06 INTAKE
FIG 07 CRANKCASE
FIG 08 STARTER
FIG 09 CLUTCH
FIG 10 TRANSMISSION
FIG 11 GENERATOR
FIG 12 STARTING MOTOR
FIG 13 EXHAUST MUFFLER
FIG 14 REAR ARM
FIG 15 REAR SUSPENSION
FIG 16 FRAME
FIG 17 FRONT SUSPENSION
FIG 18 STEERING
FIG 19 FUEL TANK
FIG 20 FRONT FENDER
FIG 21 SEAT
FIG 22 FRONT WHEEL
FIG 23 REAR WHEEL
FIG 24 REAR BRAKE
FIG 25 STEERING HANDEL CABLE
FIG 26 HANDLE SWITCH
FIG 27 STAND FOOTREST
FIG 28 GUARD
FIG 29 WIRE HARNESS
FIG 30 WARNING
FIG 31 HEAD LIGHT
FIG 32 TAIL LIGHT
FIG 33 SPEEDOMETER
FIG 34 CARRIER REAR
FIG 35 SPARE PARTS LIST

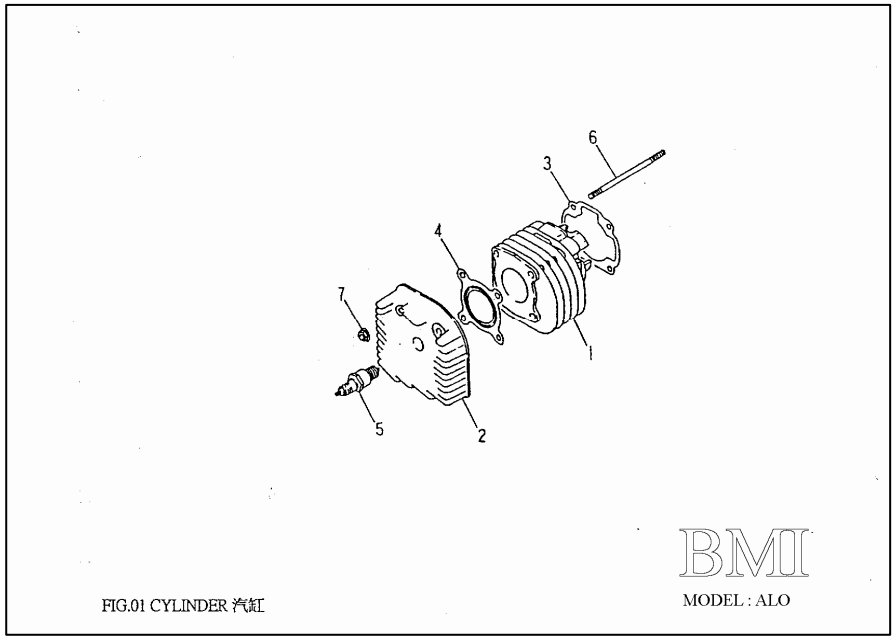

NO	PARTS NO.	PARTS NAME	Q'TY
1	11111-NAF-00	CYLINDER	1
2	11121-NAF-00	HEAD,CYLINDER	1
3	11151-NAF-00	GASKET,CYLINDER	1
4	11181-NAF-00	GASKET,CYLINDER HEAD	1
5	62210-NAF-01	PLUG,SPARK (NGK BPR7HS)	1
6	9471707109-C	BOLT,STU	4
7	95401-071007-C	NUT,FLANGE	4

MENU PAGE PAGE UP ▲PAGE DOWN ▼ALL PARTS LIST

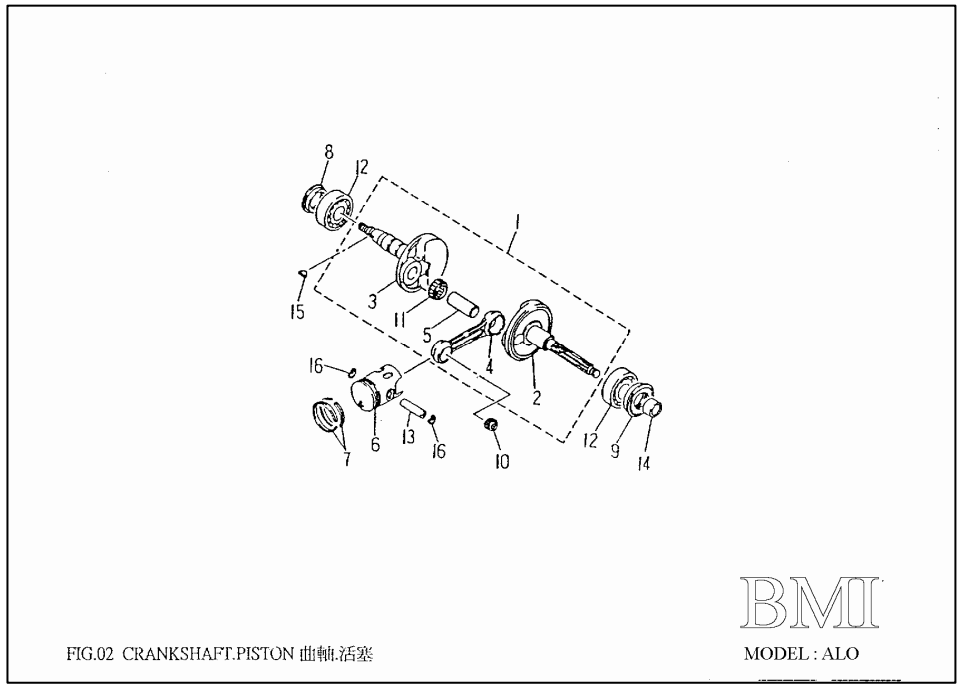

NO	PARTS NO.	PARTS NAME	Q'TY
1	11400-SK5-00	CRANKSHAFT ASSEMBLY	1
2	11412-SK5-00	.CRANK L	1
3	11422-SK5-00	.CRANK R	1
4	11451-NAF-00	.ROD,CONNECTING	1
5	11481-NAF-00	.PIN,CRANK	1
6	11631-NAF-00B	PISTON (STD)	1
7	11636-NAF-00	PISTON RING SET (STD)	1
8	93110-20306	OIL SEAL	1
9	93110-20428	OIL SEAL	1
10	93310-1014125	BEARING,NEEDLE ROLLER	1
11	93310-1622118	.BEARING,NEEDLE ROLLER	1
12	93320-204714J	BEARING,RADIAL BALL	2
13	93510-051033	PIN,PISTON	1
14	93510-152012	COLLAR	1
15	94420-03013	KEY,SEMICIRCLE	1
16	97050-10012	CIRCLIP	2

MENU PAGE PAGE UP ▲ PAGE DOWN ▼ ALL PARTS LIST

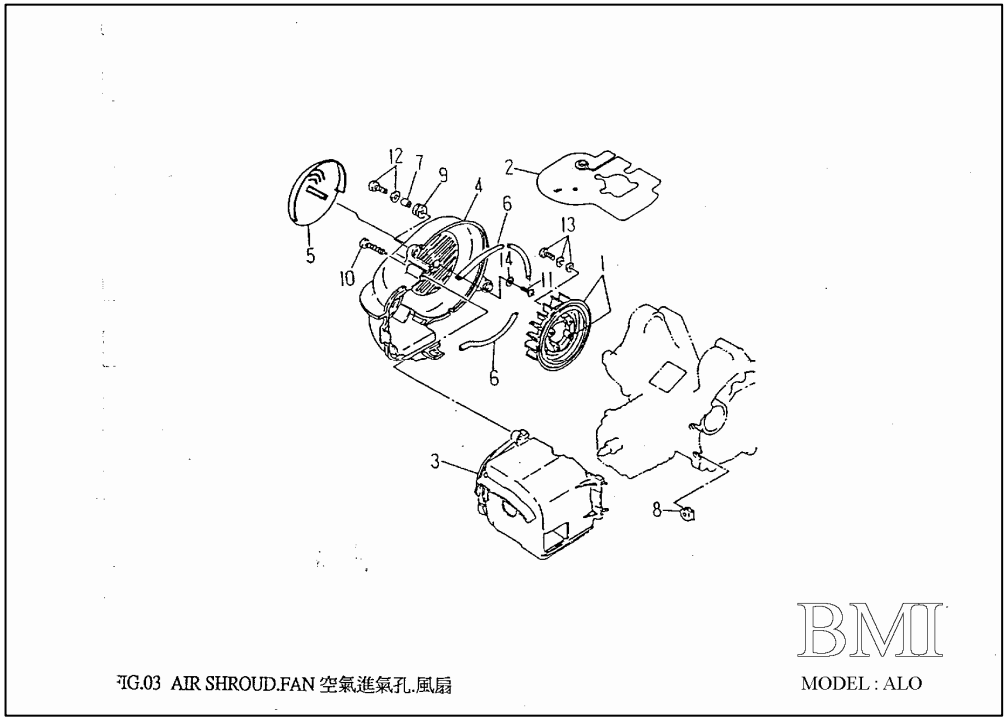


FIG.03 AIR SHROUD.FAN 空氣進氣孔.風扇 MODEL : ALO

NO	PARTS NO.	PARTS NAME	QTY
1	12611-NAF-00	FAN	1
2	12631-NAF-00	DEFLECTOR	1
3	12651-NAF-00	AIR SHROUD,CYLINDER	1
4	12653-NAF-00	AIR SHROUD,FAN	1
5	12657-SK9-00	CAP,AIR SHROUD	1
6	12658-NAF-00	DAMPER,AIR SHROUD	3
7	93560-68510	COLLAR	2
8	93580-41610	GROMMET	2
9	93580-81610	GROMMET	2
10	96110-64016-C	SCREW,TAPPING	1
11	96112-51216-K	SCREW,TAPPING	1
12	96312-06020-K	SCREW,PAN HEAD WITH WASHER	2
13	96314-06016-C	SCREW,PAN HEAD WITH WASHER	4
14	97201-051410-B	WASHER,PLATE	1

MENU PAGE PAGE UP ▲ PAGE DOWN ▼ ALL PARTS LIST

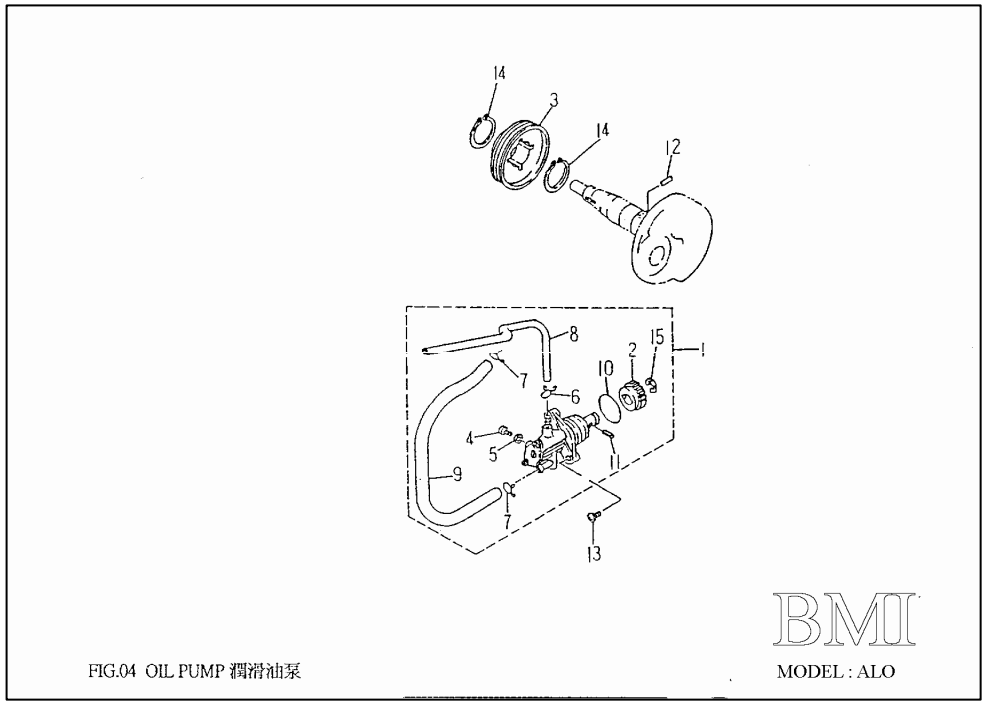


FIG.04 OIL PUMP 潤滑油泵

MODEL : ALO

NO	PARTS NO.	PARTS NAME	Q'TY
1	13100-SKO-00	OIL PUMP ASSEMBLY	1
2	13124-NAF-00	GEAR WORM WHEEL (40T)	1
3	13178-NAF-00	GEAR,PUMP DRIVE	1
4	13185-NAF-00	.BOLT,BREATHER	1
5	13187-NAF-00	.GASKET,BREATHER BOLT	1
6	90210-06005-C	.CLIP	1
7	90210-08009-C	.CLIP	2
8	90310-20050	.HOSE	1
9	90310-50570	.HOSE	1
10	93210-16195	.O-RING	1
11	94430-30012	.PIN,DOWEL	1
12	94510-30012	PIN,DOWEL	1
13	96310-05014-C	SCREW,PAN HEAD	2
14	97010-19012	CIRCLIP	2
15	97011-07008-K	.CIRCLIP	1

MENU PAGE PAGE UP ▲ PAGE DOWN ▼ ALL PARTS LIST

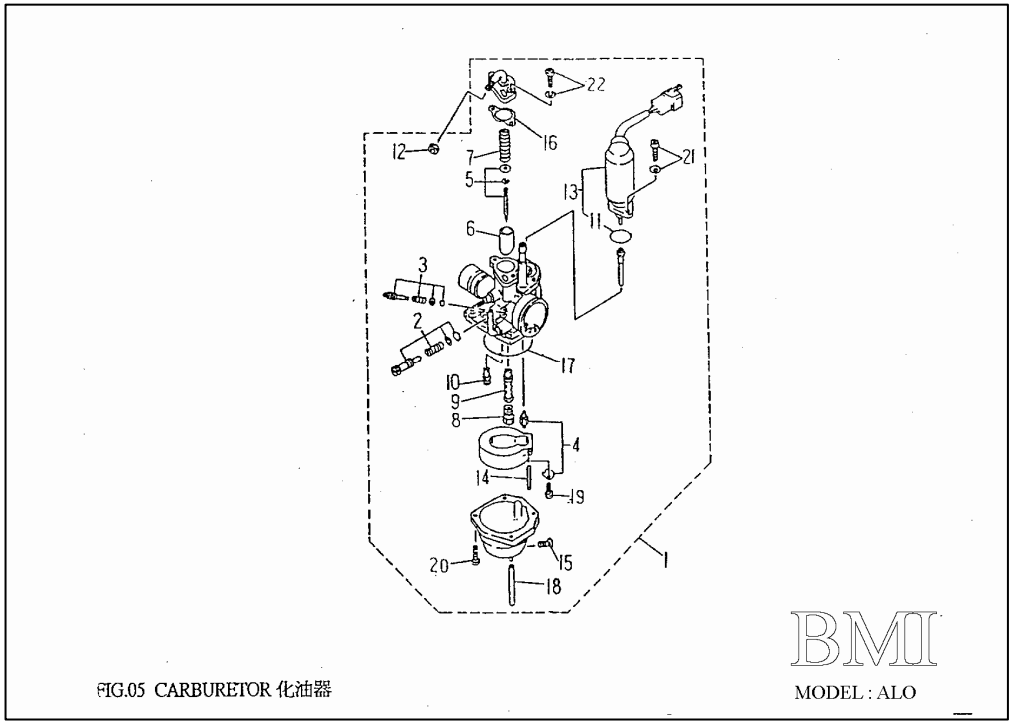


FIG.05 CARBURETOR 化油器

MENU PAGE PAGE UP ▲ *-0, ALL PARTS LIST

NO	PARTS NO.	PARTS NAME	Q'TY
1	13201-NAF-00	CARBURETOR ASSEMBLY	1
2	13203-NAF-00	.THROTTLE SCREW SET	1
3	13204-NAF-00	.AIR SCREW SET	1
4	13207-NAF-00	.NEEDLE VALVE SET	1
5	13211-NAF-00	.NEEDLE SET	1
6	13212-NAF-00	.VALVE,THROTTLE	1
7	13233-NAF-00	.SPRING,THROTTLE STOP	1
8	13240-NAF-00	.JET,MAIN (#75)	1
	13240NAN00	JET,MAIN (#82,5)	1
9	13241-NAF-00	.NOZZLE,MAIN	1
10	13242-NAF-00	.JET,PILOT (#17.5)	1
11	13247-NAF-00	.O-RING	1
12	13261-NAF-00	.NUT,CABLE ADJUSTING	1
13	13271-NAF-00	.PLUNGER,STARTER	1
14	13286-NAF-00	.PIN,FLOAT	1
15	13291-NAF-00	.PLUG,DRAIN	1
16	13296-NAF-00	.GASKET	1
17	13297-NAF-00	.SEAL	1
18	13298-NAF-00	.PIPE	1
19	96310-03006-C	.SCREW,PAN HEAD	1
20	96310-04012-C	.SCREW,PAN HEAD	4
21	96312-04008-C	.SCREW,PAN HEAD WITH WASHER	2
22	96312-04012-C	.SCREW,PAN HEAD WITH WASHER	2

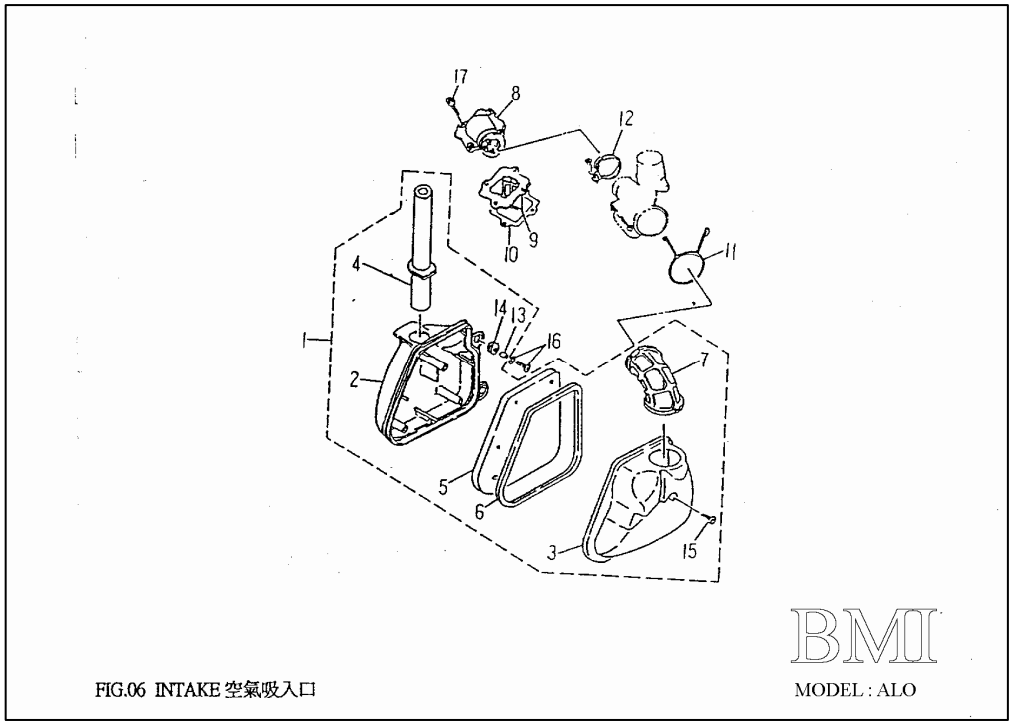


FIG.06 INTAKE 空氣吸入口　　MODEL : ALO

NO	PARTS NO.	PARTS NAME	Q'TY
1	13410-SK9-00	AIR CLEANER ASSEMBLY	1
2	13411-NAF-01	CASE,AIR CLEANER	1
3	13412-NAF-00	CAP,CLEANER CASE	1
4	13437-SK9-00	DUCT	1
5	13451-NAF-00	ELEMENT,AIR CLEANER	1
6	13452-NAF-00	SEAL	1
7	13453-NAF-00	JOINT,AIR CLEANER	1
8	13555-NAF-00	MANIFOLD,INTAKE	1
9	13610-NAF-00	REED VALVE ASSEMBLY	1
10	13621-NAF-00	GASKET,VALVE SEAT	1
11	90210-23043-B	CLIP	1
12	90260-13325-C	CLANP,HOSE	1
13	93560-68510	COLLAR	2
14	93580-81610	GROMMET	2
15	96110-52512-K	SCREW,TAPPING	3
16	96312-06020-K	SCREW,PAN HEAD WITH WASHER	2
17	96510-06020-K	BOLT,SOCKET	4

MENU PAGE　PAGE UP ▲　PAGE DOWN ▼　ALL PARTS LIST

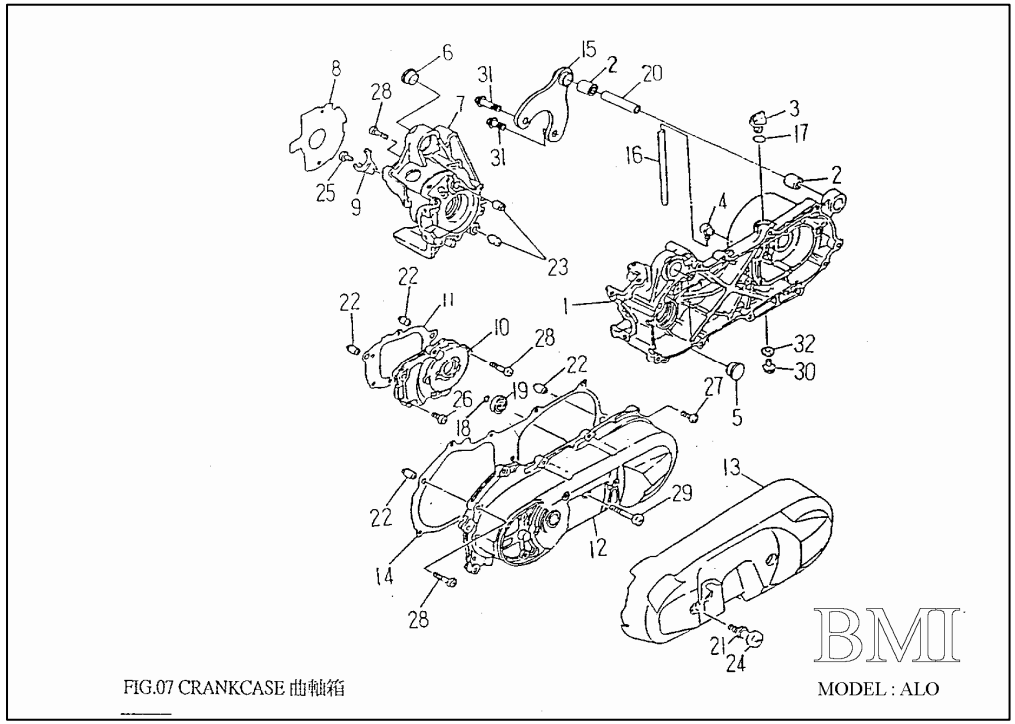


FIG.07 CRANKCASE 曲軸箱

MODEL : ALO

MENU PAGE PAGE UP ▲ PAGE DOWN ▼ ALL PARTS LIST

NO	PARTS NO.	PARTS NAME	Q'TY
1	15111-SK5-00	CRANKCASE,LEFT	1
2	15116-NAF-00	NUT,FLANGE	2
3	15163-NAF-00	PLUG,OIL	1
4	15171-NAF-00	BREATHER	1
5	15178-SK9-00	PLUG,TAPER L	1
6	15278-SK9-00	PLUG,TAPER R	1
7	15211-SK5-00	CRANKCASE,RIGHT	1
8	15221-NAF-01	GASKET,STATOR	1
9	15228-NAF-00	HOLDER	1
10	15311-YAN-00	COVER,GEARBOX	1
11	15351-NAF-01	GASKET,GEARBOX COVER	1
12	15411-SK9-00	COVER,CRANKCASE	1
13	15421-YAN-00	COVER CRANKCASE	1
14	15481-YAN-01	GASKET,CRANKCASE COVER	1
15	41183-SK9-00	ENGING HANGER B	1
16	90311-50070	HOSE,BREATHER	1
17	93210-24140	O-RING	1
18	93210-31080	O-RING	1
19	93320-082809Z	BEARING,RADIAL BALL 638ZZ	1
20	93510-081471-K	COLLAR	1
21	93580-61509	GROMMET	2
22	94410-10014	PIN,DOWEL	4
23	94410-12016	PIN,DOWEL	2
24	94706-06023-K	BOLT	2
25	96310-06012-C	SCREW,PAN HEAD	1
26	96310-06020-B	SCREW,PAN HEAD	3
27	96310-06025-B	SCREW,PAN HEAD	8
28	96310-06035-B	SCREW,PAN HEAD	10
29	96310-06065-B	SCREW,PAN HEAD	1
30	96414-08016-C	BOLT,FLANGE	1
31	96414-10020-B	BOLT,FLANGE	2
32	97230-081512	WASHER,COPPER	1


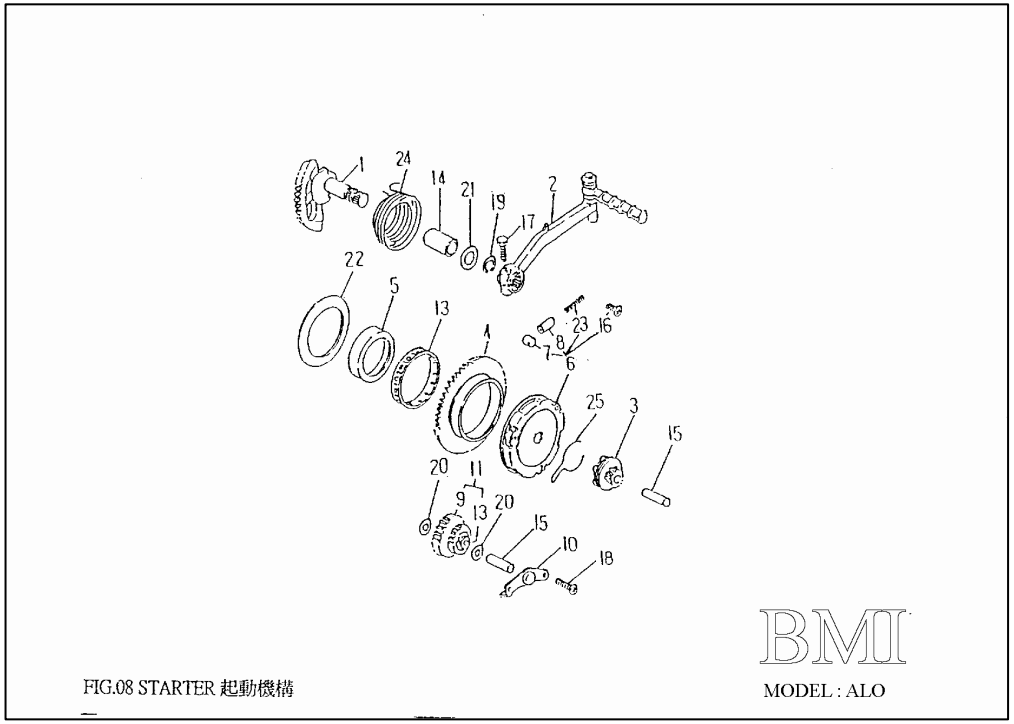


FIG.08 STARTER 起動機構

MENU PAGE PAGE UP ▲ PAGE DOWN ▼ ALL PARTS LIST

NO	PARTS NO.	PARTS NAME	Q'TY
1	22601-YAN-00	KICK SHAFT ASSEMBLY	1
2	22620-NAF-00	KICK CRANK ASSEMBLY	1
3	22630-NAF-00	KICK PINION ASSEMBLY	1
4	23524-NAF-00	WHEEL,STARTER	1
5	23538-NAF-00	BOSS,GEAR	1
6	23570-NAF-00	STARTER CLUTCH ASSEMBLY	1
7	23576-NAF-01	STARTER CLUTCH,ROLLER 6*8	3
8	23578-NAF-00	STARTER CLUTCH,SCOVER	3
9	23612-NAF-00	IDLE GEAR	1
10	23632-NAF-00	PLATE,IDLE GEAR	1
11	23650-NAF-00	IDLE GEAR ASSEMBLY	1
12	93310-0812100	BEARING,NEEDLE ROLLER	1
13	93310-5559127	BEARING,NEEDLE ROLLER	1
14	93510-152030	BUSHING,KICK SHAFT	1
15	94510-80032	SHAFT,GEAR	2
16	94712-05010-B	SCREW,TAPPING	3
17	96210-06025-K	BOLT,HEXAGON	1
18	96310-06012-C	SCREW,PAN HEAD	2
19	97010-15010	CIRCLIP	1
20	97201-081620-C	WASHER,PLATE	2
21	97201-152810-K	WASHER,PLATE	1
22	97201-557606	WASHER,PLATE	1
23	97501-02021	STARTER CLUTCH,SPRING	3
24	97508-32535	STARTER,TORSION	1
25	97510-26300	CLIP,SPRING	1

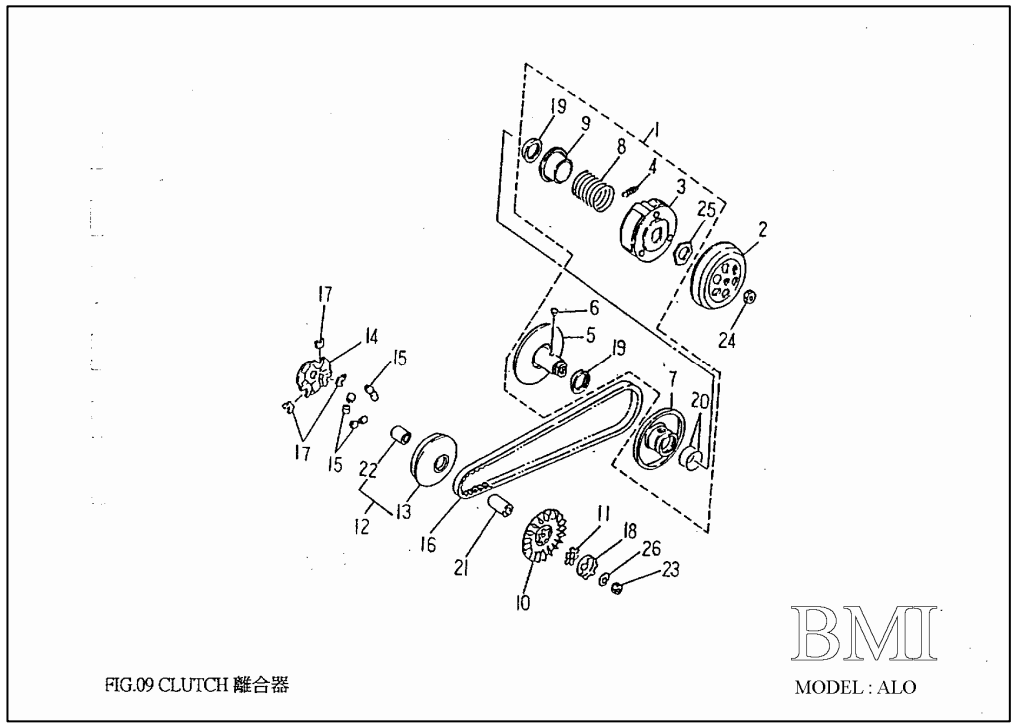

MENU PAGE PAGE UP ▲ PAGE DOWN ▼ ALL PARTS LIST

NO	PARTS NO.	PARTS NAME	Q'TY
1	25602-NAF-00	SECONDARY SHEAVE ASSEMBLY	1
2	25611-NAF-00	CLUTCH HOUSING COMP	1
3	25620-NAF-00	.CLUTCH CARRIER ASSEMBLY	1
4	25626-NAF-00	.SPRING,CLUTCH WEIGHT	3
5	25660-NAF-00	.SECONDARY FIXED SHEAVE COMP	1
6	25664-NAF-00	.PIN,GUIDE	2
7	25670-NAF-00	.SECONDARY SLIDING SHEAVE	1
8	25680-NAN-01	COMPRESSION	1
9	25684-NAF-00	.SEAT,SECONDARY SPRING	1
10	25711-NAF-00	SHEAVE,PRIMARY FIXED	1
11	25716-NAF-00	WASHER,CLAW	1
12	25720-NAF-00	PRIMARY SLIDING SHEAVE COMP	1
13	25721-NAF-00	PRIMARY SLIDING SHEAVE	1
14	25723-NAF-00	CAM,PLATE	1
15	25732-NAF-00	WEIGHT ROLLER	6
16	25741-YAF-03	V-BELT	1
17	25753-NAF-00	SLIDER	3
18	25757-NAN-00	CLUTCH,ONEWAY	1
19	93110-33394	.OIL SEAL	2
20	93210-20360	.O-RING	2
21	93510-162137	BUSHING,SLIDING CLUTCH	1
22	93510-212622	BUSHING,SLIDING SHEAVE	1
23	95201-101708-C	NUT,HEXAGON	1
24	95201-102406-C	NUT,HEXAGON	1
25	95201-284104-C	.NUT,HEXAGON	1
26	97310-102425	WASHER,CONICAL SPRING	1

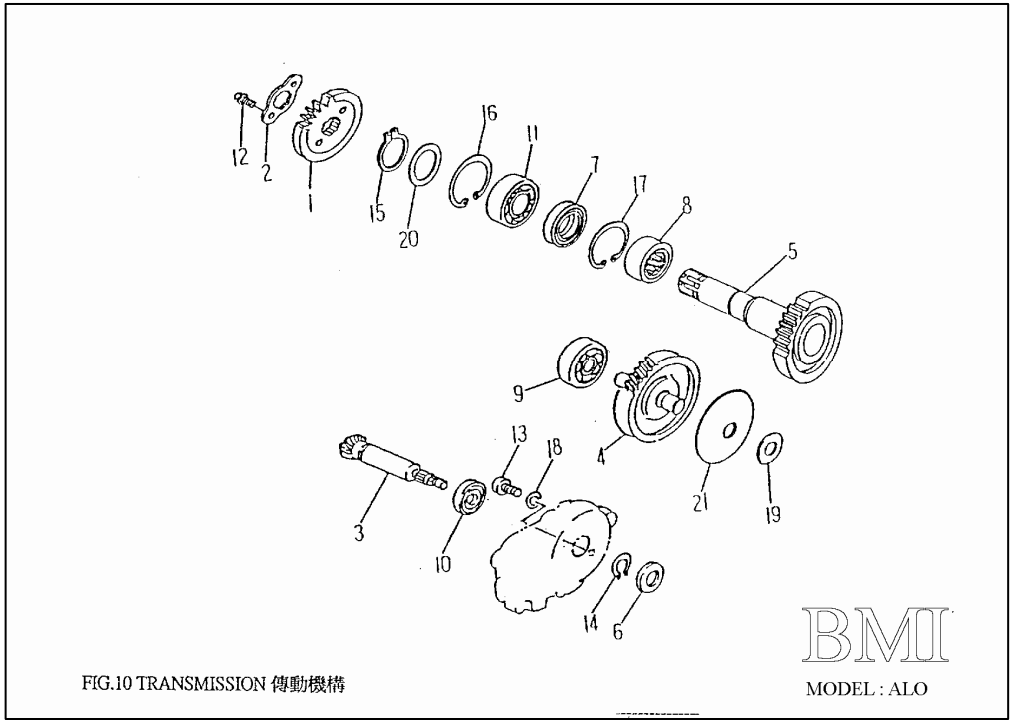


FIG.10 TRANSMISSION 傳動機構

MENU PAGE PAGE UP ▲ PAGE DOWN ▼ ALL PARTS LIST

NO	PARTS NO.	PARTS NAME	Q'TY	
1	25711-SK9-01	SPROCKET DRIVE 428-18T	1	
	25711-SK9-02		1	20T
2	25716-CHP-00	PLATE,FIXING	1	
3	26111-YAF-00	GEAR,PRIMARY DRIVE 15T	1	13T
4	26410-YAF-00	MAIN AXLE COMP 47/11T	1	48/12T
5	26420-SK5-00	DRIVE AXLE ASSEMBLY 31T	1	36T
6	93110-17285	OIL SEAL 17*28*5.5	1	
7	93110-25356	OIL SEAL 25*35*6	1	
8	93310-2533160	BEARING,NEEDLE ROLLER HMK-2516	1	
9	93320-123210	BEARING,RADIAL BALL 6201CM/2A	1	
10	93320-173510	BEARING,RADIAL BALL 6003CM/2A	1	
11	93320-204212U	BEARING,RADIAL BALL 6004LLUCM/5K	1	
12	96210-06010-B	BOLT,HEXAGON	2	
13	96310-06010-B	SCREW,PAN HEAD	1	
14	97010-17010-K	CIRCLIP STW-17	1	
15	97010-20012-K	CIRCLIP 20MM	1	
16	97012-42018-K	CIRCLIP RTW-42	1	
17	97013-33012-K	CIRCLIP IR-33	1	
18	97201-061910-B	WASHER,PLATE	1	
19	97201-122210	WASHER,PLATE	1	
20	97201-202810-K	WASHER,PLATE	1	
21	97310-126005	WASHER,CONICAL SPRING	1	

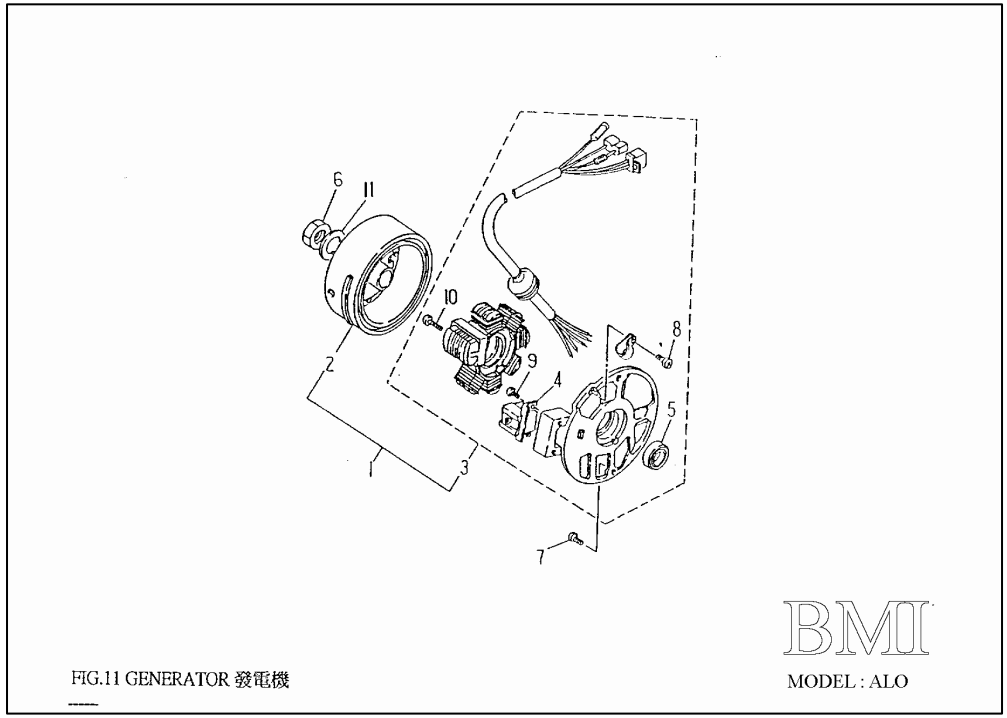


FIG.11 GENERATOR 發電機

MODEL : ALO

NO	PARTS NO.	PARTS NAME	Q'TY
1	35500-NAF-00	GENERATOR ASSEMBLY	1
2	35550-NAF-00	.ROTOR ASSEMBLY	1
3	35560-NAF-00	.BASE ASSEMBLY	1
4	35580-NAF-00	.COIL,PULSER	1
5	93110-19265	.OIL SEAL	1
6	95201-101408-C	NUT,HEXAGON	1
7	96310-06016-C	.SCREW,PAN HEAD	2
8	96312-04006-C	.SCREW,PAN HEAD WITH WASHER	1
9	96312-06010-C	.SCREW,PAN HEAD WITH WASHER	2
10	96312-06025-C	.SCREW,PAN HEAD WITH WASHER	2
11	97201-101726-C	WASHER,PLATE	1

MENU PAGE PAGE UP ▲ PAGE DOWN ▼ ALL PARTS LIST

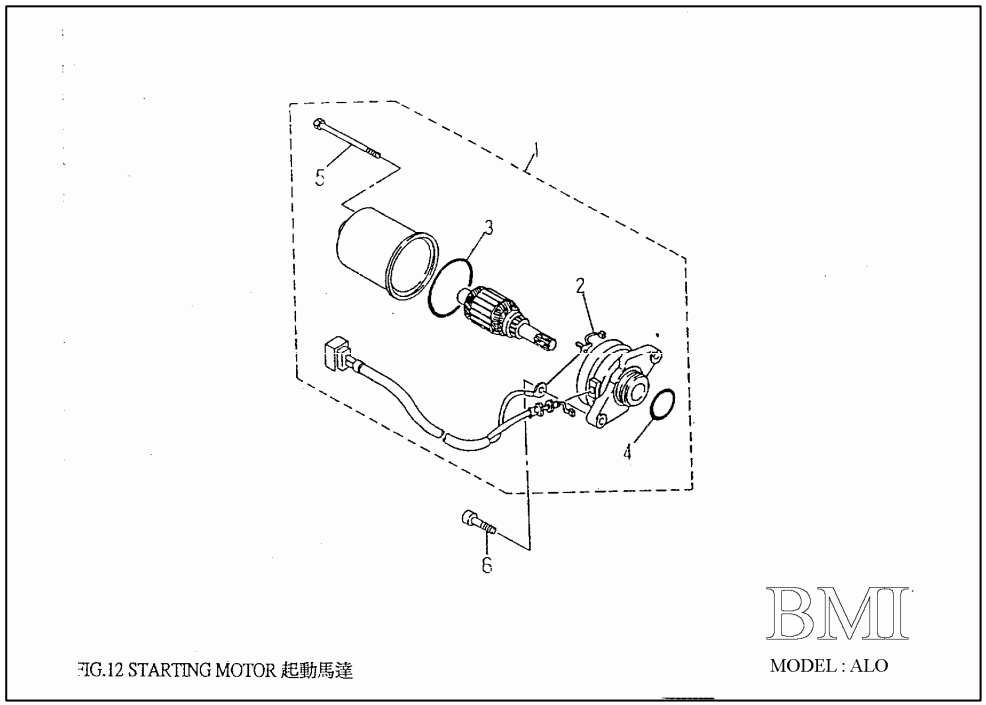


FIG.12 STARTING MOTOR 起動馬達

NO	PARTS NO.	PARTS NAME	Q'TY
1	35800-NAF-00	STARTING MOTOR ASSEMBLY	1
2	35801-NAF-00	.BRUSH SET	1
3	35811-NAF-00	.GASKET,YOKE	1
4	93210-19230	.O-RING	1
5	96414-04068-C	.BOLT,FLANGE	2
6	96510-06020-K	BOLT,SOCKET	2

MENU PAGE PAGE UP ▲ PAGE DOWN ▼ ALL PARTS LIST

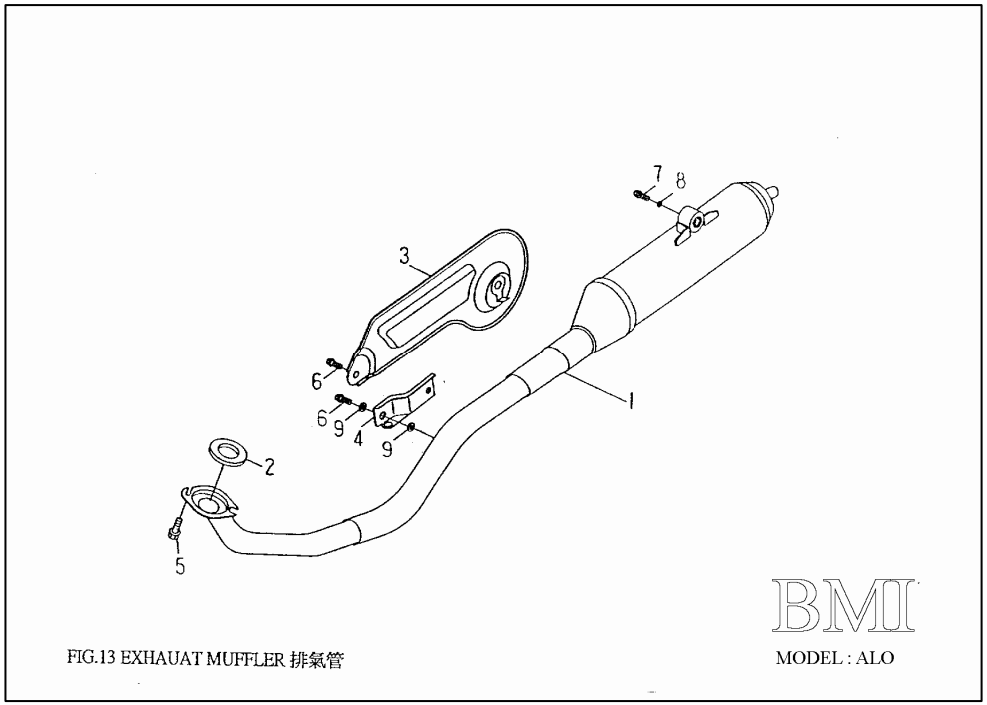


FIG.13 EXHAUAT MUFFLER 排氣管

MODEL : ALO

NO	PARTS NO.	PARTS NAME	Q'TY
1	31610-SK9-01C	EXHAUST MUFFLER ASS'Y	1
2	31613-NAF-00	GASKET,EXHAUST PIPE (25.4*34*4)	1
3	31618-SK9-03	PROTECTOR,EXHAUST	1
4	31661-SK9-01	BRAKET,EXHAUST	1
5	94714-06018-C	SCREW,FLANGE	2
6	96414-08012-B	BOLT,FLANGE	3
7	96414-08030-K	BOLT,FLANGE	1
8	97201-081620-C	WASHER,PLATE	1
9	97210-081515	WASHER,PLATE	4

MENU PAGE PAGE UP ▲ PAGE DOWN ▼ ALL PARTS LIST

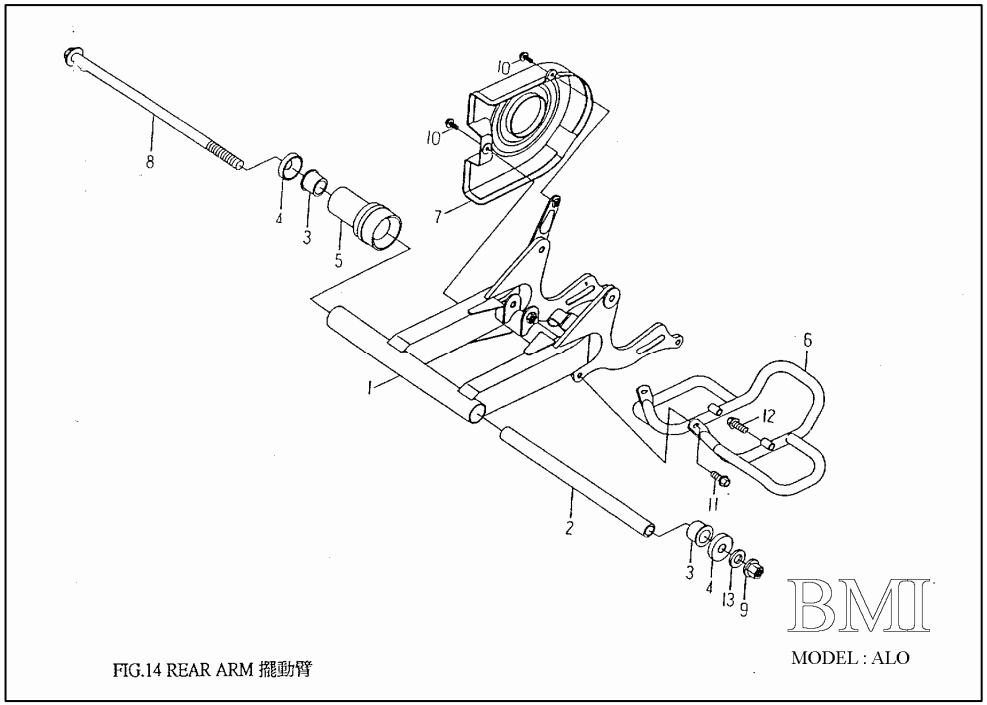


FIG.14 REAR ARM 擺動臂

NO	PARTS NO.	PARTS NAME	Q'TY
1	32100-BL9-00	REAR ARM	1
2	32115-SK9-00	BUSH	1
3	32116-SK9-00	BUSH,SOLID	2
4	32118-SK9-00	COVER,THRUST	2
5	32160-SK9-00	SEAL,GUARD	1
6	32190-BL9-00	COVER	1
7	32191-SK9-00	DRIVE CHAIN CASE	1
8	94610-14290-B	SHAFT,PIVOT	1
9	95301-142212-B	NUT,LOCK 14MM	1
10	96318-06012-B	SCREW,PAN HEAD	2
11	96414-08012-B	BOLT,FLANGE	2
12	96414-08025-B	BOLT,FLANGE	2
13	97201-142820-B	WASHER,PLATE	1

MENU PAGE PAGE UP ▲ PAGE DOWN ▼ ALL PARTS LIST

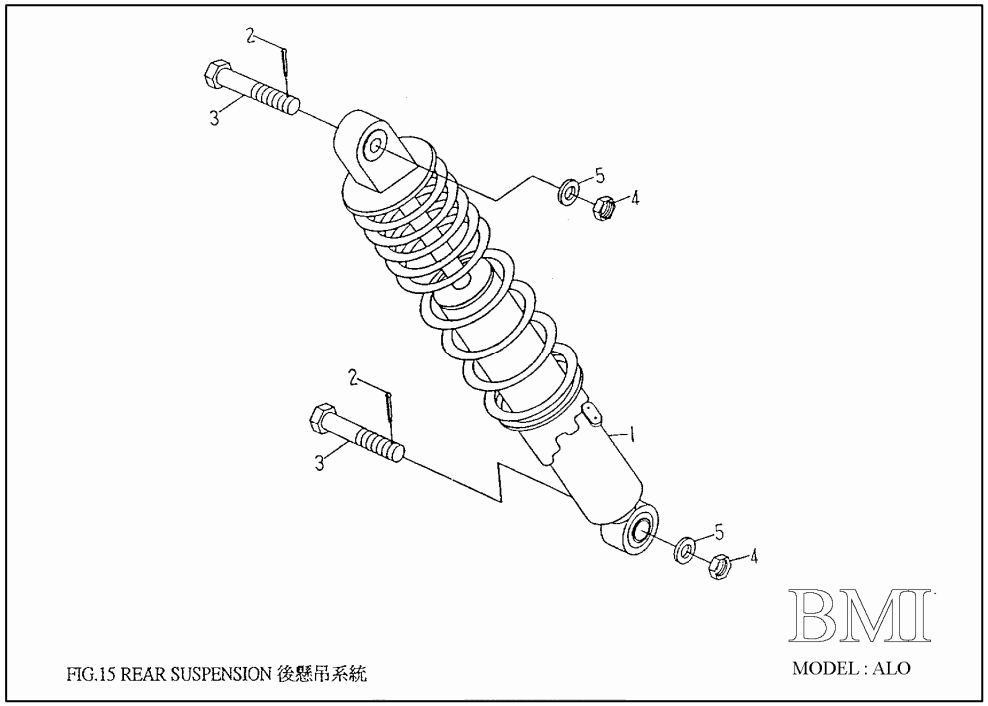


FIG.15 REAR SUSPENSION 後懸吊系統

NO	PARTS NO.	PARTS NAME	Q'TY
1	32210-SK9-00	SHOCK ABSORBER ASS'Y,REAR	1
2	90240-18016-B	PIN.COTTER 1.8*16	2
3	94716-08039-B	BOLT	2
4	95201-081207-B	NUT,HEXAGON	2
5	97201-081823-B	WASHER,PLATE	2

MENU PAGE PAGE UP ▲ PAGE DOWN ▼ ALL PARTS LIST

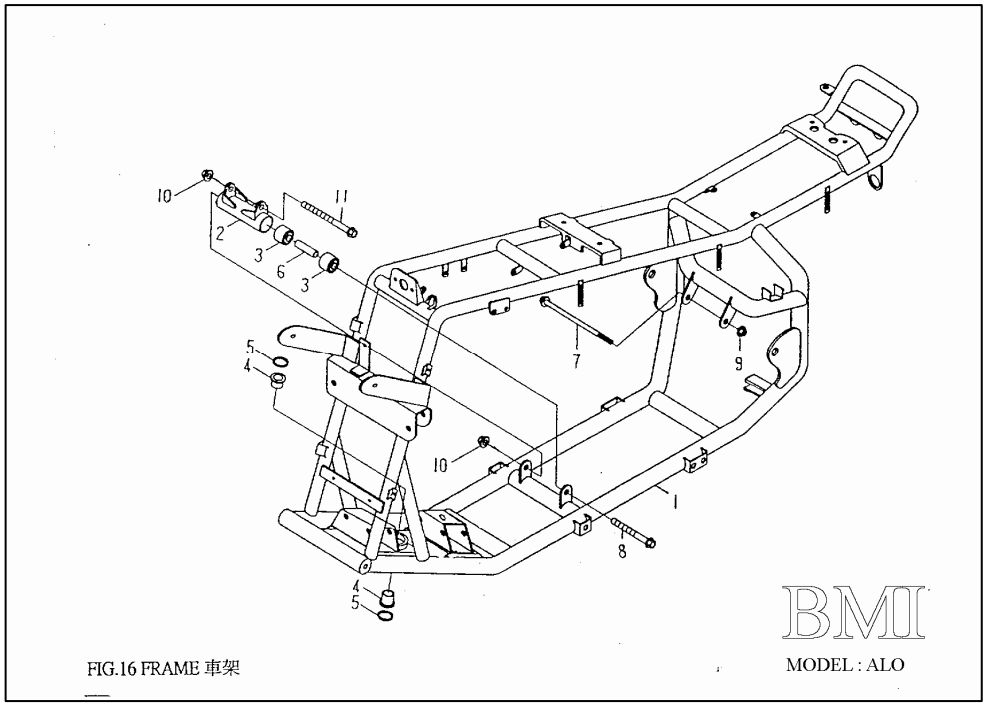


FIG.16 FRAME 車架

NO	PARTS NO.	PARTS NAME	Q'TY
1	41110-BL9-02	FRAME COMP	1
2	41181-SK9-00	ENGINE HANGER F	1
3	41416-SK9-00	BUSH	2
4	46412-RAM-00	BUSH,SOLID	2
5	96210-24148	O-RING,2.4*14.8	2
6	93510-101535-K	COLLAR	1
7	94610-08130-B	BOLT,FLANGE	1
8	94610-10120-B	BOLT,FLANGE	1
9	95401-081208-B	NUT,FLANGE	1
10	95401-101409-B	NUT,FLANGE	2
11	96414-10085-B	BOLT,FLANGE	1

MENU PAGE PAGE UP ▲ PAGE DOWN ▼ ALL PARTS LIST

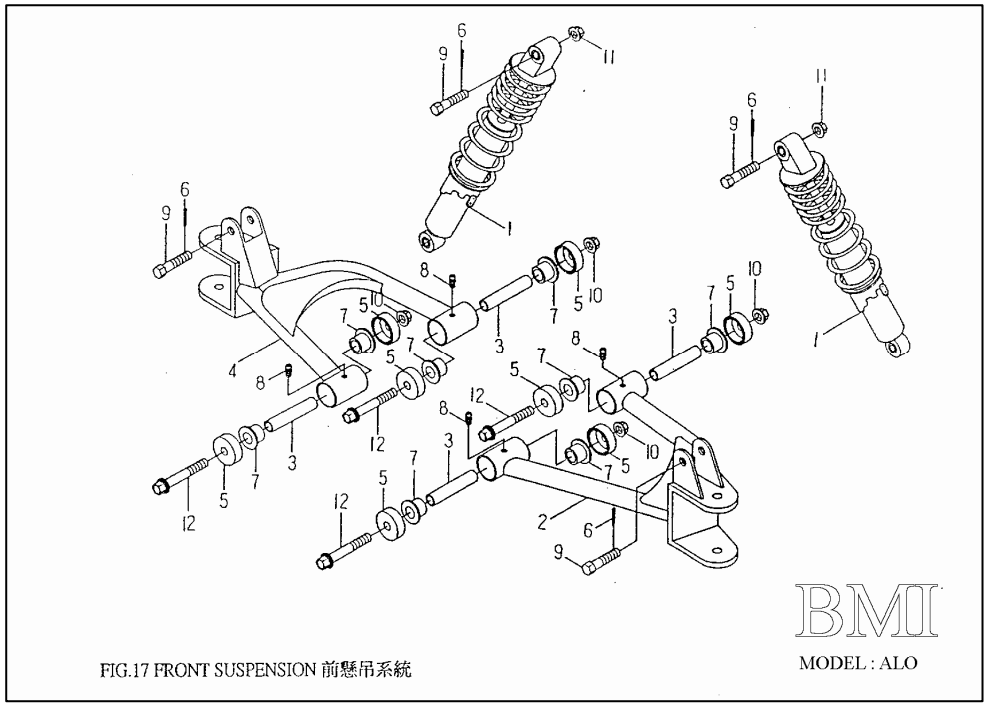


FIG.17 FRONT SUSPENSION 前懸吊系統

MODEL : ALO

NO	PARTS NO.	PARTS NAME	Q'TY
1	42126-SK9-00	SHOCK ABSORBER ASS'Y	2
2	42161-BL9-00	FRT,ARM LEFT	1
3	42163-RAM-00	COLLAR	4
4	42171-BL9-00	FRT,ARM RIGHT	1
5	42183-RAM-00	COVER,THRUST	8
6	90240-23020-B	PIN,COTTER	4
7	93330-152118	BUSH,SOLID	8
8	94340-06010-B	NIPPLE,GREASE M6*P1.0	4
9	94716-10041-B	BLOT,KEYHOLE	4
10	95311-101710-B	NUT,NYLON	4
11	95401-101409-B	NUT,FLANGE	2
12	96414-10080-B	BOLT,FLANGE	4

MENU PAGE PAGE UP ▲ PAGE DOWN ▼ ALL PARTS LIST

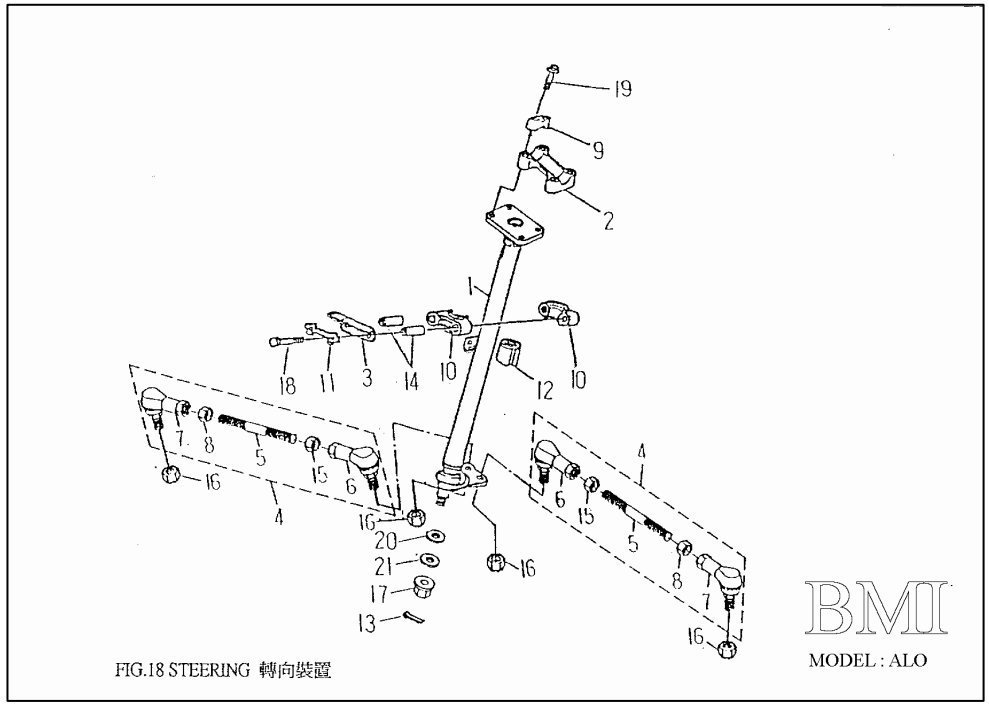


FIG.18 STEERING 轉向裝置

MENU PAGE PAGE UP ▲ PAGE DOWN ▼ ALL PARTS LIST

NO	PARTS NO.	PARTS NAME	Q'TY
1	42101-SK9-02	COLUMN,STEERING	1
2	42106-SK9-00	BRIDGE,TOP	1
3	42118-RAM-00	BRACKET,STRG LOWER	1
4	42140-SK9-01	ROD,TIE ASS'Y	2
5	42141-SK9-01	ROD,TIE	2
6	42142-SK2-00	JOINT,UNIVERSAL 1	2
7	42143-SK2-00	JOINT,UNIVERSAL 2	2
8	42146-SK2-00	NUT	2
9	46125-RAM-00	HOLDER,HANDLE UPR	2
10	46411-RAM-00	BEARING,STEERING	2
11	46416-RAM-00	WASHER,LOCK	1
12	46417-SK9-00	PU,BUSH	1
13	90240-23020-B	PIN,COTTER 2.3*20	1
14	93510-081442-C	COLLAR	2
15	95201-101408-B	NUT,HEXAGON	2
16	95311-101710-B	NUT,NYLON	4
17	95401-101409-B	NUT,FLANGE	1
18	96210-08055-B	BOLT,HEXAGON	2
19	96414-08050-B	BOLT,FLANGE	4
20	97201-102620-B	WASHER,PLATE	1
21	97301-101720-B	WASHER,SPRING	1

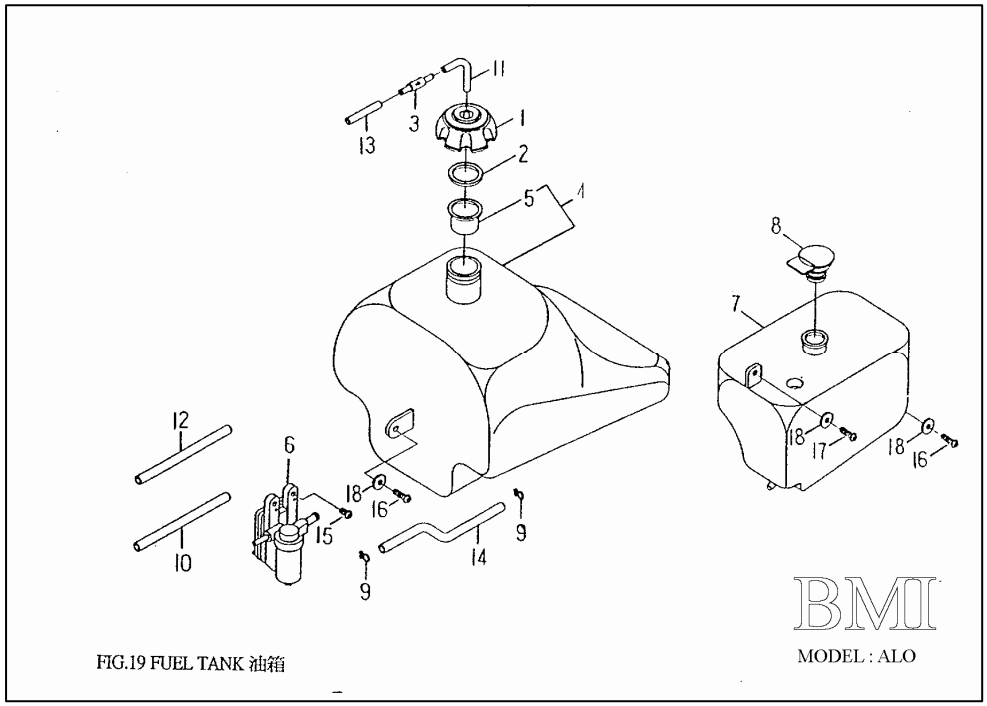


FIG.19 FUEL TANK 油箱

NO	PARTS NO.	PARTS NAME	Q'TY
1	43102-SK9-00	CAP ASS'Y	1
2	43103-SK9-00	CAP WASHER	1
3	43108-SK5-00	CHECK, VALVE	1
4	43110-SK9-01	PETROL TANK	1
5	43114-SK9-00	INTAKE PIPE	1
6	43500-SK9-00	FUEL COCK ASS'Y	1
7	43751-SK9-00	OIL TANK	1
8	43771-NAF-01	BODY,CAP	1
9	90210-12010-C	CLIP 1.2*9.6	2
10	90310-42100	HOSE,VALUUM	1
11	90310-50060	HOSE5*8*60	1
12	90310-50070	HOSE,FUEL5*10*70	1
13	90310-50380	HOSE5*8*380	1
14	90310-60150	HOSE,FUEL6*10.5*150	1
15	90310-06012-B	SCREW,PAN HEAD	2
16	90310-06016-C	SCREW,PAN HEAD	2
17	90310-06025-C	SCREW,PAN HEAD	1
18	97201-061820-B	WASHER PLATE	3

MENU PAGE PAGE UP ▲ PAGE DOWN ▼ ALL PARTS LIST

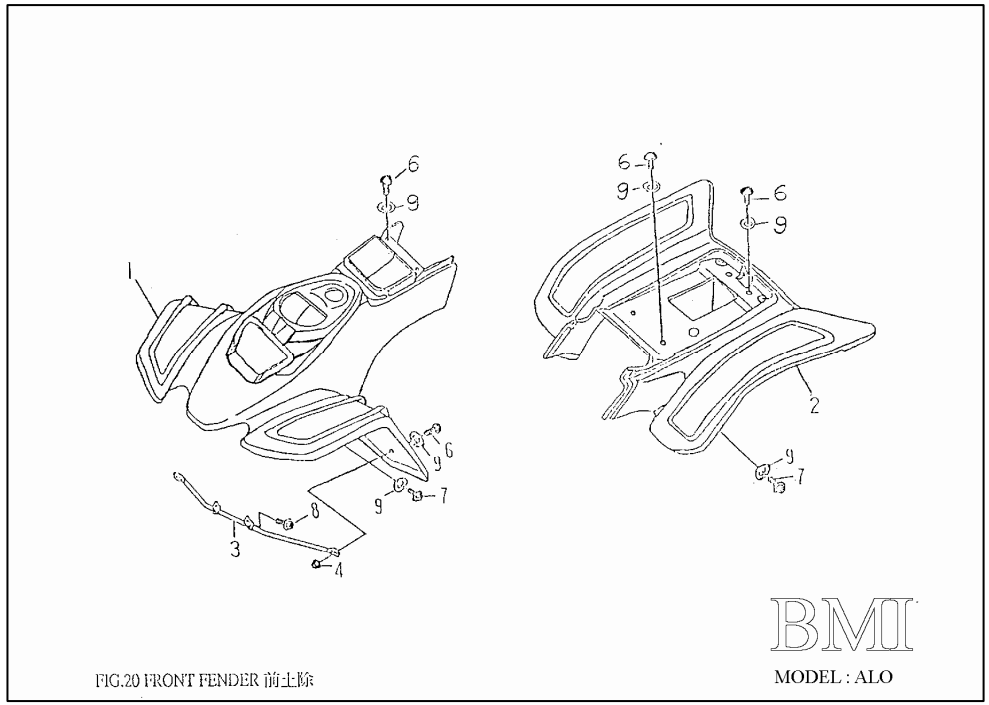


FIG.20 FRONT FENDER 前土除

MODEL : ALO

NO	PARTS NO.	PARTS NAME	Q'TY
1	51161-ALO-00	COVER,FRONT ROUGE	1
	51161-ALO-0004	COQUE AV BLEUE	1
2	51171-BL9-00	COVER,REAR ROUGE	1
	51171-BL9-0004	COQUE AR BLEUE	1
3	51556-BL9-00	STAY,FRONT COVER	1
4	95401-061006-B	NUT,FLANGE	2
5	96318-06015-B	SCREW PAN HEAD	10
6	96318-06020-B	SCREW PAN HEAD	2
7	96414-06012-B	BOLT,FLANGE	2
8	97321-061825-B	WASHER,FLANG	12
9	56811-ALO-00	KIT DECO PYTHON	1

MENU PAGE PAGE UP ▲ PAGE DOWN ▼ ALL PARTS LIST

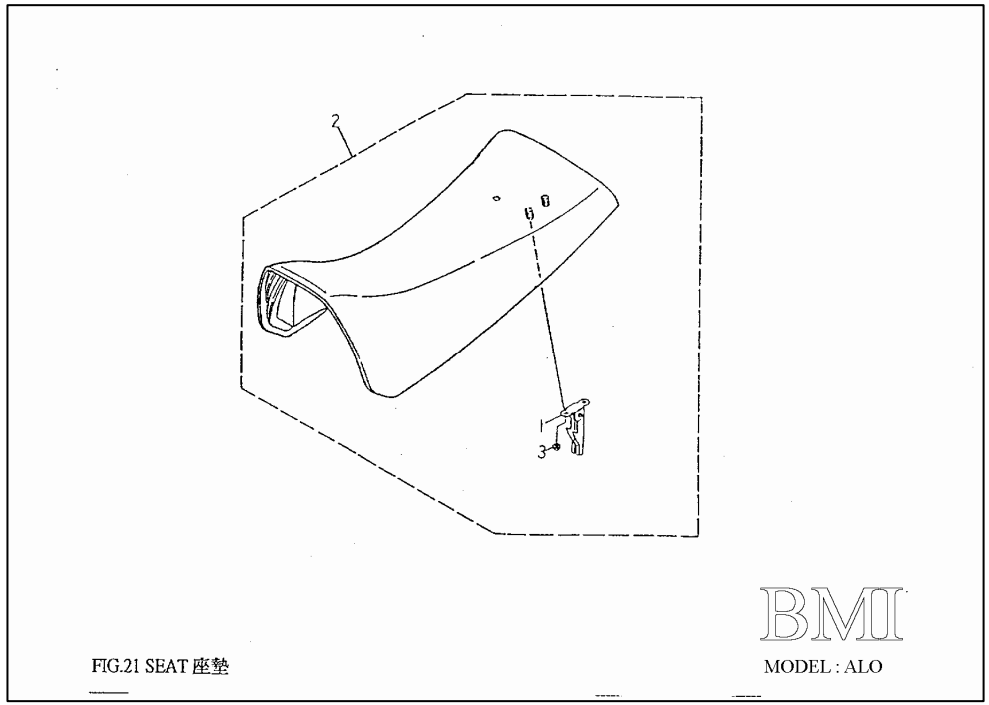


FIG.21 SEAT 座墊

MODEL : ALO

NO	PARTS NO.	PARTS NAME	Q'TY
1	52710-RAM-00	CATCH COM,SEAT	1
2	52730-SK9-001	SINGLE SEAT ASS'Y	1
3	95401-061006-C	NUT,FLANGE	2

MENU PAGE PAGE UP ▲ PAGE DOWN ▼ ALL PARTS LIST

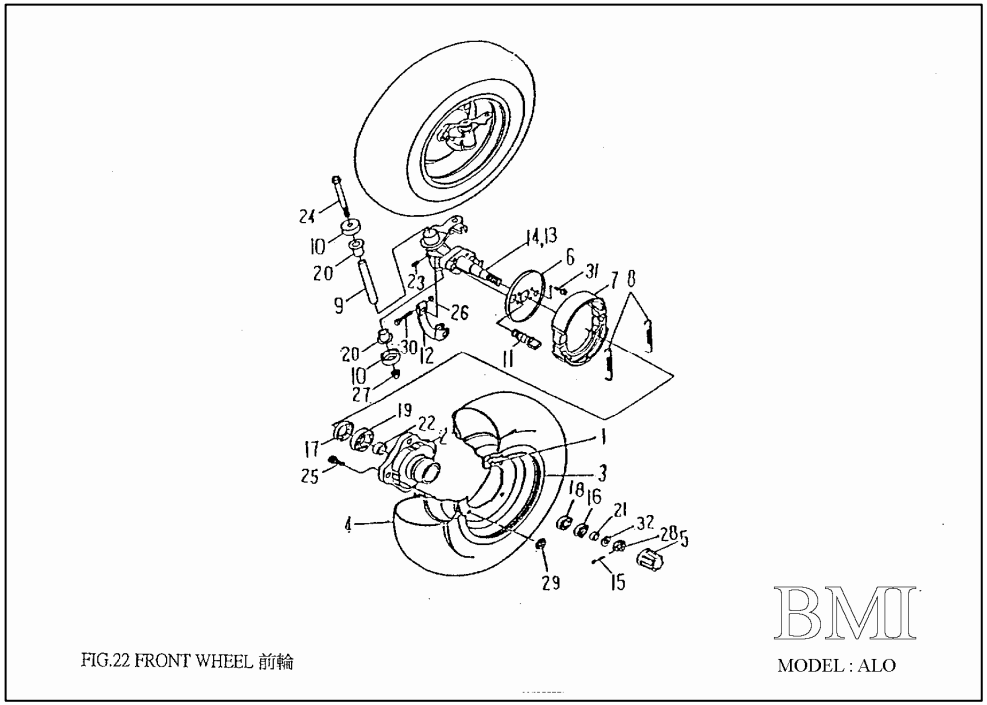


FIG.22 FRONT WHEEL 前輪

MENU PAGE PAGE UP ▲ PAGE DOWN ▼ ALL PARTS LIST

NO	PARTS NO.	PARTS NAME	Q'TY
1	42570-RAM-00	VALVE,RIM	2
2	42581-SK9-00	HUB,FRONT	2
3	42582-SK5-00	WHEEL,FRONT8.0*5.5AT	2
4	42590-SK5-00	TIRE,FRONT AT19*7-8(HF-247)13F	2
5	42595-SK9-00	CAP,WHEEL	2
6	45811-SK9-00	PLATE,BRAKE SHOE	2
7	45815-SK9-00	BRAKE SHOE SET	2
8	45816-SK9-00	SPRING TENSION	4
9	45825-SK9-00	COLLAR	2
10	45827-SK9-00	COVER,THRUST	4
11	45851-SK9-00	CAMSHAFT	2
12	45855-SK9-00	LEVER,CAMSHAFT	2
13	45860-SK9-00	KNUCKLE COMP,STEERING L	1
14	45865-SK9-00	KNUCKLE COMP,STEERING R	1
15	90240-29025-B	PIN,COTTER2.9*25	2
16	93110-20335	OIL SEAL20*35*5	2
17	93110-22406	OIL SEAL22*40*6	2
18	93320-153511S	BEARING,RADIAL BALL 6202CS05/2A	2
19	93220-174012S	BEARING,RADIAL BALL 6203CS05/2A	2
20	93330-172330	BUSH,SOLID	4
21	93510-152008-B	COLLAR	2
22	93510-172209-B	SPACER,BEARING	2
23	94340-06010-B	NIPPLE,GREASE	2
24	94610-10100-B	BOLT,FLANGE	2
25	94710-10025-C	BOLT,STUD	8
26	95201-050804-B	NUT,HEXAGON	2
27	95311-101710-B	NUT,NYLON	2
28	95321-142215-C	NUT,CASTLE	2
29	95401-101409-C	NUT,FLANGE	8
30	96210-05025-B	BOLT,HEXAGON	2
31	96510-06012-K	BOLT,SOCKET	6
32	97201-142820-C	WASHER,PLATE14.2*28.4*2	2

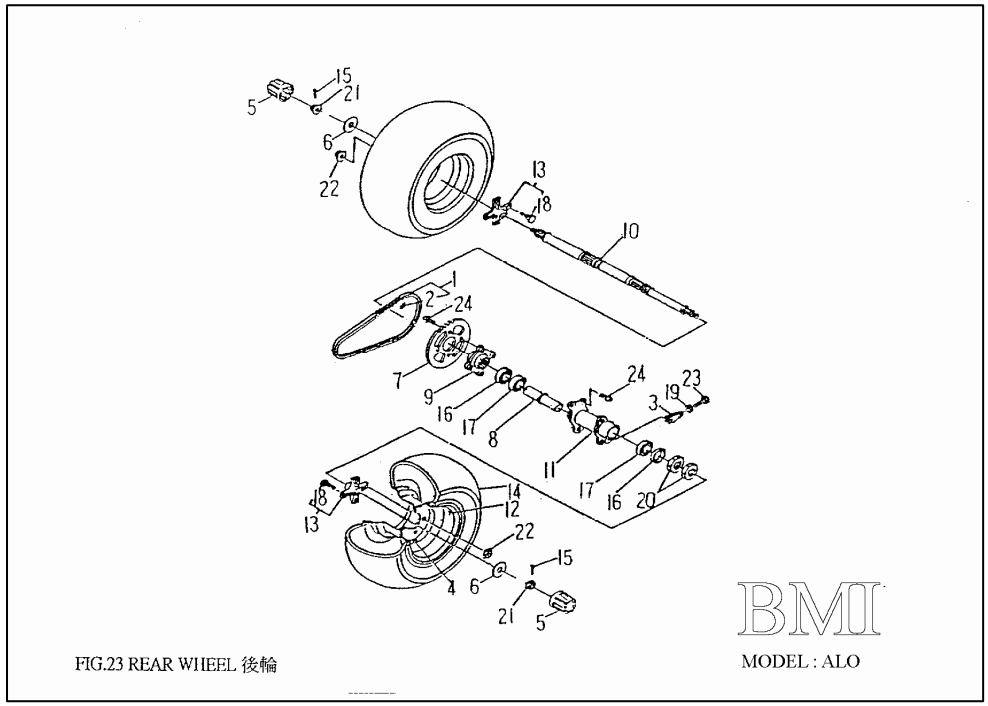


FIG.23 REAR WHEEL 後輪

MENU PAGE PAGE UP ▲ PAGE DOWN ▼ ALL PARTS LIST

NO	PARTS NO.	PARTS NAME	Q'TY
1	25741-SK9-00	CHAIN 428HG*88L	1
2	25742-SK9-00	JOINT,CHAIN	1
3	32120-RAM-00	ADJUSTER,CHAIN	2
4	42570-RAM-00	VALVE,RIM	2
5	42595-SK9-00	CAP,WHEEL	2
6	42596-SK9-00	WHEEL,CAP	2
7	42812-SK9-00	SPROCKET,DRIVEN 428-35T	1
8	42815-SK9-00	SPACER,BEARING	1
9	42821-SK9-00	COLLAR,SPROCKET AXLE	1
10	42835-SK9-00	AXLE,WHEEL	1
11	42881-SK9-00	HUB,REAR	1
12	42882-SK5-00	WHEEL,REAR8.0*5.5AT	2
13	42885-SK9-00	COLLAR,WHEEL	2
14	42590-SK5-00	TIRE,REAR AT19*7-8(HF-247)13F	2
15	90240-29025-B	PIN,COTTER2.9*25	2
16	93110-42558	OIL SEAL 42*55*8	2
17	93320-305513Z	BEARING,RSDIAL BALL 6006Z	2
18	94710-10032-C	BOLT,STUD	8
19	95201-081207-B	NUT,HEXAGON	2
20	95201-284114-C	NUT,HEXAGON	2
21	95321-142215-C	NUT,CASTLE	2
22	95401-101409-C	NUT,FLANGE	8
23	96210-08055-B	BOLT,HEXAGON	2
24	96414-10020-B	BOLT,FLANGE	8

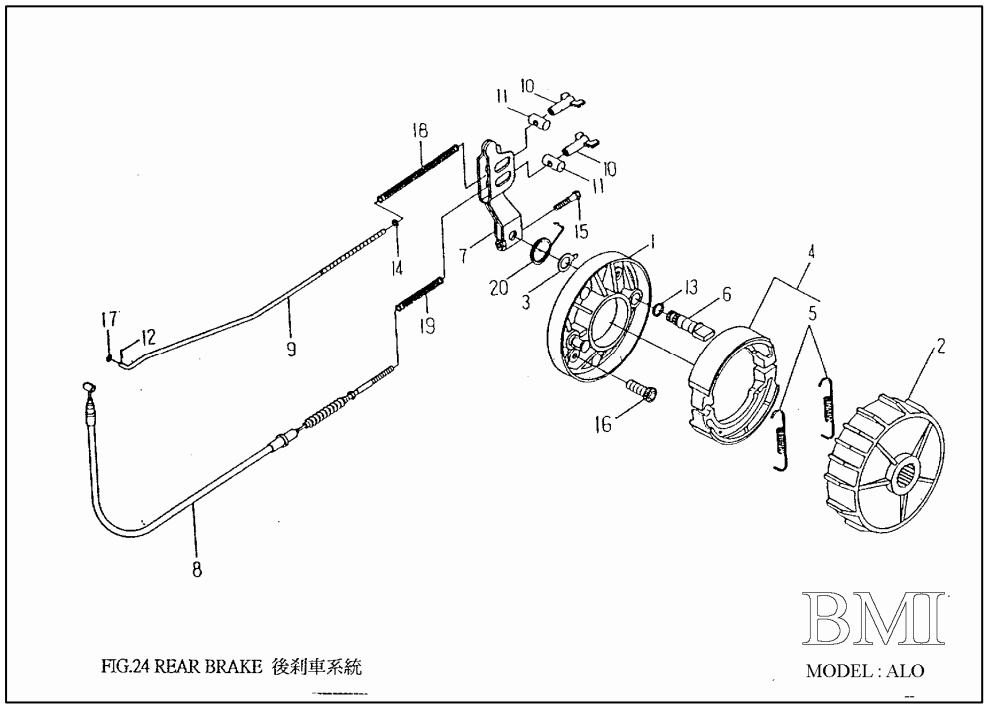


FIG.24 REAR BRAKE 後剎車系統

MODEL : ALO

MENU PAGE PAGE UP ▲ PAGE DOWN ▼ ALL PARTS LIST

NO	PARTS NO.	PARTS NAME	Q'TY
1	32310-BL9-00	PANEL,REAR BRAKE	1
2	32320-BL9-00	HUB,REAR BRAKE	1
3	32331-NAF-00	INDICATOT	1
4	32345-SK9-00	BRAKE SHOE KIT	1
5	32346-SK9-00	SPRING,TENSION	2
6	32351-SK9-00	CAMSHAFT	1
7	32355-SK9-00	LEVER,CAMSHAFT	1
8	61320-SK9-01	CABLE,BRAKE	1
9	61330-SK9-00	CABLE,BRAKE	1
10	61379-SK9-00	NUT,ADJUST	2
11	61389-NAF-00	PIN,FIXTURE	2
12	90230-12008	COTTER PIN	1
13	93210-13113	O-RING	1
14	95201-061005-B	NUT,HEXAGON	1
15	96210-06030-B	BOLT,HEXAGON	1
16	96510-06012-K	BOLT,SOCKET	2
17	97201-051410-B	WASHER,PLATE5.5*14*1	1
18	97501-10093-B	SPRING COMPRESSION	1
19	97501-12115-B	SPRING COMPRESSION	1
20	97508-26286-B	SPRING TORSION	1

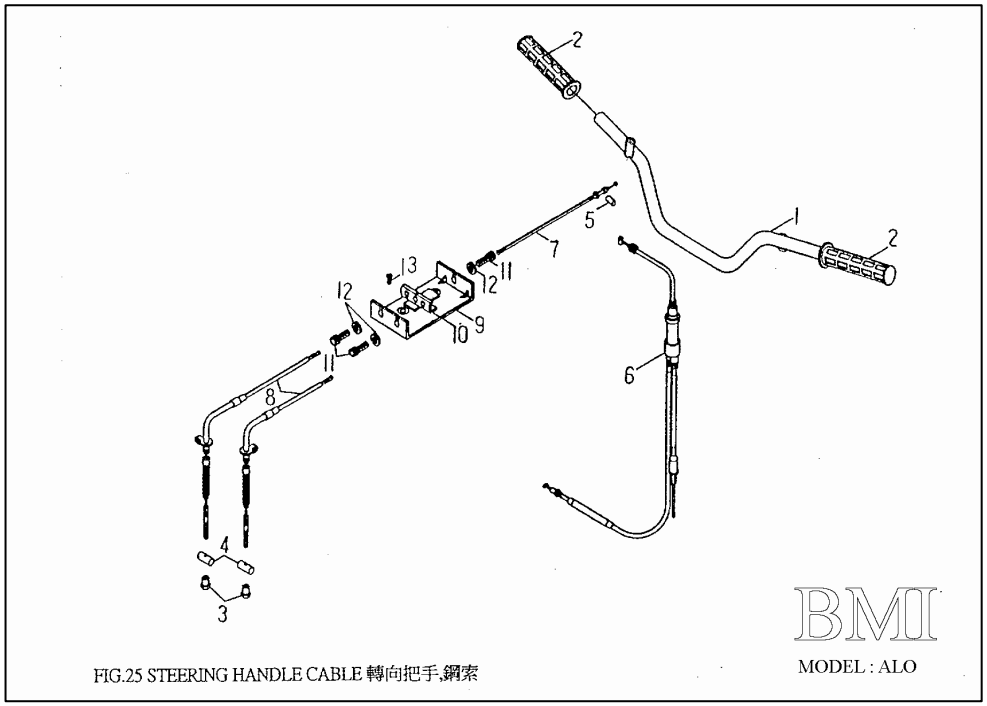


FIG.25 STEERING HANDLE CABLE 轉向把手,鋼索

NO	PARTS NO.	PARTS NAME	Q'TY
1	46110-SK9-01	HANDLEBAR	1
2	46240-RAM-00	GRIP	2
3	61379-NAF-01	NUT, ADJUST	2
4	61389-NAF-00	PIN, FIXTURE	2
5	61389-RAM-00	PIN, FIXTURE	1
6	61620-SK9-00	CABLE, THROTTLE	1
7	61811-SK9-00	CABLE, BRAKE UPPER	1
8	61812-SK9-00	CABLE, BRAKE LWR	2
9	61861-RAM-00	CABLE, PAN CONNECTOR	1
10	61863-RAM-00	SLIDER, CONNECTOR	1
11	62916-RAM-00	BOLT, WIRE ADJUSTING	3
12	62917-RAM-00	NUT, WIRE ADJUSTING	3
13	94712-06012-B	SCREW, FLAT HEAD	1

MENU PAGE PAGE UP ▲ PAGE DOWN ▼ ALL PARTS LIST

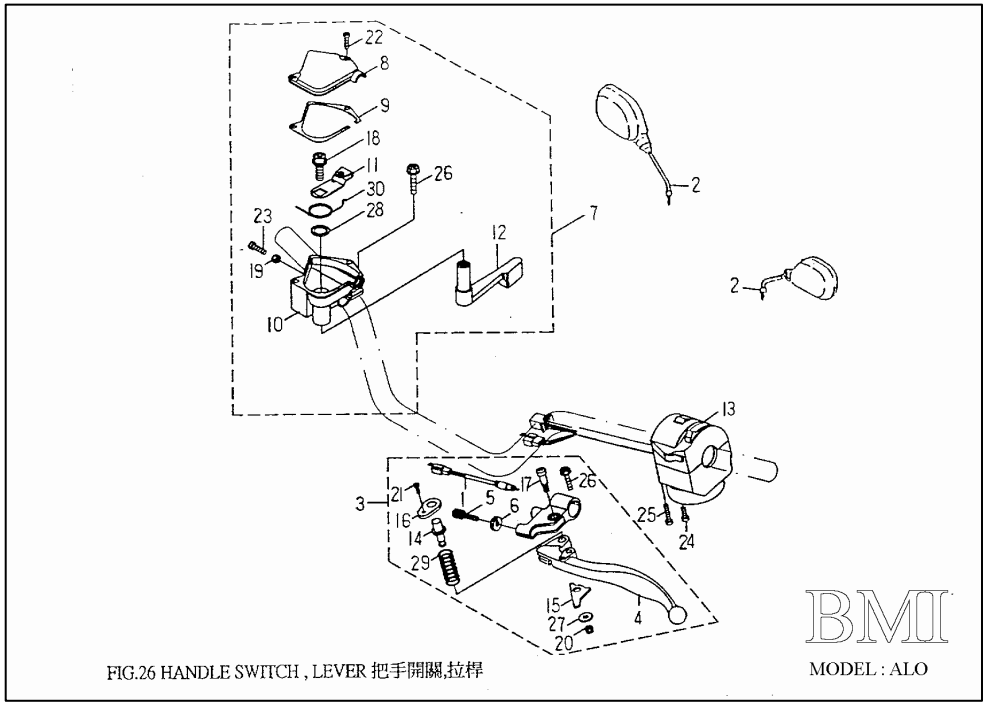


FIG.26 HANDLE SWITCH , LEVER 把手開關,拉桿

MODEL : ALO

MENU PAGE PAGE UP ▲ PAGE DOWN ▼ ALL PARTS LIST

NO	PARTS NO.	PARTS NAME	Q'TY
1	45890-SK9-00	FRONT STOP SWITCH	1
2	56270-ROA-00	MIRROW ASS'Y, HANDLEL	1
3	62910-SK9-02	LEVER ASS'Y, HANDLEL	1
4	62912-SK9-02	LEVER, L	1
5	62916-RAM-00	BOLT, WIRE ADJUSTING	1
6	62917-RAM-00	NUT, WIRE ADJUSTING	1
7	62920-SK9-01	THROTTLE LEVER ASS'Y	1
8	62923-RAM-00	CAP, THROTTLE	1
9	62924-RAM-00	GASKET, THROTTLE	1
10	62925-RAM-00	THROTTLE LEVER	1
11	62927-RAM-00	ARM, THROTTLE	1
12	62928-RAM-00	LEVER, THROTTLE	1
13	62930-SK9-03	HANDLE SWITCH ASS'Y L	1
14	62971-RAM-00	PIN, LOCK	1
15	62973-RAM-00	LOCK, LEVER	1
16	62976-RAM-00	COVER	1
17	94710-06031-G	BOLT, LEVER	1
18	94714-08012-G	BOLT	1
19	95201-050804-G	NUT, HEXAGON	1
20	95311-061006-K	NUT, NYLON	1
21	96310-03008-B	SCREW, PAN HEAD	1
22	96310-04015-G	SCREW, PAN HEAD	2
23	96310-05025-G	SCREW, PAN HEAD	2
24	96310-05030-G	SCREW, PAN HEAD	1
25	96310-05040-G	SCREW, PAN HEAD	1
26	96510-06020-G	BOLT, SOCKER	1
27	97201-061210-C	WASHER, PLATE 6.2*11.5*1.0	1
28	97201-142016-C	WASHER, PLATE 14.2*19.7*1.6	1
29	97501-08025-B	SPRING	1
30	97508-10240-B	SPRING	1


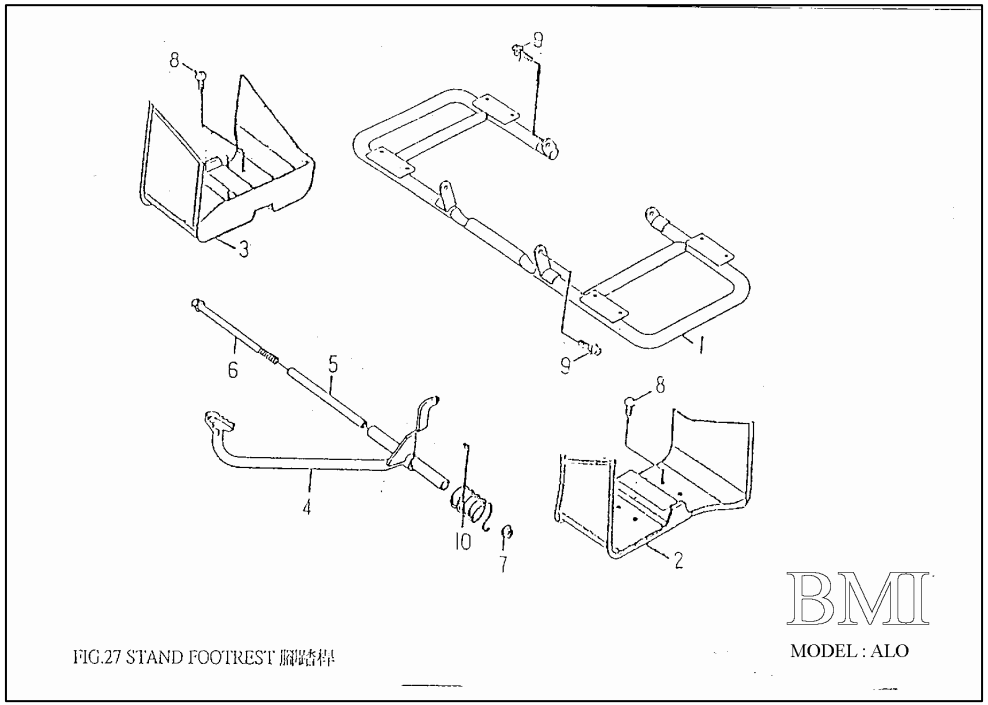


FIG.27 STAND FOOTREST 腳踏桿

NO	PARTS NO.	PARTS NAME	Q'TY
1	53231-BLU-00	FOOTREST	1
2	53235-SK9-01	MUDGUARD L	1
3	53245-SK9-01	MUDGUARD R	1
4	53261-SK9-01	PEDAL, BRAKE	1
5	53263-SK9-00	COLLAR	1
6	94610-10208-B	SHAFT, PIVOT	1
7	95401-101409-B	NUT, FLANGE	1
8	96318-06015-K	SCREW, PAN HEAD	8
9	96414-08016-B	BOLT, FLANGE	4
10	97508-32292	SPRING, TORSION	1
11	97506-12140-B	SPRING, TENSION	1
12	62980-CHP-00	SWITCH ASS'Y, REAR STOP	1

MENU PAGE PAGE UP ▲ PAGE DOWN ▼ ALL PARTS LIST

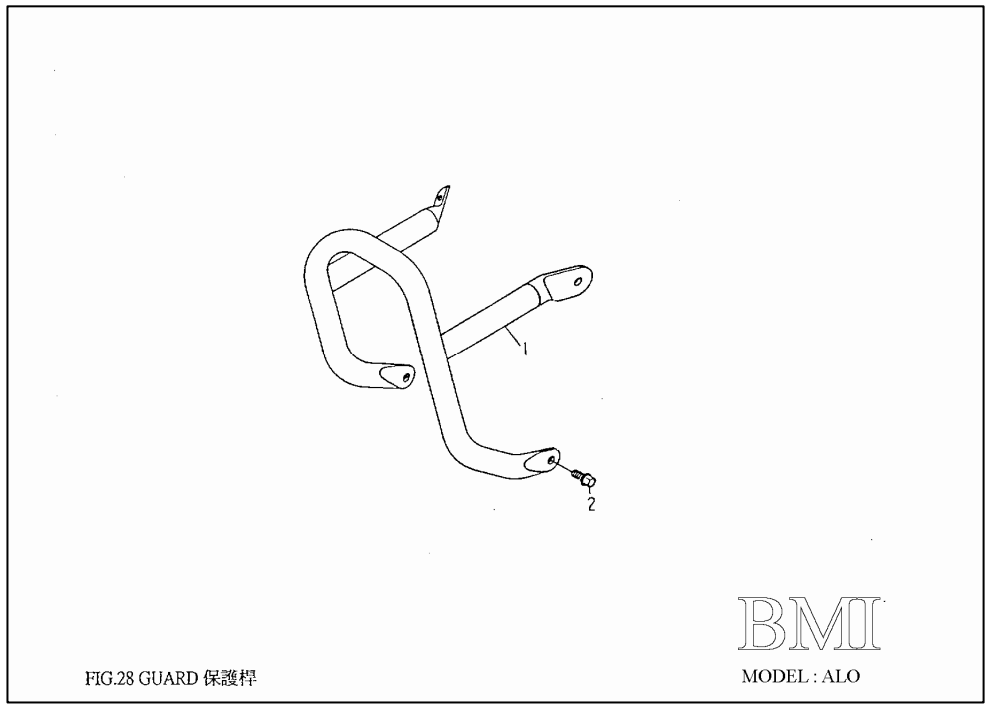

NO	PARTS NO.	PARTS NAME	Q'TY
1	41601-SK9-01	SHIELD, FRONT	1
2	96414-08012-B	BOLT, FLANGE	4

MENU PAGE PAGE UP ▲ PAGE DOWN ▼ ALL PARTS LIST


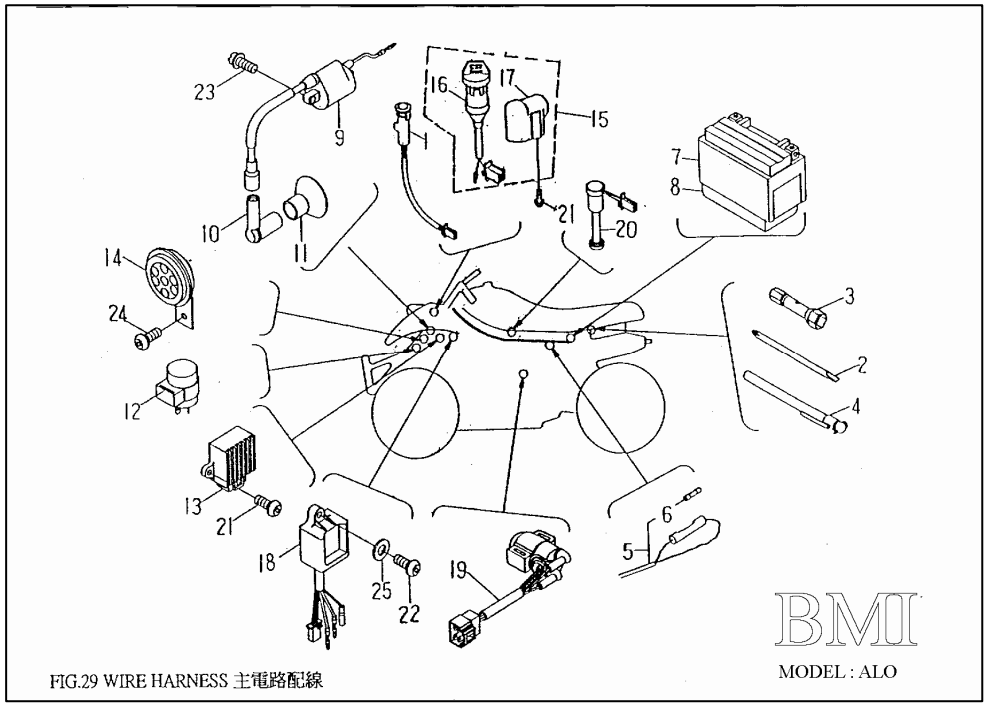


FIG.29 WIRE HARNESS 主電路配線


MENU PAGE PAGE UP ▲ PAGE DOWN ▼ ALL PARTS LIST

NO	PARTS NO.	PARTS NAME	Q'TY
1	55555-SK9-00	OIL LIGHT ASS'Y	1
2	56120-NAF-00	SCREW DRIVER	1
3	56140-SK9-00	TOOL PLUG	1
4	56190-RAM-00	GAUGE, AIR	1
5	61120-SK9-02	WIRE, HEADNESS	1
6	61151-NAF-00	FUSE	1
7	62100-NAF-00	BATTERY ASS'Y (YTX5L-BS)	1
8	62111-SK9-00	BATTERY PACKING	1
9	62310-NAF-00	IGNITIN COIL ASS'Y	1
10	62320-NAF-00	PLUG CAP ASS'Y	1
11	62322-NAF-00	SEAL, PLUG CAP	1
12	62350-NAF-01	FLASHER RELAY ASS'Y	1
13	62360-NAF-00	RECTIFIER & REGULATOR COMP	1
14	62370-NAF-00	HORN	1
15	62500-SK9-00	KEY SET	1
16	**62501-SK9-00**		1
17	**62503-RAM-00**		1
18	62540-NAF-00	C.D.I UNIT ASS'Y	1
19	62550-SK9-00	STARTER RELAY SWITCH COMP	1
20	62720-NAF-00	OIL LEVER GAUGE ASS'Y	1
21	96310-05012-B	SCREW, PAN HEAD 5*12	4
22	96310-05016-B	SCREW, PAN HEAD 5*16	1
23	96312-06020-C	SCREW, PAN HEAD WITH WASHER	2
24	96414-06010-C	BOLT, FLANGE	1
25	97201-051410-B	WASHER, PLATE	1

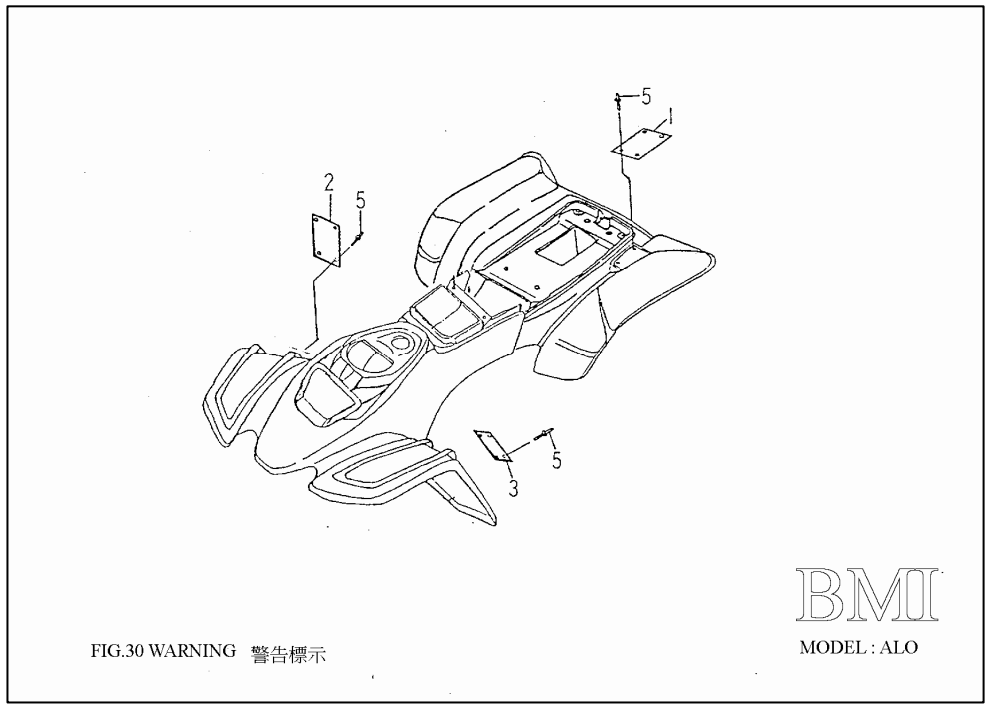

NO	PARTS NO.	PARTS NAME	Q'TY
1	56576-AK9-00	LABEL WARNING 3 (TIRE)	1
2	56578-AKO-00	LABEL WARNING 2 (AGE)	1
3	56781-AK9-00	LABEL WARNING 1 (OPERATION)	1
4	94230-32096	RIVET 3.2*9.6	12

MENU PAGE PAGE UP ▲ PAGE DOWN ▼ ALL PARTS LIST

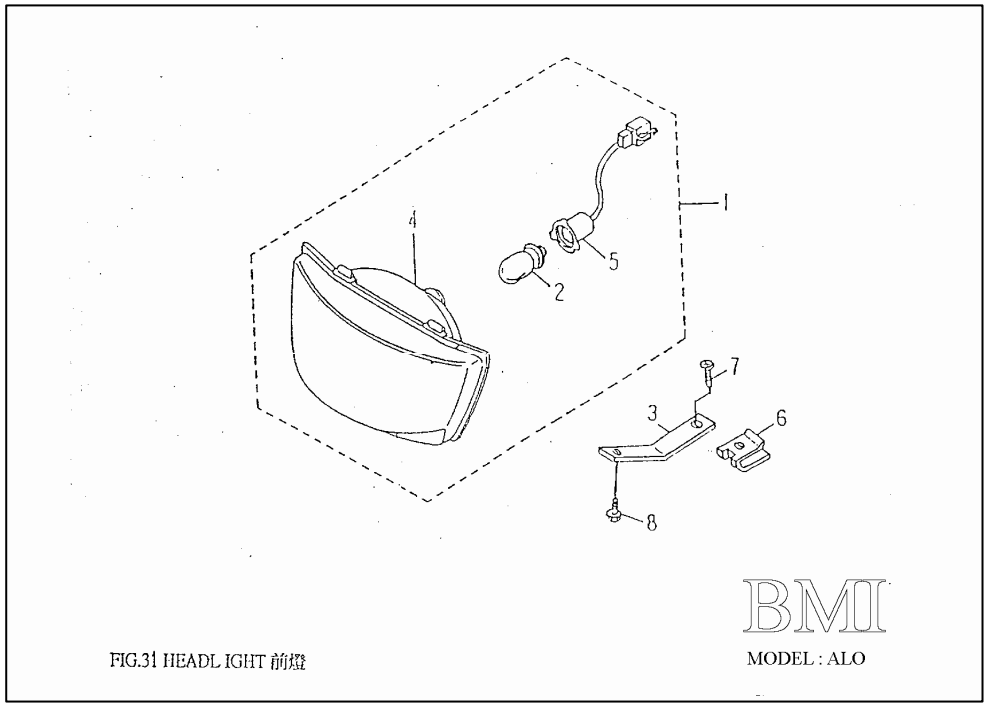

NO	PARTS NO.	PARTS NAME	Q'TY
1	55300-STG-00	HEAD LIGTH ASS'Y	1
2	55314-STG-00	BULB, HEAD LIGHT 12V30/30W	1
3	55315-AL9-00	STAY, HEAD LIGHT	1
4	55320-STG-00	LENS ASS'Y	1
5	55340-STG-00	SOCKET CORD ASS'Y	1
6	95101-05012	NUT, SPRING	1
7	96112-51616-K	SCREW, TAPPING	1
8	96310-04010-B	SCREW, PAN HEAD	1
9	97201-051410-B	WASHER,PLATE 5*14*1.0	1

MENU PAGE PAGE UP ▲ PAGE DOWN ▼ ALL PARTS LIST

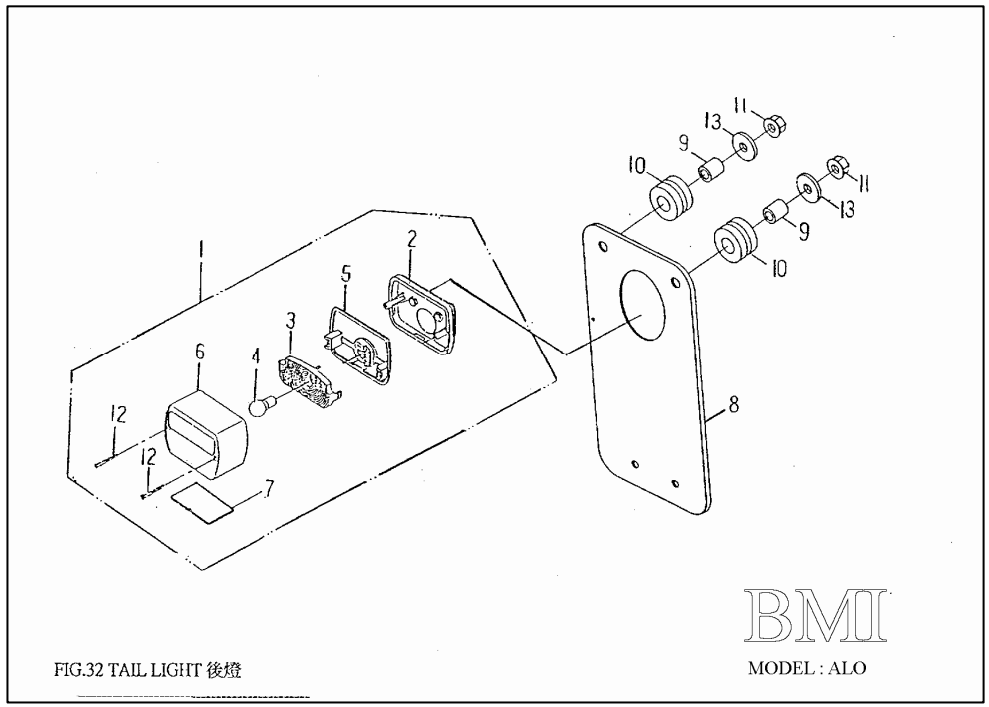


FIG.32 TAIL LIGHT 後燈

MODEL : ALO

NO	PARTS NO.	PARTS NAME	Q'TY
1	55700-CHP-00	TAIL LIGHT ASS'Y	1
2	55701-CHP-00	STAND, TAIL LIGHT	1
3	55 713-PAF-00	BULB STAND, TAIL LIGHT	1
4	55714-PAF-00	BULB, TAIL LIGHT (12V21/5W)	1
5	55715-PAF-00	FIXING WASHER	1
6	55721-PAF-00	LENS, TAIL LIGHT	1
7	55743-PAF-00	LENS, LICENCE LIGHT	1
8	55751-SK9-00	BRACKET, LICENCE	1
9	93510-061010	COLLAR	2
10	93580-102212	GROMMET	2
11	95401-061006-B	NUT, FLANGE	2
12	96112-43818-B	SCREW, TAPPING	2
13	97201-061820-B	WASHER, PLATE	2

MENU PAGE PAGE UP ▲ PAGE DOWN ▼ ALL PARTS LIST

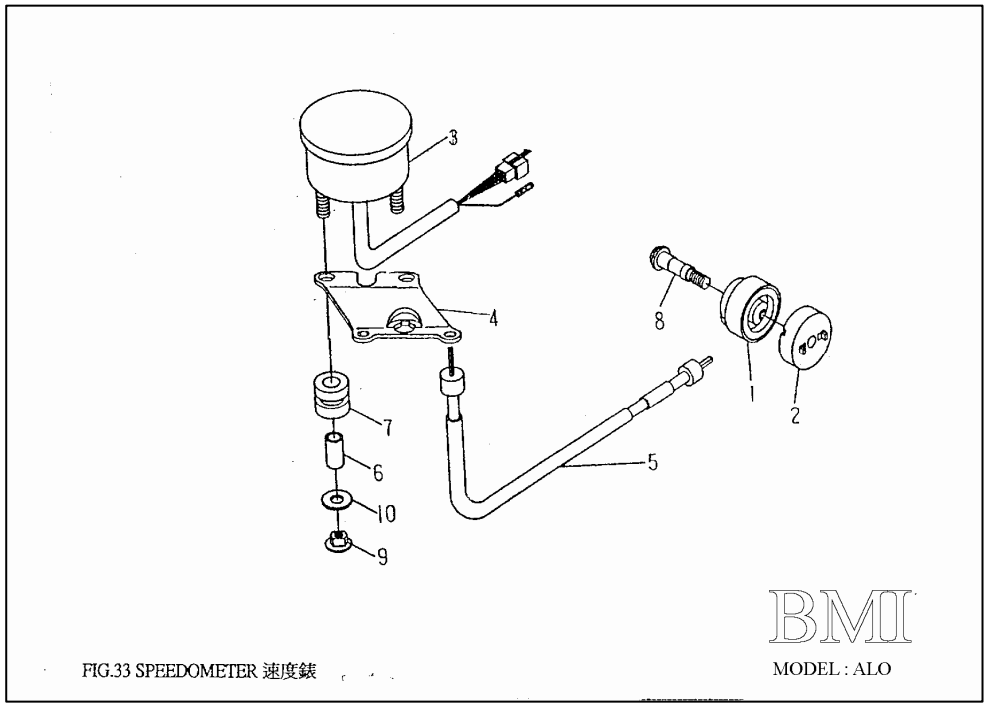


FIG.33 SPEEDOMETER 速度錶

NO	PARTS NO.	PARTS NAME	Q'TY
1	42560-SK9-00	GEAR UNIT ASS'Y (17/10T)	1
2	42566-SK9-00	GEAR PLATE	1
3	55510-SK9-00	SPEEDOMETER ASS'Y	1
4	55516-SK9-00	HOLDER, SPEEDOMETER	1
5	61520-NDF-00	SPEEDOMETER CABLE ASS'Y	1
6	93510-050814-B	COLLAR, SPEEDOMETER	2
7	93580-81615	GROMMET, SPEEDOMETER	2
8	94706-08045-B	PIN, GEAR UNIT	1
9	95401-050805-B	NUT, FLANGE	2
10	97201-051610	WASHER, PLATE 5.5*16*1	2

MENU PAGE PAGE UP ▲ PAGE DOWN ▼ ALL PARTS LIST

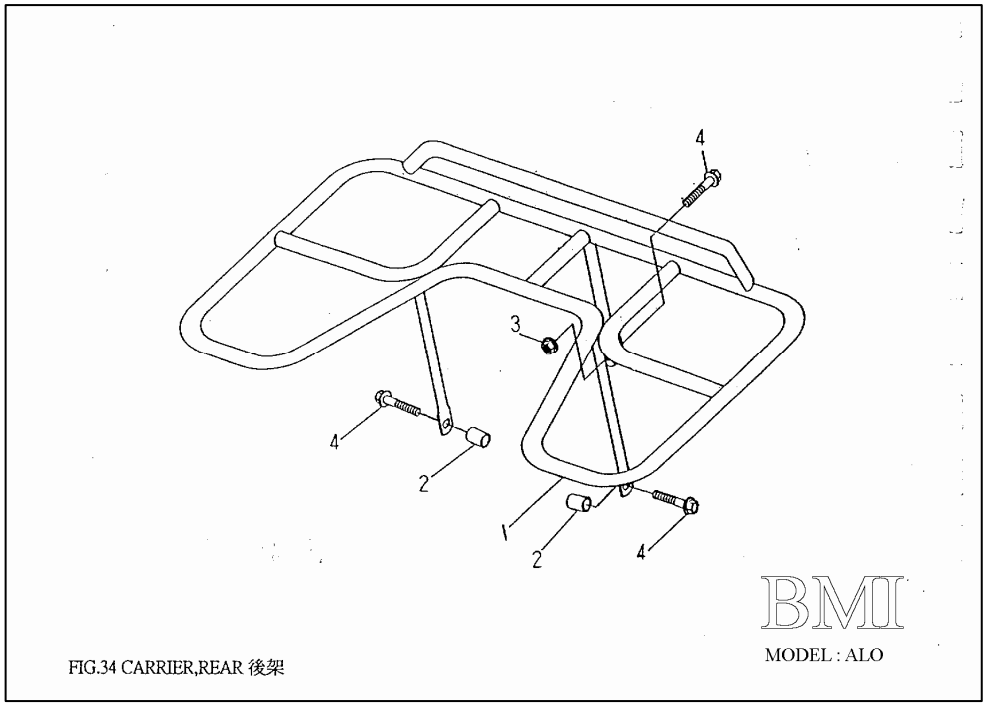


FIG.34 CARRIER,REAR 後架

NO	PARTS NO.	PARTS NAME	Q'TY
1	52820-BL9-00	CARRIER, REAR	1
2	93510-081425-K	COLLAR	2
3	95401-081208-B	NUT, FLANGE	1
4	96414-08040-B	BOLT, FLANGE	3

MENU PAGE PAGE UP ▲ PAGE DOWN ▼ ALL PARTS LIST