

CONTENTS

<i>1, ABOUT THIS PARTS LIST.....</i>	<i>2</i>
<i>2, CONTENTS-ENGINE GROUP.....</i>	<i>3</i>
<i>3, CONTENTS-FRAME GROUP.....</i>	<i>5</i>
<i>4, ENGINE PARTS LIST.....</i>	<i>9</i>
<i>5, FRAME PARTS LIST.....</i>	<i>34</i>










ABOUT THIS PARTS LIST

- THIS PARTS LIST IS COMPILED FOR ALL SERVICE PARTS FOR MODEL **CPI ATV 110 SERIES**.
- ANY DIFFERENCE BETWEEN COLOR CHART AND **ATV** WILL BE REVISED ACCORDING TO **ATV**.
- WHEN MODIFICATION OR ADDITIONS TO THIS PARTS LIST ARE MADE A REVISED EDITION WILL BE ISSUED AT AN APPROPRIATE TIME.

0089062800

CONTENTS-ENGINE GROUP		ATV 110
E1 CYLINDER	E2 PISTON CRANKSHAFT	E3 FAN AIR SHROUD
E4 OIL PUMP	E5 INTAKE	E6 CARBURETOR
E7 CRANKCASE	E8 STARTER	E9 CLUTCH


E10	GENERATOR	E11	STARTING MOTOR	E12	TRANSMISSION
E13	ENGINE BRACKET				

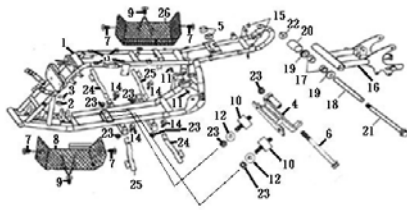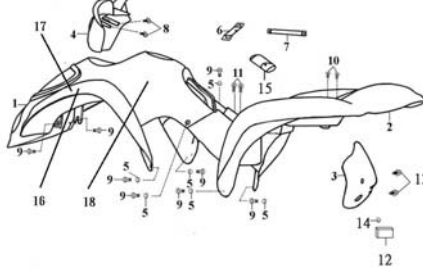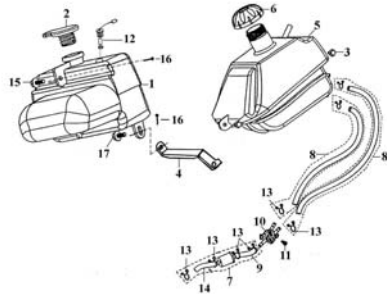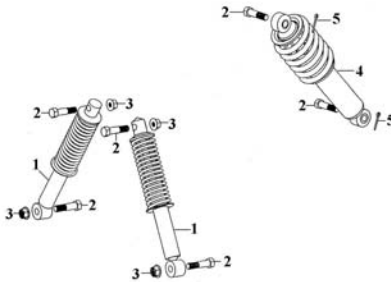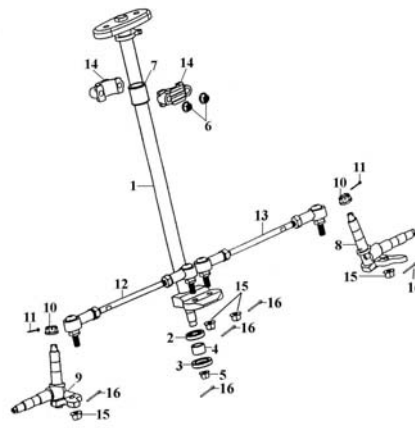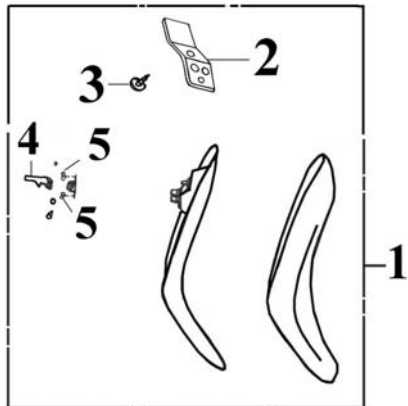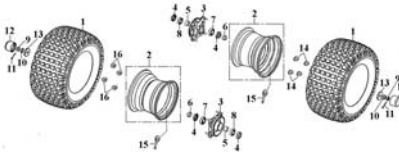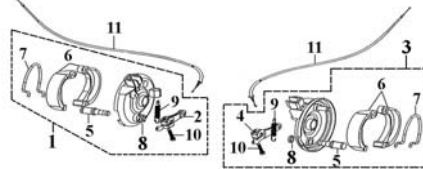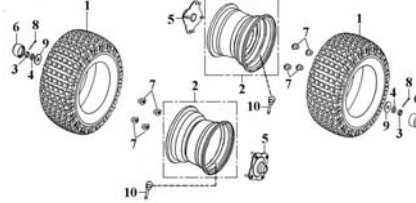CONTENTS-FRAME GROUP		ATV 110			
F1	FRAME BODY	F2	SIDE COVER	F3	OIL TANK / FUEL TANK
					
F4	SUSPEN SION	F5	STEERING	F6	SEAT ASSY
					
F7	FRONT WHEEL	F8	FRONT BRAKE	F9	REAR WHEEL
					

ENGINE CPI PARTS LIST

61K-00320-00-00

930423




|

E1

CYLINDER

ATV 110CC

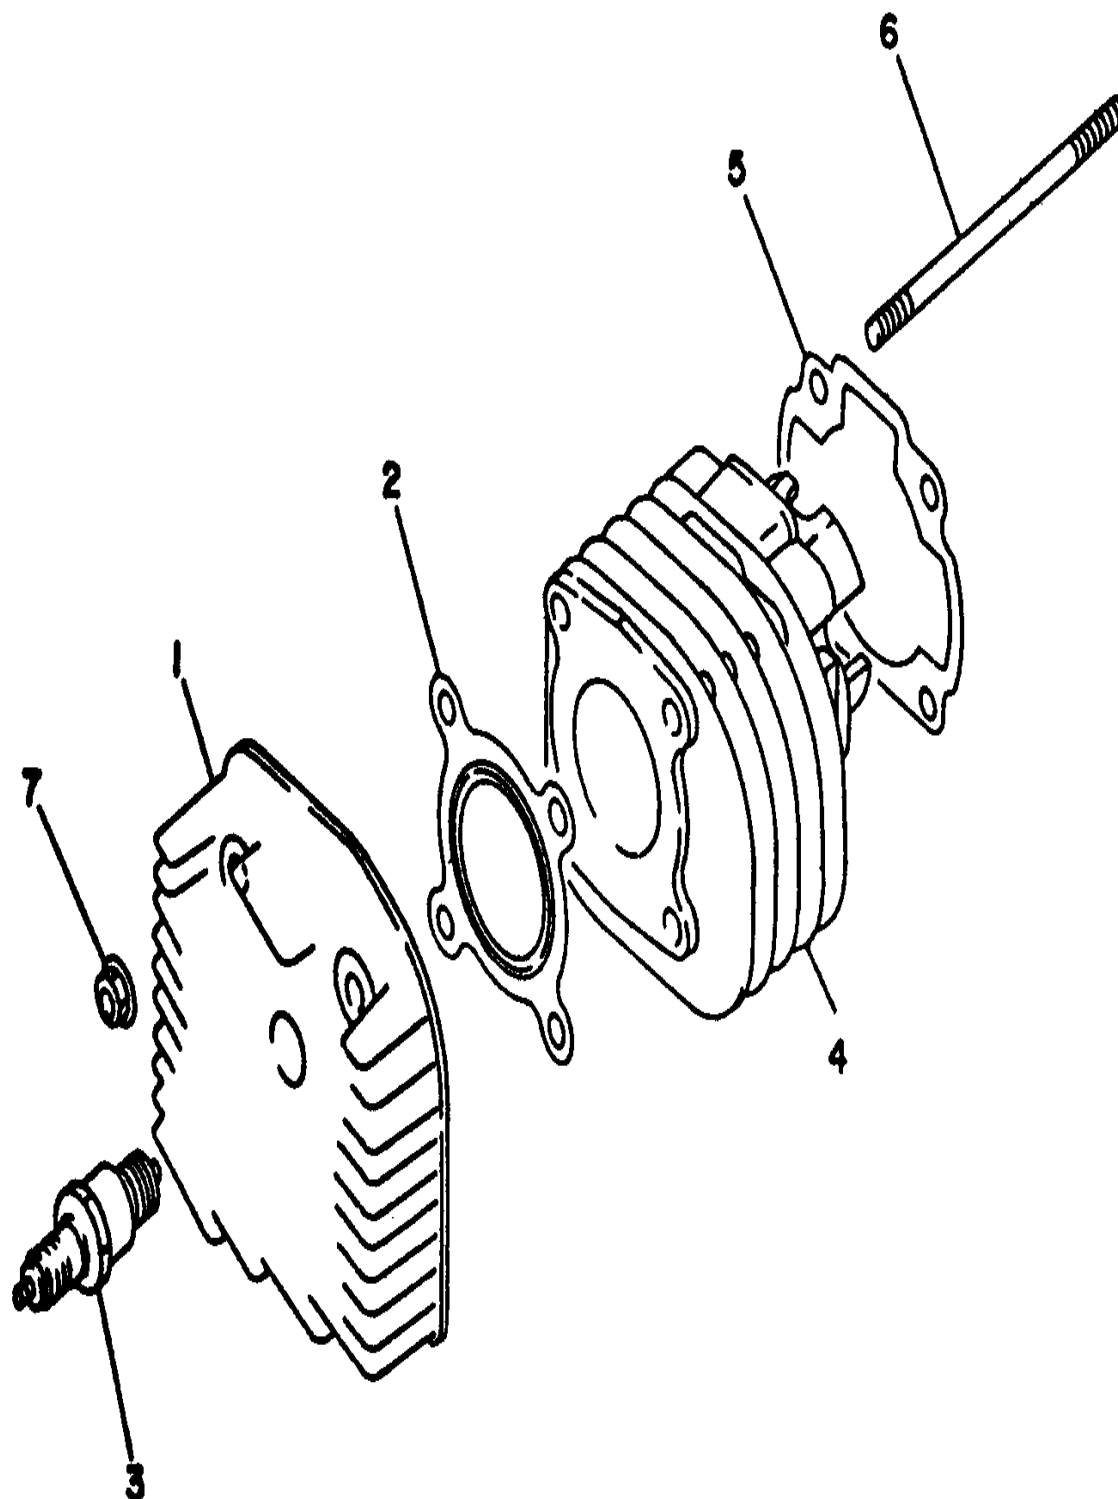


E1**CYLINDER**

ITEM	PARTS NO.	DESCRIPTION	REQD. NO.	REMARKS
			ATV 110CC	
1	61K-02511-00-00	CYLINDER HEAD	1	
2	61K-08111-00-00	CYLINDER HEAD GASKET	1	
3	61E-23111-00-00	SPARK PLUG (BR8HSA)	1	
4	61K-02400-00-00	CYLINDER	1	
5	61K-08216-00-00	CYLINDER GASKET	1	
6	61K-02422-00-00	STUD BOLT	4	M7X135
7	S-4050-07000-04	FLANGE NUT 7MM	4	

E2

PISTON CRANKSHAFT

ATV 110CC

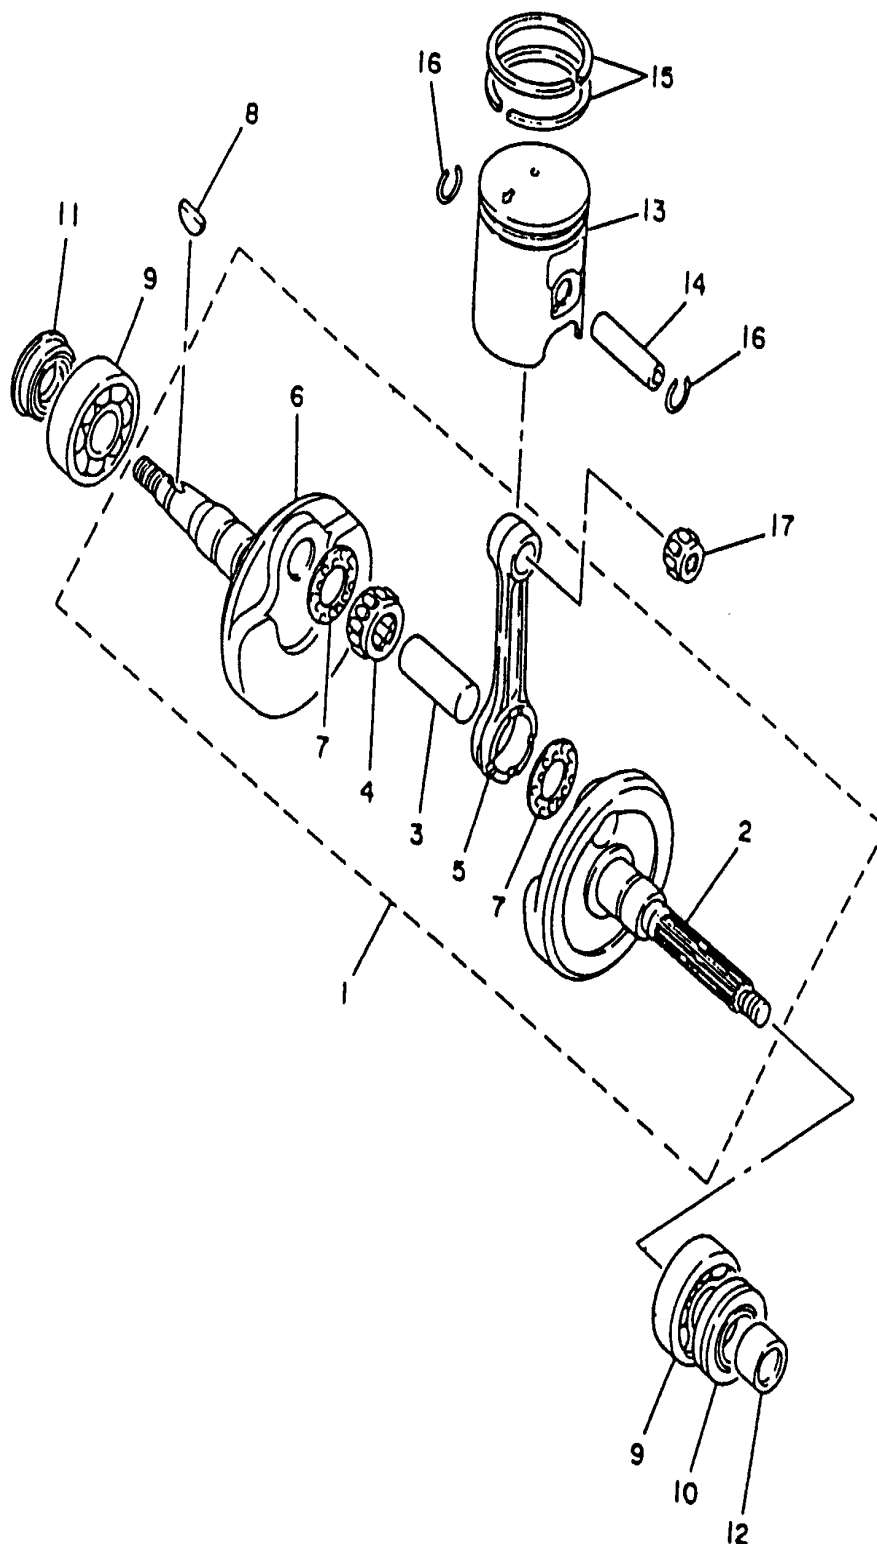


E2**CRANKSHAFT / PISTON**

ITEM	PARTS NO.	DESCRIPTION	REQD. NO.	REMARKS
			ATV 110CC	
1	61K-04100-00-00	CRANK SHAFT COMP.	1	
2	61K-04112-20-00	L. CRANK SHAFT	1	
3	61K-04131-00-00	CRANK PIN	1	
4	61K-04115-00-00	CON-ROD BIG END BRG.	1	
5	61K-04114-00-00	CONNECTING ROD	1	
6	61K-04111-20-00	R. CRANK SHAFT	1	
7	61K-04141-00-00	CONNECTING ROD WASHER	1	
8	61A-04151-00-00	WOODRUFF KEY 3X24	1	
9	S-6129-06204-00	RADIAL BALL BEARING 6204	2	
10	S-1238-20042-80	OIL SEAL 20 42/43 8/9	1	
11	61A-01113-00-00	OIL SEAL 6206	1	
12	61B-04153-00-00	STARTER COLLAR	1	
13	61K-02611-00-00	PISTON COMP.	1	
14	61K-02631-00-00	PISTON PIN	1	
15	61K-02621-00-00	PISTON RING	2	
16	S-4602-14160-00	PISTON PIN CLIP 12MM	2	
17	61K-04116-00-00	CON-ROD SMALL END BRG.	1	

E3

**FAN
AIR SHROUD**

ATV 110CC

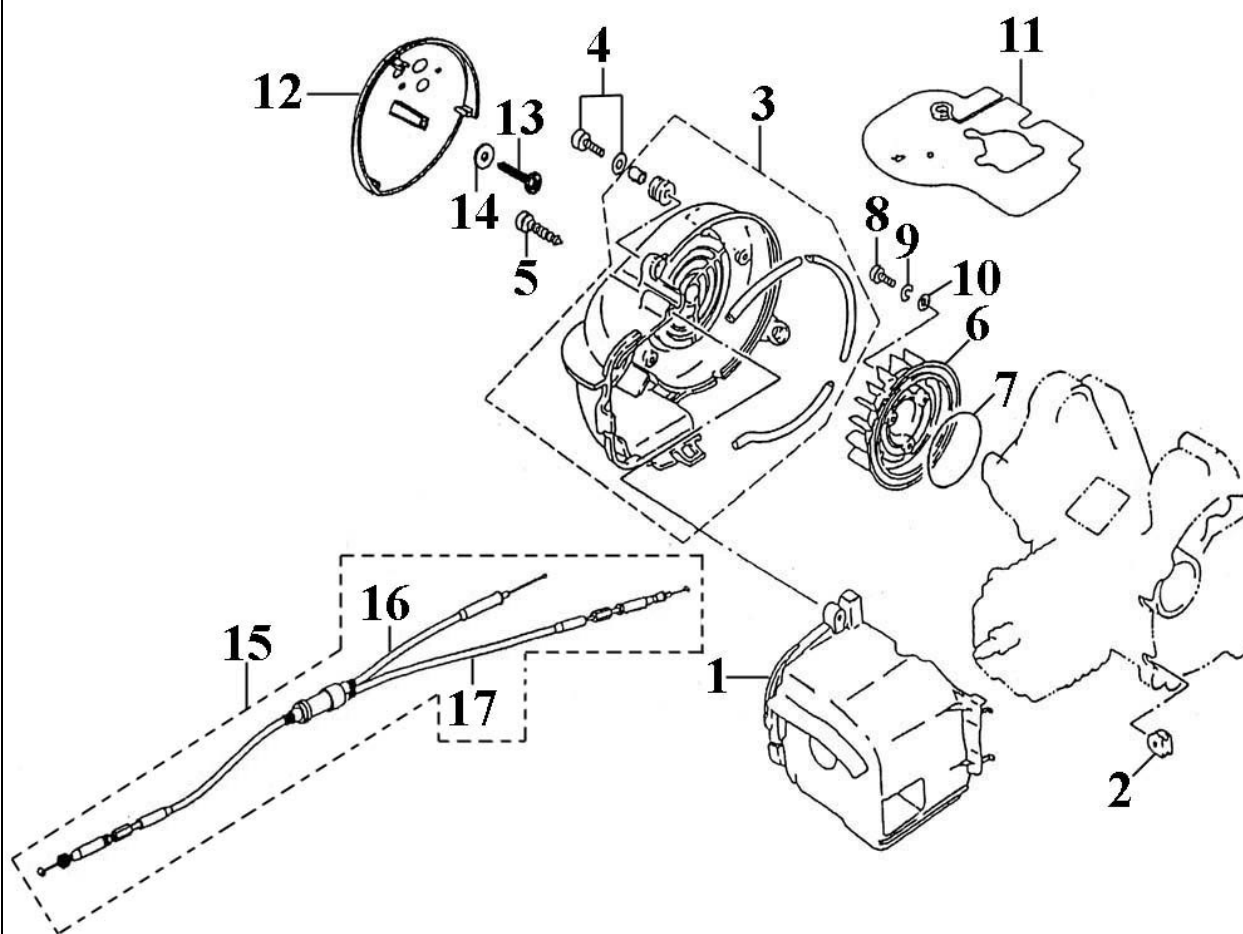


E3**AIR SHROUD / FAN**

ITEM	PARTS NO.	DESCRIPTION	REQD. NO.	REMARKS
			ATV 110CC	
1	61K-07140-00-00	SHROUD COMP.	1	
2	61A-07143-00-00	SHROUD GROMMET	2	
3	61K-07110-00-00	FAN COVER ASSY.	1	
4	S-3891-06020-04	SCREW W/WASHER 6X20	1	
5	S-3911-06040-01	TAPPING SCREW 6X40	1	
6	61K-07161-00-00	COOLING FAN COMP.	1	
7	S-1305-31644-00	O-RING 64.4X3.1	1	
8	S-3500-06016-03	PAN HEAD SCREW 6X16	3	
9	S-4111-06103-00	SPRING WASHER 6mm	3	
10	S-4101-06113-50	PLATE WASHER 6MM	3	
11	61A-07151-00-00	DEFLECTOR	1	
12	61G-07164-00-00	SHROUD	1	
13	S-3900-05020-04	TAPPING SCREW 5X20	1	
14	S-4101-05164-24	WASHER 5mm	1	
15	B11-58410-00-00	THROTTLE CABLE ASSY.	1	
16	B11-58411-00-00	THROTTLE CABLE,1	1	
17	B11-58412-00-00	THROTTLE CABLE,2	1	

E4

OIL PUMP

ATV 110CC

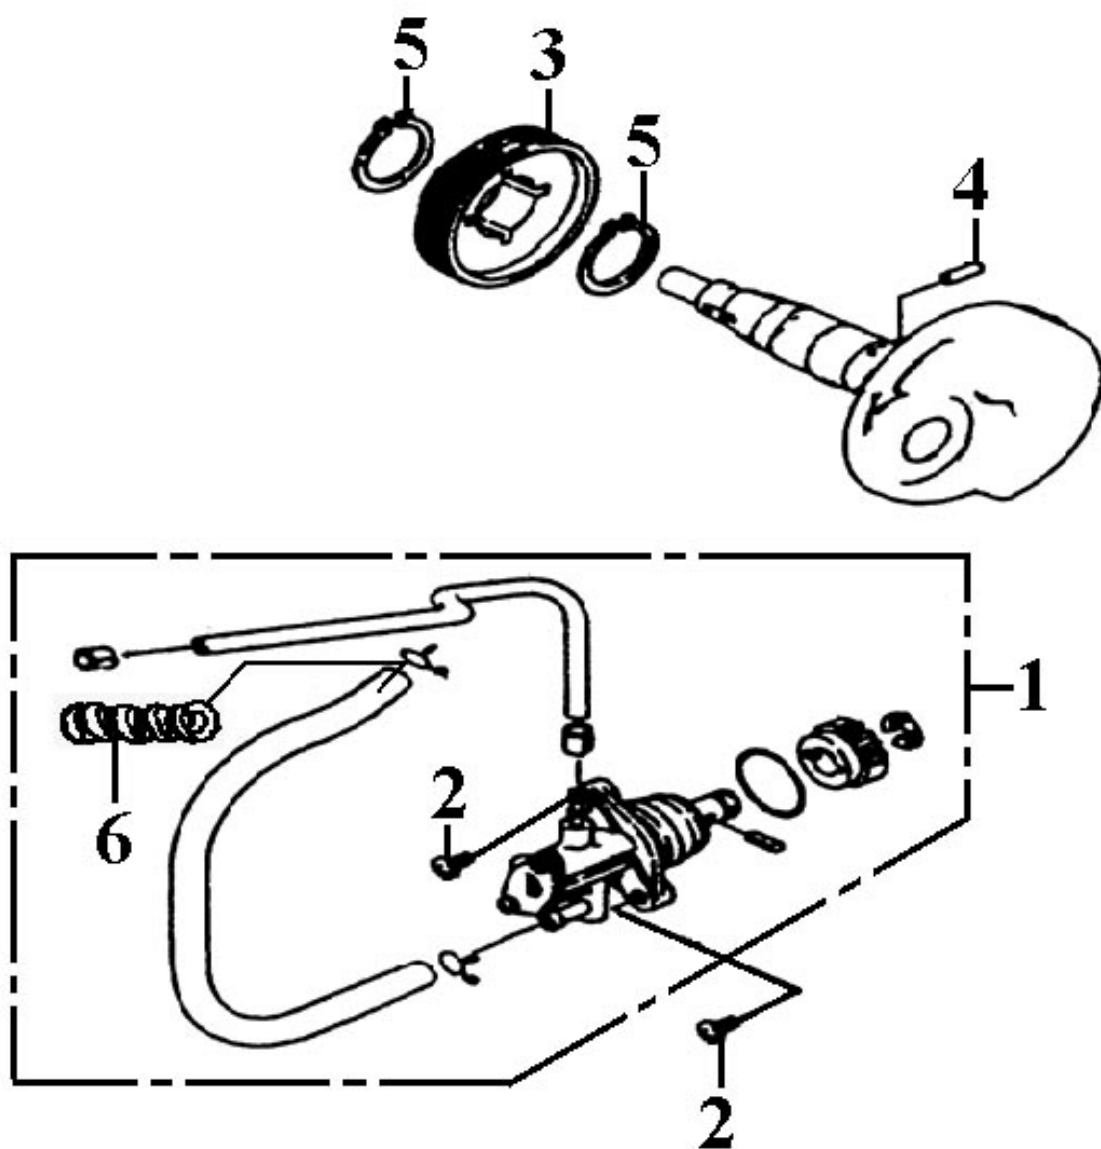


E4**OIL PUMP**

ITEM	PARTS NO.	DESCRIPTION	REQD. NO.	REMARKS
			ATV 110CC	
1	61H-05100-00-00	OIL PUMP ASSY.	1	
2	S-3500-05014-03	PAN HEAD SCREW 5X14	2	
3	61A-05211-00-00	OIL PUMP DRIVEN GEAR	1	
4	S-4302-03117-00	DOWEL PIN 3X11.7	1	
5	S-4511-12190-00	CIR-CLIP 19MM	2	
6	61A-05139-00-00	SPRING	1	

E5

INTAKE

ATV 110CC

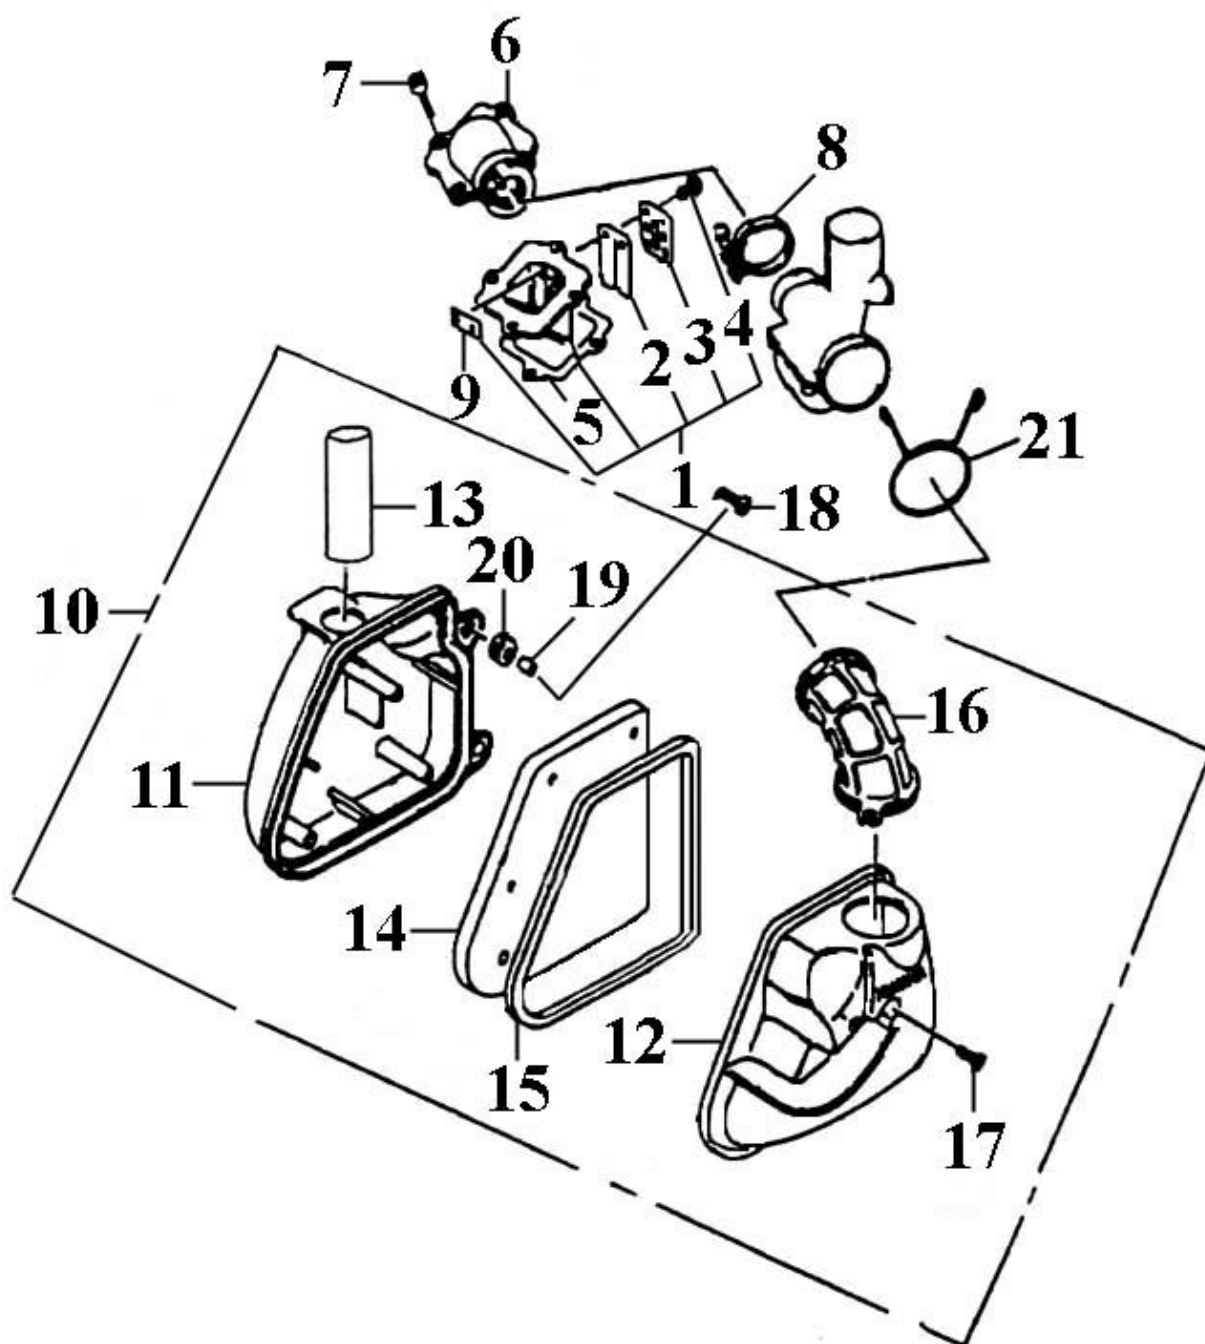


E5**INTAKE**

ITEM	PARTS NO.	DESCRIPTION	REQD. NO.	REMARKS
			ATV 110CC	
1	61B-09240-00-00	REED VALVE ASSY.	1	
2	61B-09241-00-00	REED VALVE	2	
3	61B-09246-00-00	REED VALVE STOPPER	2	
4	S-3892-03008-01	SCREW W/WASHER 3X8	4	
5	61A-08251-00-00	GASKET	1	
6	61A-09211-00-00	INTAKE MANIFOLD	1	
7	S-6700-06020-02	SOCKET BOLT 6X20	4	
8	61A-09231-00-00	HOSE CLAMP	1	
9	61A-09243-00-00	REED VALVE PLATE	2	
10	B11-09110-00-00	AIR CLEANER ASSY.	1	
11	B01-09111-00-00	AIR CLEANER CASE,1	1	
12	B01-09112-00-00	AIR CLEANER CAP,1	1	
13	B11-09113-00-00	DUCT	1	
14	B01-09114-00-00	AIR CLEANER ELEMENT	1	
15	B01-09115-00-00	SEAL	1	
16	B01-09131-00-00	AIR CLEANER JOINT,1	1	
17	S-3915-05025-02	TAPPING SCREW 5X25	3	
18	S-3891-06020-04	SCREW W/W ASHER 6X20	2	
19	B01-09186-00-00	COLLAR	2	
20	B01-09185-00-00	GROMMET	2	
21	A-4201-23425-00	CLIP 42.5MM	1	

E6


CARBURETOR

ATV 110CC

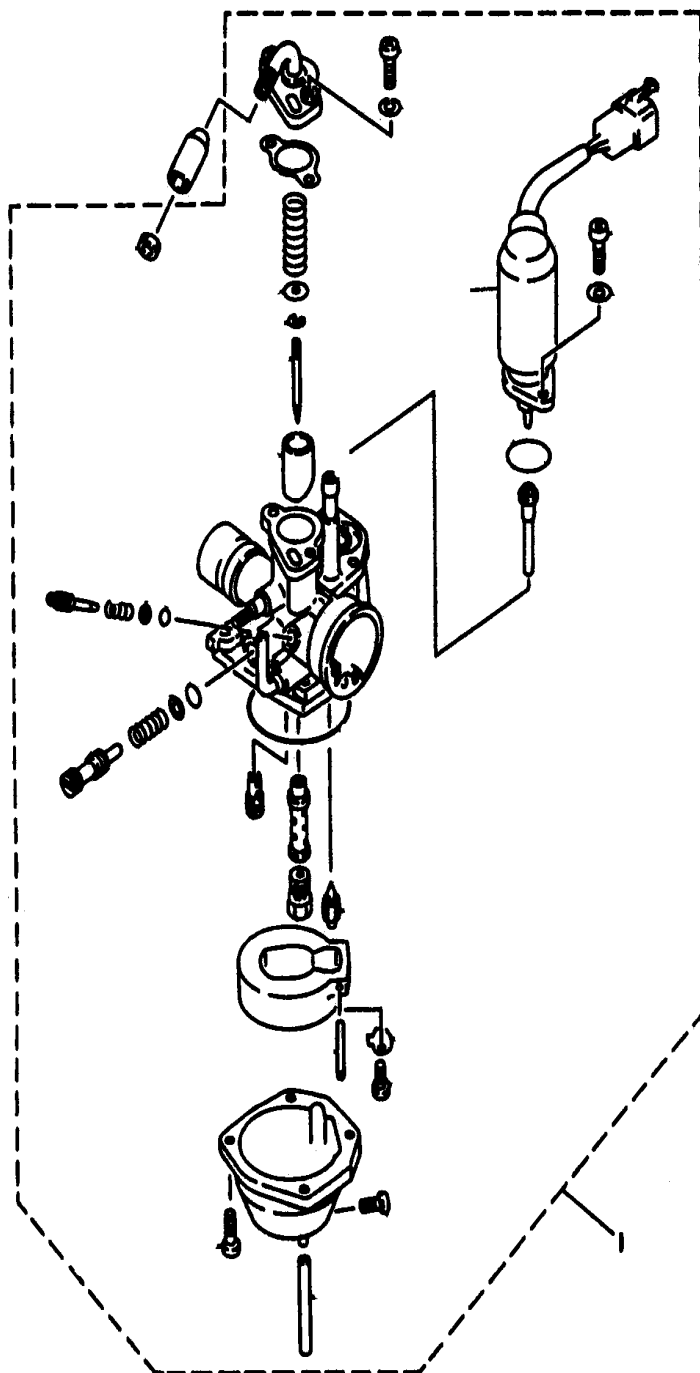


E6**CARBURETOR**

ITEM	PARTS NO.	DESCRIPTION	REQD. NO.	REMARKS
			ATV 110CC	
1	61K-09400-00-00	CARBURETOR ASSY.	1	

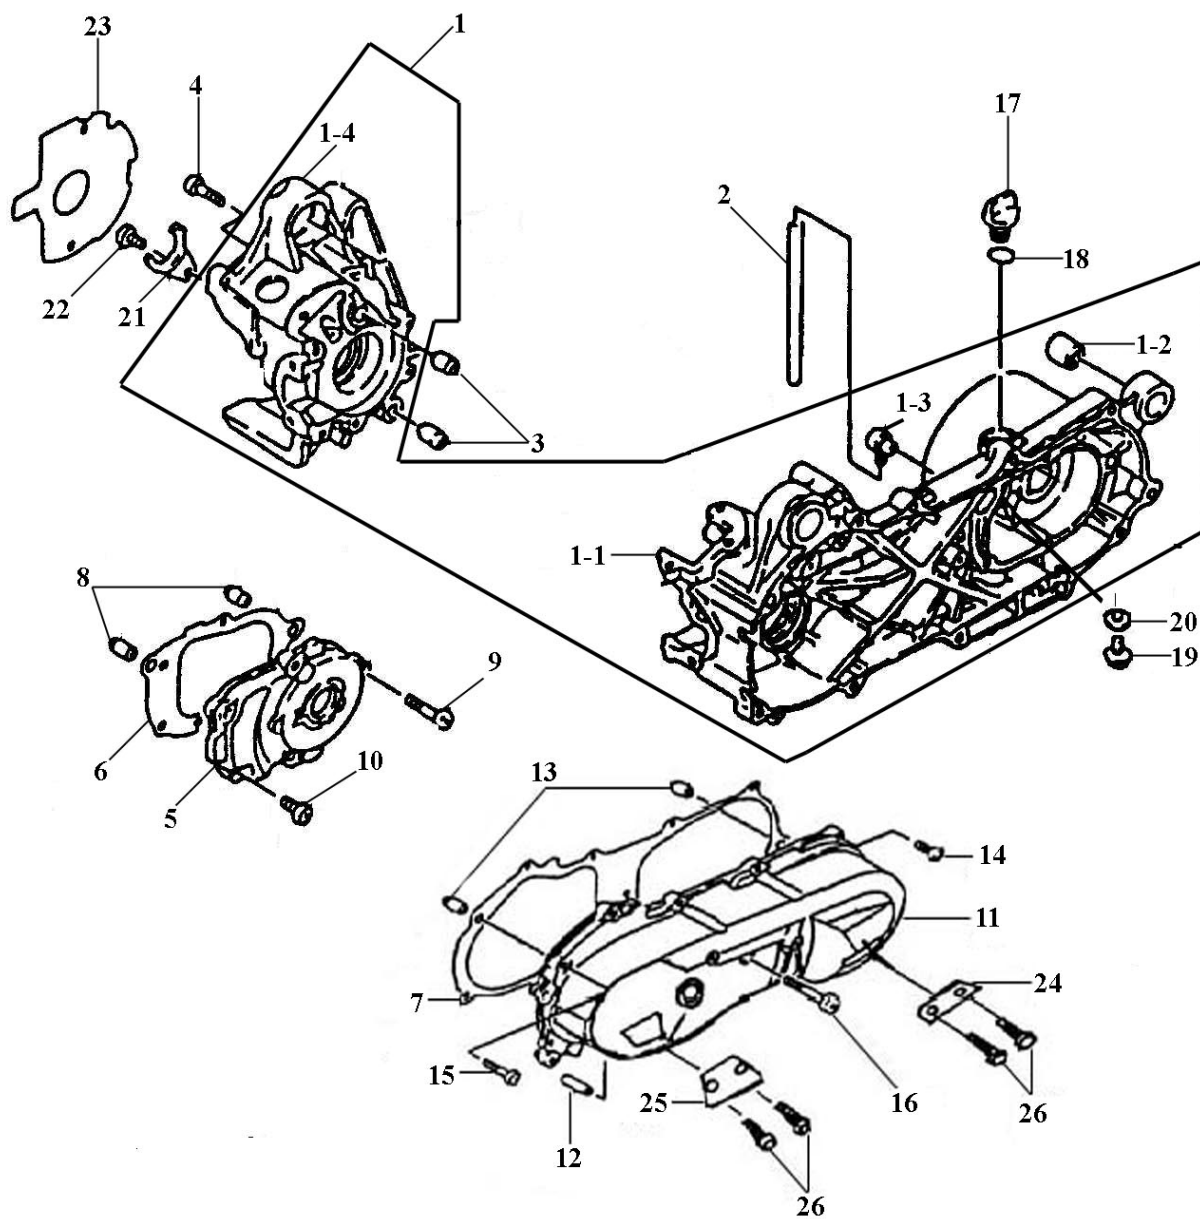E7**CRANKCASE****ATV 110CC**


E7**CRANKCASE**

ITEM	PARTS NO.	DESCRIPTION	REQD. NO.	REMARKS
			ATV 110CC	
1	61K-01000-00-00	R/L CRANK CASE ASSY.	1	
1-1	61K-01201-00-00	L. CRANK CASE	1	
1-2	61A-01223-00-00	ENG. HANGER RUB. BUSH C	1	
1-3	61A-01231-00-00	BREATHER JOINT	1	
1-4	61K-01101-00-00	R. CRANK CASE	1	
2	61A-01241-00-00	BREATHER HOSE 4X7X130	1	
3	S-4301-12160-00	DOWEL PIN 12X16	2	
4	S-3500-06035-03	PAN HEAD SCREW 6X35	6	
5	61A-01351-00-00	MISSION COVER	1	
6	61A-08244-00-00	MISSION COVER GASKET	1	
7	61B-08241-00-00	L. COVER GASKET	1	
8	S-4301-10140-00	DOWEL PIN 10X14	2	
9	S-6001-06035-01	PAN HEAD SCREW 6X35	2	
10	S-6001-06022-01	PAN HEAD SCREW 6X22	3	
11	61A-01310-00-79	L. COVER COMP.	1	
12	61A-17221-00-00	START. IDLE GEAR SHAFT	1	
13	S-4301-10140-00	DOWEL PIN 10X14	2	
14	S-6000-06025-02	PAN HEAD SCREW 6X25	8	
15	S-6001-06035-02	PAN HEAD SCREW 6X35	2	
16	S-6001-06065-02	PAN HEAD SCREW 6X65	1	
17	61A-01251-00-00	OIL PLUG	1	
18	S-1305-24138-00	O-RING 13.8X2.4	1	
19	S-5800-08012-03	SH. FLANGE BOLT 8X12	1	
20	S-4101-08143-50	WASHER 8MM	1	
21	61A-01161-00-00	OIL SEAL HOLDER	1	
22	S-3500-06012-03	PAN HEAD SCREW 6X12	1	
23	61A-08256-00-00	A.C.G. GASKET	1	
24	61A-01328-00-00	RAER BREATHER CAP	1	
25	61A-01327-00-00	FRONT BREATHER CAP	1	
26	S-3500-05010-02	PAN HEAD SCREW 5X10	4	

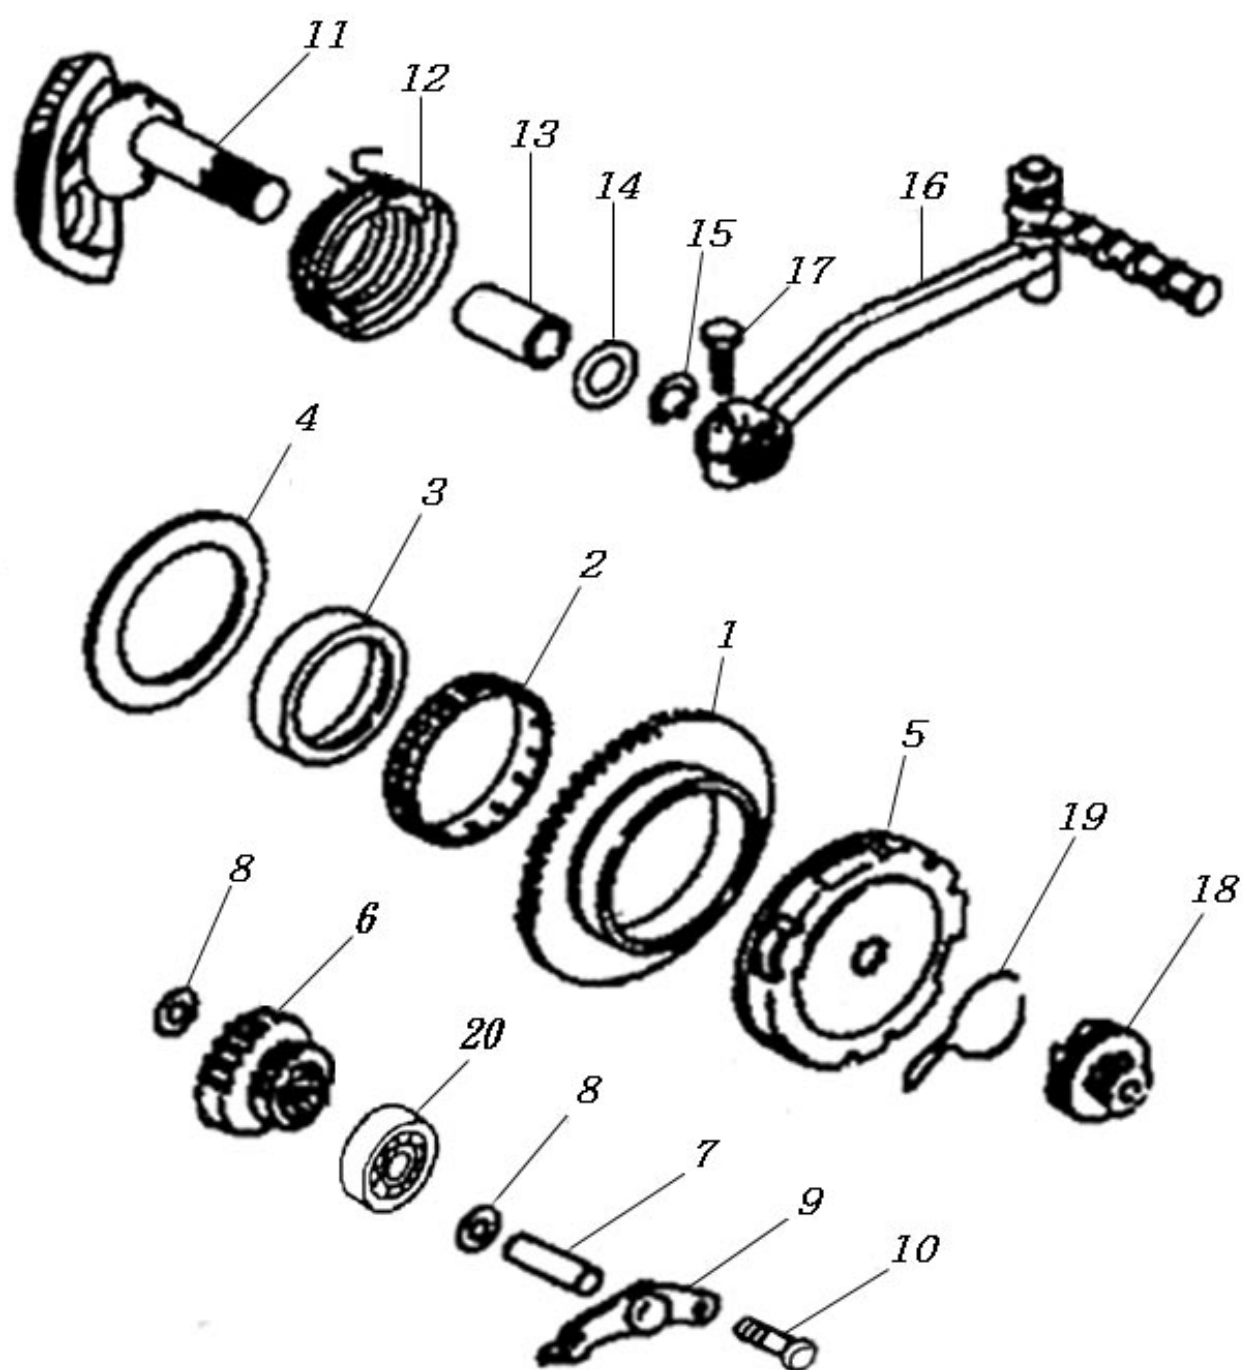E8**STARTER****ATV 110CC**

E8**STARTER**

ITEM	PARTS NO.	DESCRIPTION	REQD. NO.	REMARKS
			ATV 110CC	
1	61K-22511-00-00	STARTER CLUTCH GEAR COMP.	1	
2	61A-22423-00-00	NEEDLE BEARING 55X59X13	1	
3	61A-22521-00-00	GEAR BOSS	1	
4	61B-22434-00-00	PLATE WASHER 55MM	1	
5	61B-22410-10-00	STARTER CLUTCH OUTER ASSY.	1	塑膠改為鋼材
6	61K-22311-00-00	STARTER REDUCTION GEAR COMP.	1	
7	61A-22321-00-00	STARTER IDLE GEAR SHAFT	1	
8	S-4101-08165-24	WASHER 8MM	2	
9	61A-22341-00-00	STARTER IDLE GEAR PLATE	1	
10	S-3500-06012-03	PAN HEAD SCREW 6X12	2	
11	61A-17131-00-00	KICK START. SPINDLE COMP.	1	
12	61A-17141-00-00	KICK STARTER SPRING	1	
13	61A-17172-00-00	KICK SPINDLE BUSH	1	
14	S-4101-15283-24	PLATE WASHER 15.2X28X1	1	
15	S-4511-10150-00	CIR-CLIP 15MM	1	
16	61A-17111-00-00	KICK STARTER ARM	1	
17	S-2000-06025-01	HEX. BOLT 6X25	1	
18	61A-17211-00-00	START. IDLE GEAR COMP.	1	
19	61A-17224-00-00	START. GEAR FRICTION SPRING	1	
20	S-6130-00810-70	NEEDLE BEARING HK0810	1	

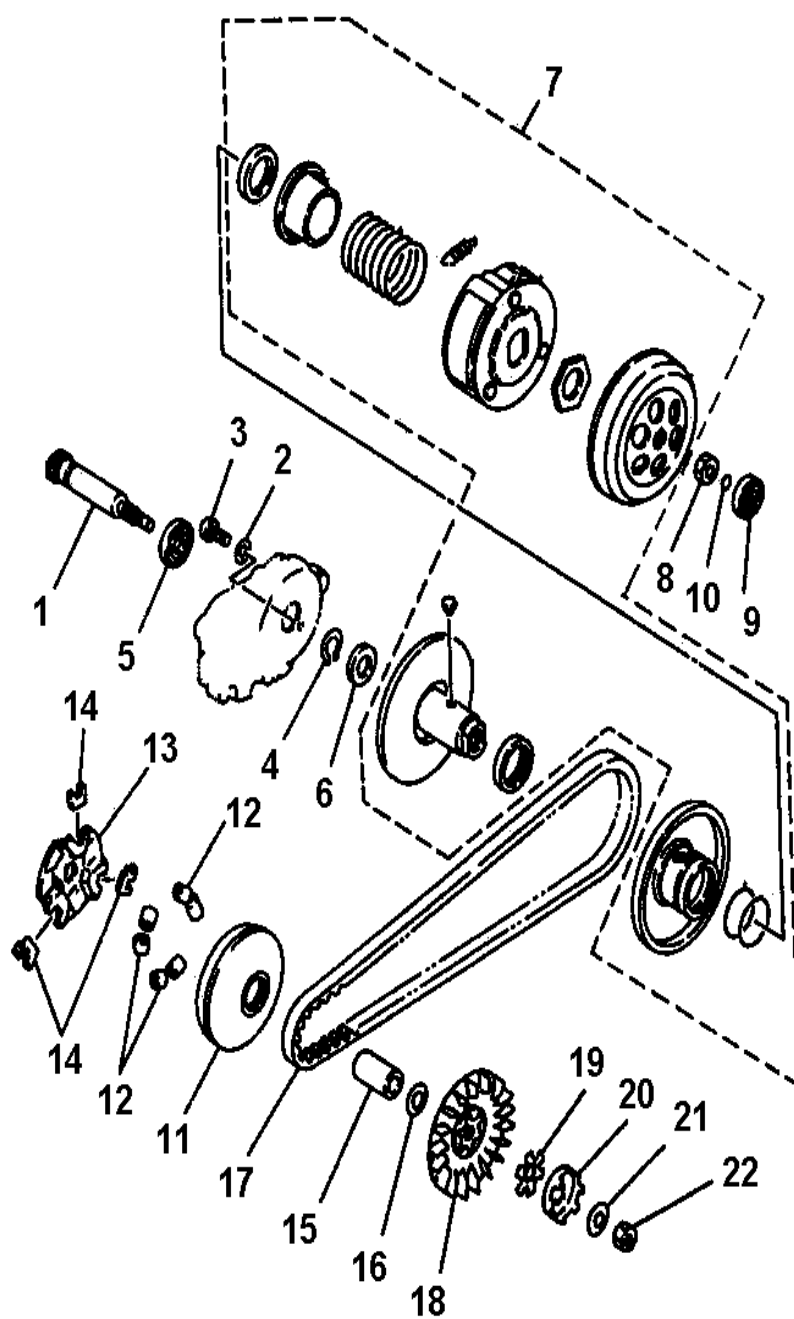

E9**CLUTCH**


ITEM	PARTS NO.	DESCRIPTION	REQD. NO.	REMARKS
			ATV 110CC	
1	61B-15111-00-00	DRIVE SHAFT	1	
2	S-4101-06193-00	PLAIN WASHER 6MM	1	
3	S-3500-06010-03	PAN HEAD SCREW 6X10	1	
4	S-4511-10170-00	CIR-CLIP 17MM	1	
5	S-6129-06003-00	RADIAL BALL BEARING 6003CS14	1	
6	S-1235-17028-55	OIL SEAL 17X28X5.5	1	
7	F02-12400-00-00	DRIVEN PULLEY ASSY.	1	
8	S-4050-10000-04	FLANGE NUT 10MM	1	
9	S-6120-00638-10	RADIAL BALL BEARING 638Z	1	
10	S-1305-31065-00	O-RING 6.5X3.1	1	
11	61B-12110-00-00	MOVABLE DRIVE FACE COMP.	1	
12	61A-12121-00-00	WEIGHT ROLLER COMP.	6	
13	61B-12123-00-00	RAMP PLATE	1	
14	61A-12124-00-00	SLIDE PIECE	3	
15	61B-12133-00-00	DRIVE FACE BOSS	1	
16	S-4101-13183-21	PLATE WASHER 13MM	1	
17	61B-12211-00-00	DRIVE BELT	1	
18	61B-12131-00-00	DRIVE FACE	1	
19	61B-12136-00-00	CLAW WASHER	1	
20	61B-17261-00-00	KICK RATCHET	1	
21	S-4102-10246-00	CONICAL SPRING WASHER 10MM	1	
22	S-4001-10000-04	HEX. NUT 10MM	1	

E10

GENERATOR

ATV 110CC

www.cpi-motorcycle.com

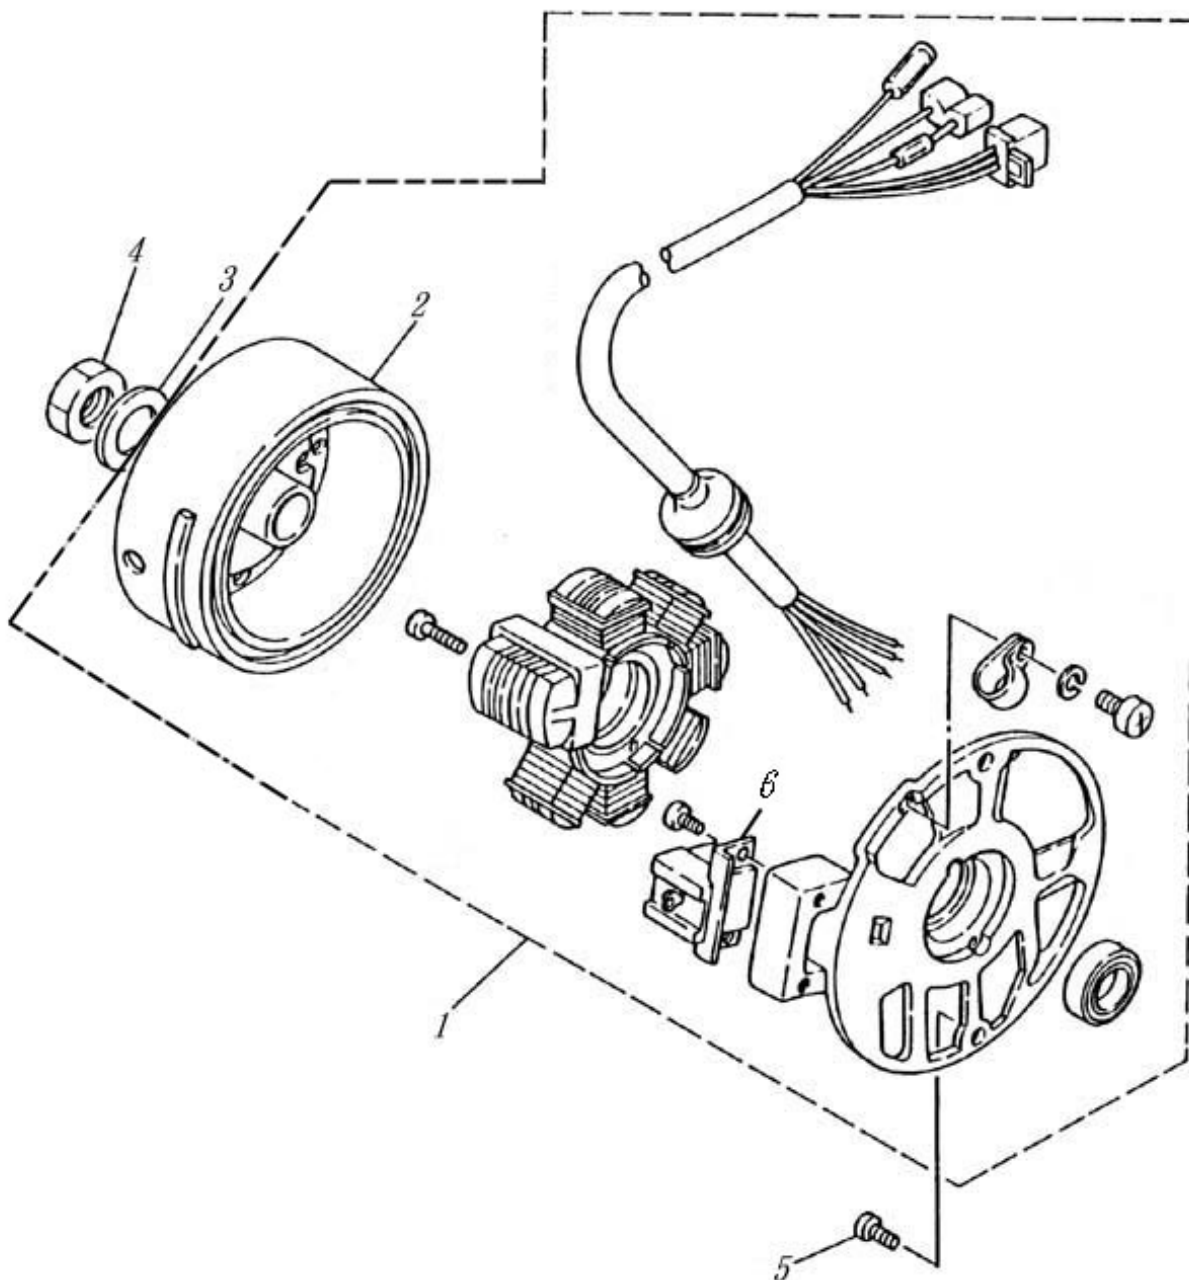


E10**GENERATOR**

ITEM	PARTS NO.	DESCRIPTION	REQD. NO.	REMARKS
			ATV 110CC	
1	61A-21100-00-00	A.C.G. ASSY.	1	
2	61A-22110-00-00	A.C.G. FLYWHEEL COMP.	1	
3	S-4101-10185-27	PLAIN WASHER 10.3X18X2	1	
4	S-4001-10000-04	HEX. NUT 10MM	1	
5	S-3500-06016-03	PAN HEAD SCREW 6X16	2	
6	61A-21131-00-00	ROTOR ASSY.	1	

E11

STARTING MOTOR

ATV 110CC

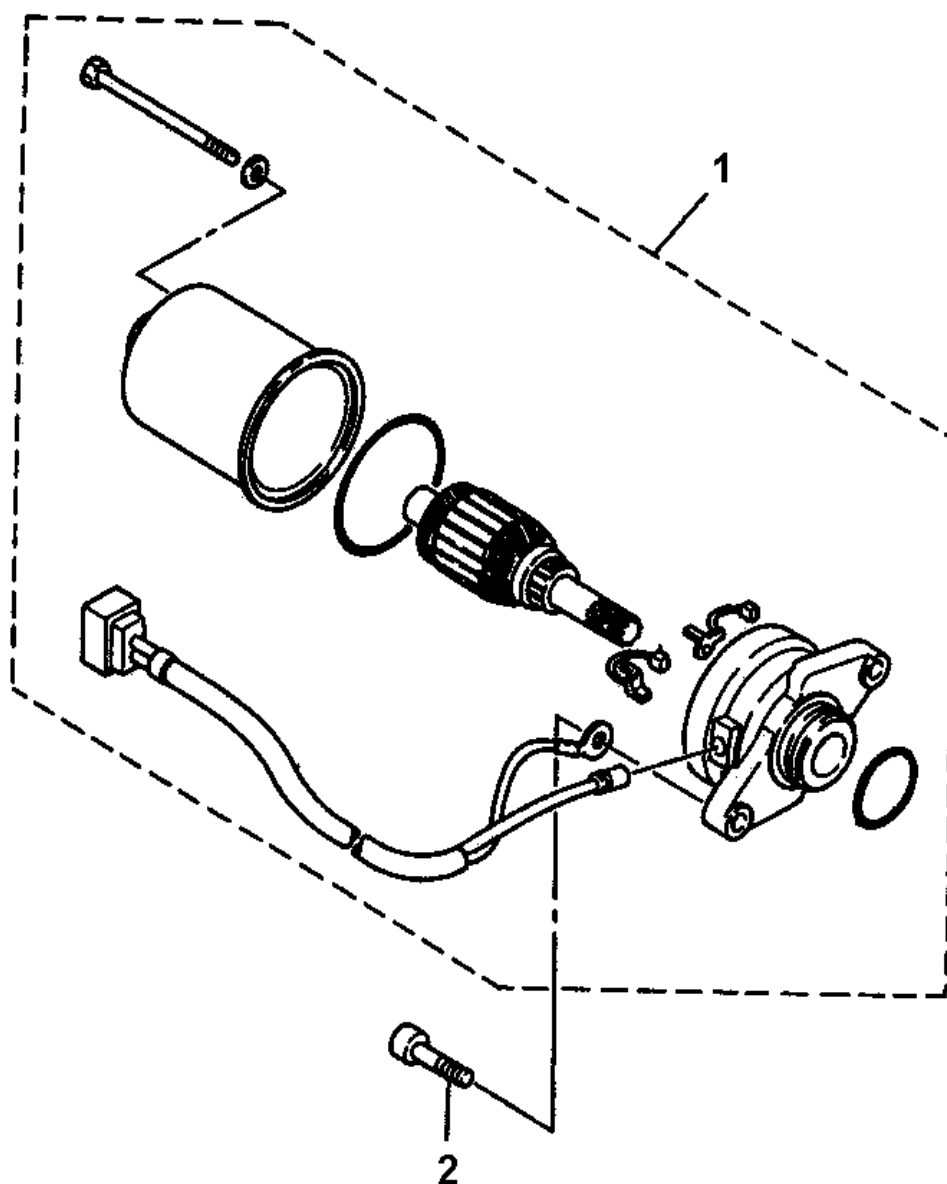


E11**STARTER MOTOR**

ITEM	PARTS NO.	DESCRIPTION	REQD. NO.	REMARKS
			ATV 110CC	
1	61K-22200-00-00	STARTER MOTOR	1	
2	S-6700-06020-02	SOCKET BOLT 6X20	2	

E12

TRANSMISSION

ATV 110CC

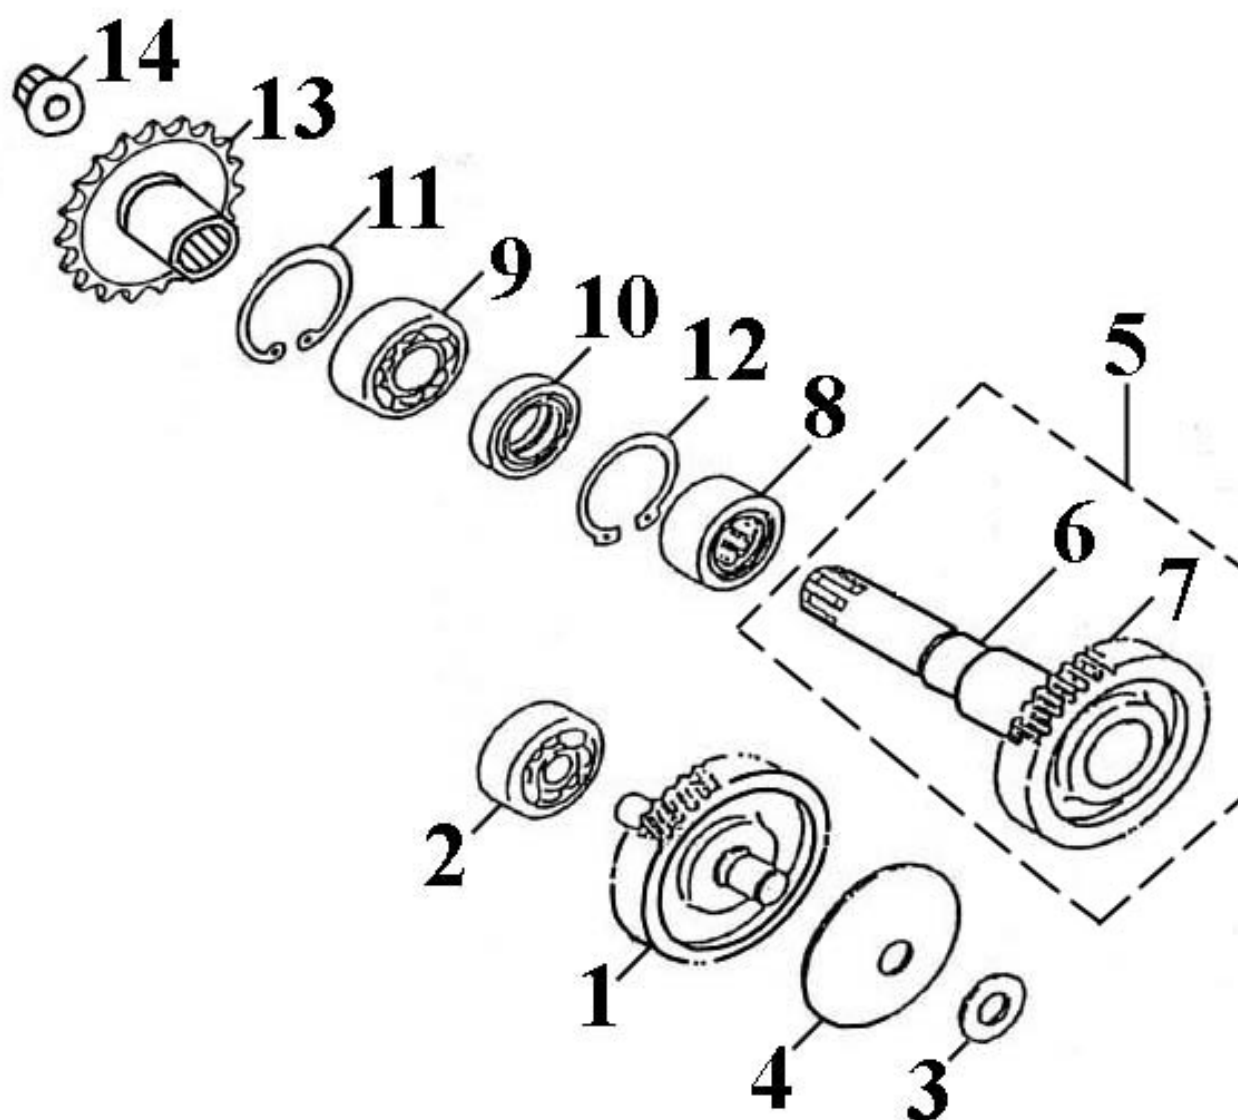


E12**TRANSMISSION**

ITEM	PARTS NO.	DESCRIPTION	REQD. NO.	REMARKS
			ATV 110CC	
1	61K-16110-00-00	COUNTER SHAFT COMP.	1	
2	S-6123-06201-00	RADIAL BALL BEARING 6201C3	1	
3	S-4101-12223-00	PLATE WASHER 12MM	1	
4	61A-16121-00-00	CONICAL SPRING WASHER 12MM	1	
5	61K-16170-00-00	FINAL SHAFT COMP.	1	
6	61B-16171-00-00	FINAL SHAFT	1	
7	61B-16172-00-00	FINAL GEAR	1	
8	S-6130-02516-00	NEEDLE BEARWG NK25/16	1	
9	S-6120-06004-40	BALL BEARING 6004LLVA/L106	1	
10	S-1201-25035-60	OIL SEAL 25X35X6	1	
11	S-4521-18420-00	CIR-CLIP 42MM	1	
12	61A-01132-00-00	CIR-CLIP 28MM	1	
13	61G-16911-00-00	DRIVE SPROCKET 19T	1	
14	S-4061-14000-01	FLANGE U NUT 14MM	1	

E13

ENGINE BRACKET

ATV 110CC

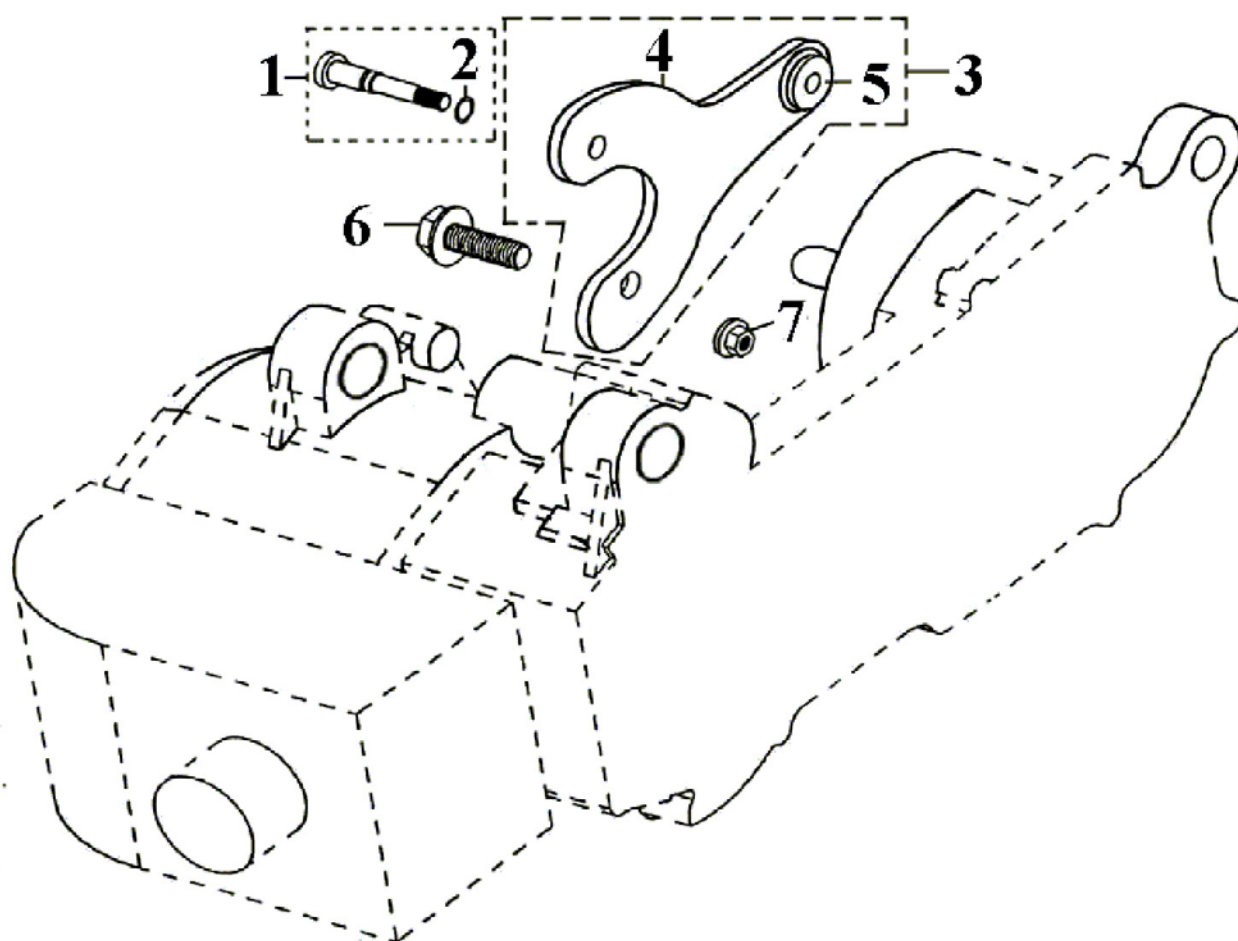

E13**ENGINE BRACKET**

ITEM	PARTS NO.	DESCRIPTION	REQD. NO.	REMARKS
			ATV 110CC	
1	61G-01261-00-00	BRAKE SHOE ANCHOR PIN	1	
2	S-4061-12000-03	FLANGE U NUT 12MM	1	
3	61G-01271-00-00	ENGINE BRACKET	1	
4	61A-01223-00-00	ENG. HANGER RUB. BUSH	1	
5	S-1305-19068-00	O-RING	1	
6	S-5800-12040-02	FLANGE BOLT 12X40	1	
7	S-4061-12000-03	FLANGE U NUT 12MM	1	